

DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the page given.

* : ●...MIL light up

DTC No. (See Page)	Detection Item	Trouble Area	MIL *	Memory
P0500 (DI-179)	Vehicle Speed Sensor Malfunction (No.1 Vehicle Speed Sensor)	• Open or short in No.1 vehicle speed sensor circuit • No.1 vehicle speed sensor • ECM	●	○
P0710 (DI-181)	Transmission Fluid Temperature Sensor Malfunction (ATF Temperature Sensor)	• Open or short in ATF temperature sensor circuit • ATF temperature sensor • ECM	●	○
P0715 (DI-183)	Input/Turbine Speed Sensor Circuit Malfunction (O/D Direct Clutch Speed Sensor)	• Open or short in O/D direct clutch speed sensor circuit • O/D direct clutch speed sensor • ECM • Automatic transmission assembly	●	○
P0750 (DI-186)	Shift Solenoid A Malfunction (Shift Solenoid Valve No.1)	• Shift solenoid valve No.1 is stuck open or closed • Valve body is blocked up or stuck	●	○
P0753 (DI-188)	Shift Solenoid A Electrical Malfunction (Shift Solenoid Valve No.1)	• Open or short in shift solenoid valve No.1 circuit • Shift solenoid valve No.1 • ECM	●	○
P0755 (DI-186)	Shift Solenoid B Malfunction (Shift Solenoid Valve No.2)	• Shift solenoid valve No.2 is stuck open or closed • Valve body is blocked up or stuck	●	○
P0758 (DI-188)	Shift Solenoid B Electrical Malfunction (Shift Solenoid Valve No.2)	• Open or short in shift solenoid valve No.2 circuit • Shift solenoid valve No.2 • ECM	●	○
P0770 (DI-192)	Shift Solenoid E Malfunction (Shift Solenoid Valve SL)	• Shift solenoid valve SL is stuck open or closed • Valve body is blocked up or stuck • Lock-up clutch	●	○
P0773 (DI-194)	Shift Solenoid E Electrical Malfunction (Shift Solenoid Valve SL)	• Open or short in shift solenoid valve SL circuit • Shift solenoid valve SL • ECM	●	○
P1520 (DI-197)	Stop Light Switch Signal Malfunction	• Short in stop light switch signal circuit • Stop Light Switch • ECM	●	○
P1700 (DI-201)	Vehicle Speed Sensor No.2 Malfunction (No.2 Vehicle Speed Sensor)	• Open or short in No.2 vehicle speed sensor circuit • No.2 vehicle speed sensor • ECM	●	○
P01760 (DI-204)	Linear Solenoid for Line Pressure Control Circuit Malfunction (Shift Solenoid Valve SLT)	• Open or short in shift solenoid valve SLT circuit • Shift solenoid valve SLT • ECM	●	○
P1780 (DI-207)	Park/Neutral Position Switch Malfunction	• Short in park/neutral position switch circuit • Park/neutral position switch • ECM	●	○
P1782 (DI-211)	Transfer L4 Switch Malfunction	• Short in transfer indicator switch (LOW switch) signal circuit • Indicator switch (LOW switch) • ECM	●	○
P1783 (DI-214)	Transfer Neutral Switch Malfunction	• Short in transfer indicator switch (neutral switch) signal circuit • Indicator switch (neutral switch) • ECM	●	○