

AUTOMATIC TRANSMISSION

HOW TO PROCEED WITH TROUBLESHOOTING

DI3EC-01

Items inside **▮** are titles of pages in this manual, with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

