


Door lock motor and relay circuit

WIRING DIAGRAM

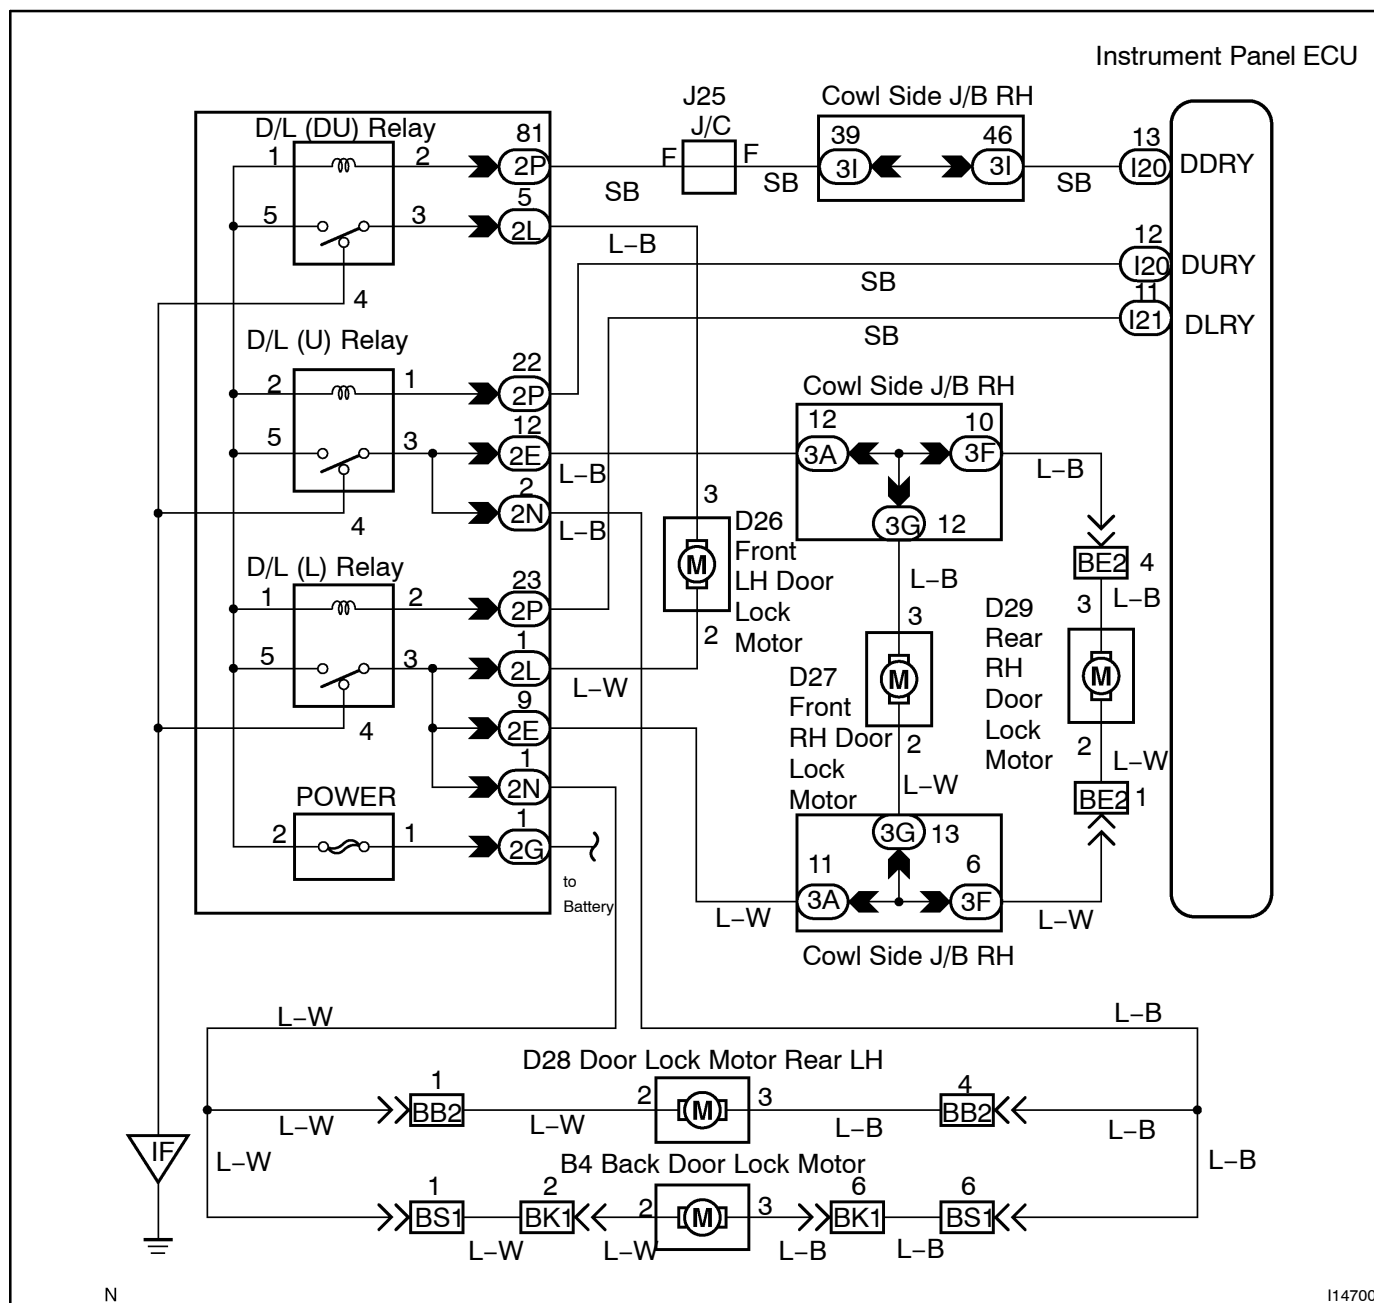

INSPECTION PROCEDURE

1 Check door lock relay (See page [BE-120](#)).

NG

Replace the door lock relay.

OK

2 Check door lock motor (See page [BE-120](#)).

NG

Replace the door lock motor.

OK

3 Check wireharness and connector between door lock motor and body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-766](#)).