

Body ECU judges the switch position with the terminal voltage of the wiper and washer switch and runs the wiper motor.

Instrument Panel ECU

Rear Wiper and Washer SW

	10	13
WASH	WR +1RC1R EW	
OFF		
INT		
ON		
WASH		

W

W-B

Washer Motor

Engine Room J/B

Cowl Side J/B LH

IG1 No.1 Relay

AM1 No.1

AM1 No.2

FL Block

Battery

Ignition Switch

Instrument Panel ECU

107479

INSPECTION PROCEDURE

1	Check rear wiper and washer switch (See page BE-66).
----------	---

NG**Replace the rear wiper and washer switch.****OK**

2	Check wireharness and connector between rear wiper and washer switch and Body ECU.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-766](#)).**