


Taillight relay circuit

CIRCUIT DESCRIPTION

Taillight relay will be "ON" by operating the taillight switch. The transistor which activates the tail light relay has two sorts: one activates by the tail light switch for fail safe and the other activates by CPU.

WIRING DIAGRAM

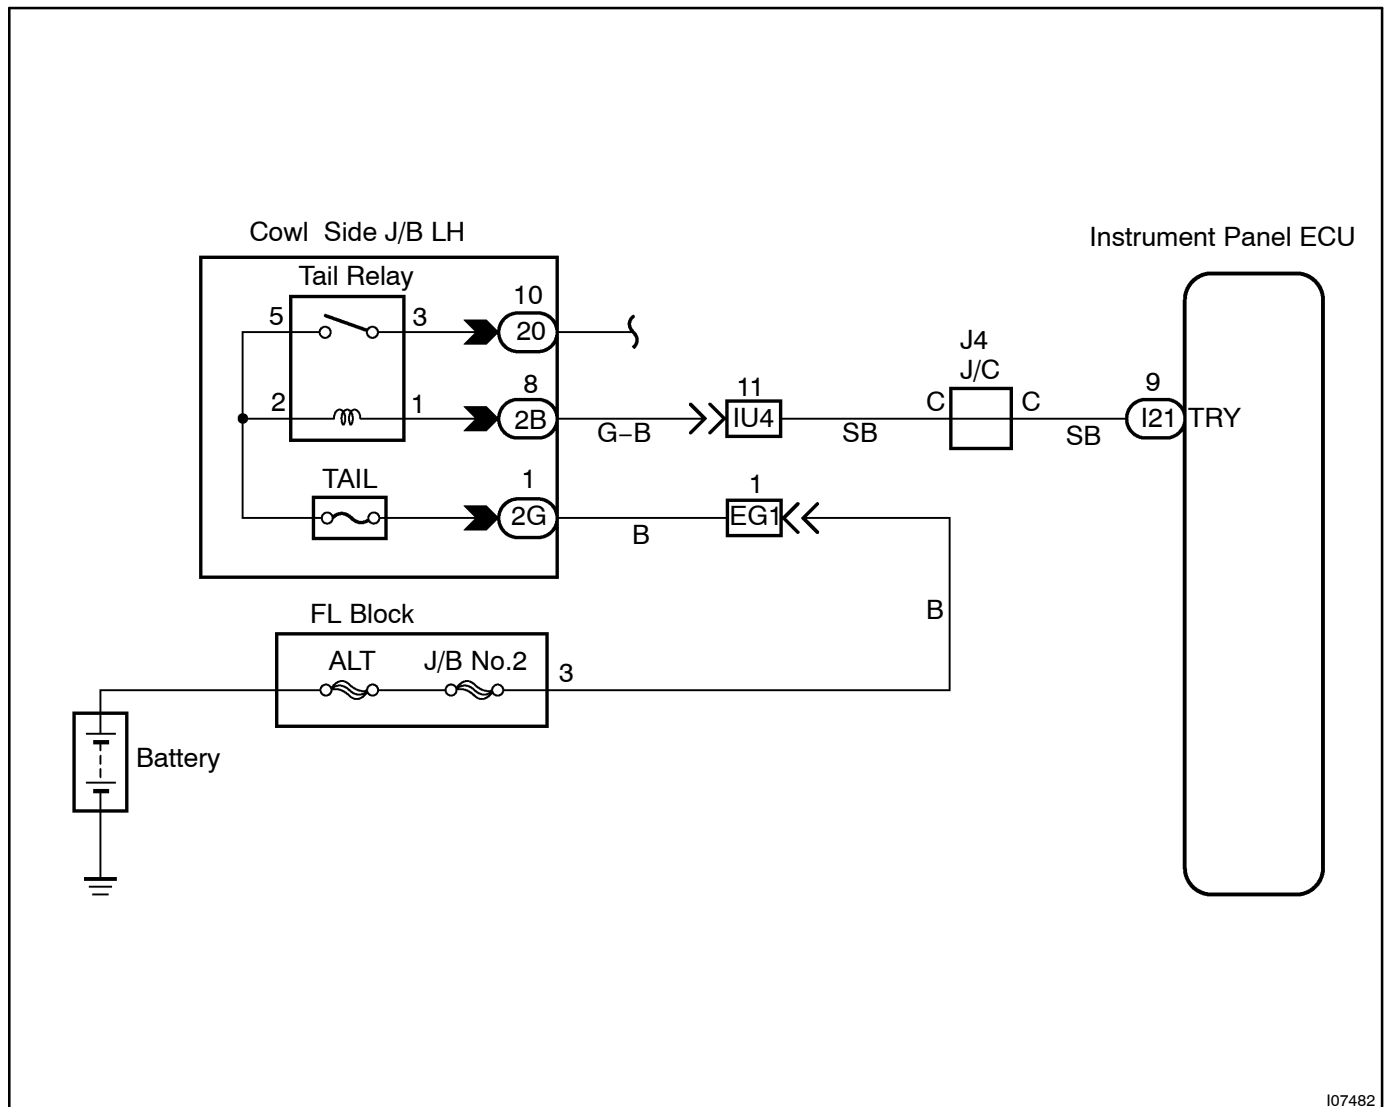

I07482

INSPECTION PROCEDURE

1	Check taillight relay (See page BE-32).
---	--

NG	Replace the taillight relay.
----	------------------------------

OK

2	Check wireharness and connector between taillight relay and Body ECU, battery and taillight relay.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-766](#)).