

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	16.Starter 17.Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. Engine immobilizer system 2. ECM power source circuit 3. Fuel pump control circuit 4. Fuel pump inertia switch	DI-754 DI-151 DI-128 SF-32
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-128
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-148 DI-128 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-148 DI-128
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-148 DI-128
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-956 DI-151
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-956 DI-128
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-128
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-151 DI-128
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-128 DI-173
Surging (Poor driveability)	1. Fuel pump control circuit	DI-128
Soon after starting (Engine stall)	1. Engine immobilizer system 2. Fuel pump control circuit	DI-754 DI-128
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	DI-956 IN-24