

16. Touch switch does not function. (A/C control screen only)

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Display check mode (Touch switch, Touch point screen). |
|---|--|

NG

Replace the multi-display.

OK

- | | |
|---|---|
| 2 | Check "AVC-LAN communication circuit". (See page DI-932) |
|---|---|

NG

Replace or repair AVC-LAN circuit.

OK

- | | |
|---|---|
| 3 | Check wire harness between gateway ECU and A/C amplifier (Center ECU) (See page IN-34) |
|---|---|

NG

Reapair or replace wire harness and connector

OK

Check and replace A/C amplifier (Center ECU).