

38. No power coming, but woofer amplifier not operating.**INSPECTION PROCEDURE**

1 Is tape player operating normally?

Yes

Radio receiver assembly faulty.

No

2 Check if CIGER No. 2 fuse is OK?

NG

Replace fuse.

OK

3 Is power supplied to ACC terminal of stereo component amplifier?

No

ACC wire harness faulty.

YES

4 Check if RADIO fuse is OK?

NG

Replace fuse.

OK

5	Is power supplied to +B terminal of stereo component amplifier?
----------	--

No

+B wire harness faulty.

YES

6	Check if GND (wire harness side) of radio receiver assembly grounded normally.
----------	---

NG

GND faulty.

OK

7	Is power supplied to ACC terminal of radio receiver assembly?
----------	--

No

Stereo component amplifier faulty.

YES

8	Is power supplied to +B terminal of radio receiver assembly?
----------	---

No

Stereo component amplifier faulty.

YES

9	Check if GND (wire harness side) of radio receiver assembly grounded normally.
----------	---

NG

GND faulty.

OK

10	Does continuity exist in speaker wire harness?
----	--

No	Speaker wire harness faulty.
----	------------------------------

YES

11	Temporarily install another speaker. Functions OK?
----	--

Yes	Speaker faulty.
-----	-----------------

No

12	Hiss noise from speaker?
----	--------------------------

No	Stereo component amplifier faulty. Recheck system after repair.
----	--

YES

Radio receiver assembly faulty. Recheck system after repair.	
--	--