


## PARTS LOCATION

Driving Position Memory and Return Switch

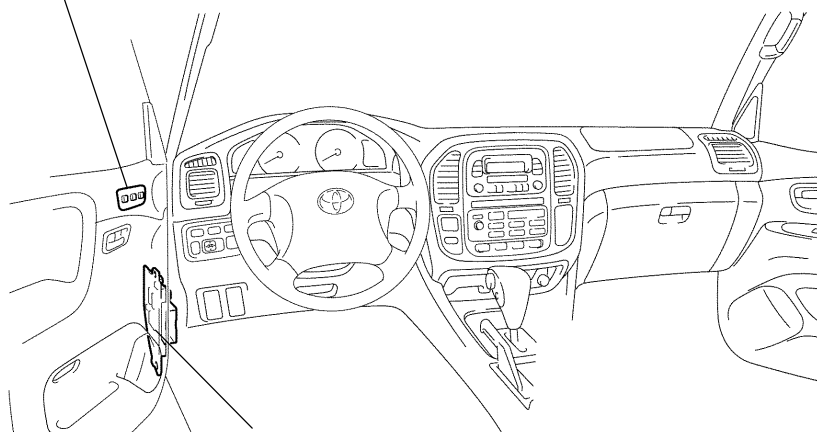

Driver Side Junction Block

- POWER Fuse
- ECU-B Fuse
- ECU-IG Fuse

Driver's Seat

