


DTC	B2620	ECU Power Source Circuit Malfunction
------------	--------------	---

CIRCUIT DESCRIPTION

ECU power source circuit supply the battery positive voltage to tilt and telescopic ECU.

DTC No. (See Page)	Detection Item	Trouble Area
B2620	The condition that the voltage of the ECU Power Source circuit drop to be 8V or less continues for 10 seconds or more	• Battery • ECU power source circuit • Tilt and telescopic ECU

WIRING DIAGRAM

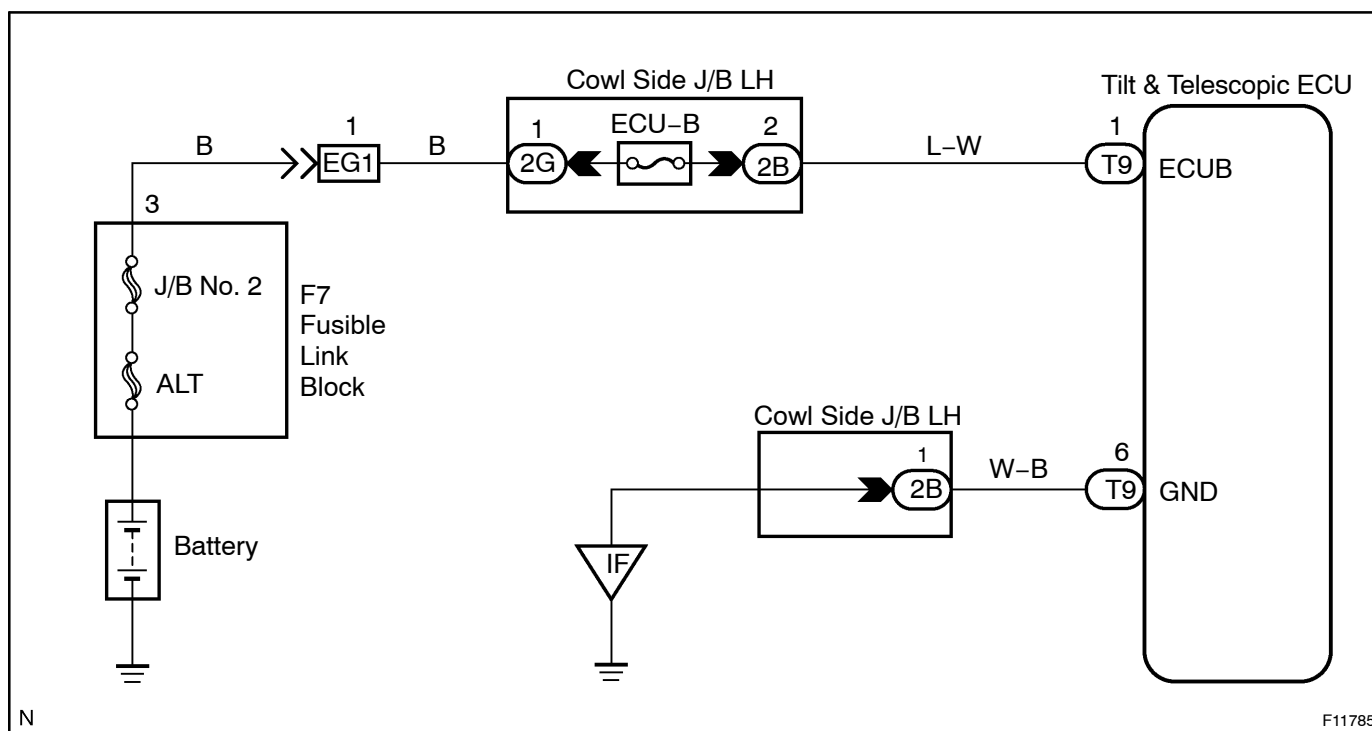

N

F11785

INSPECTION PROCEDURE

1	Check that the battery positive voltage is 11V or more when engine is stopped.
----------	---

NG	Charge or replace battery.
-----------	-----------------------------------

OK

2	Check ECU power source circuit. (See page DI-493)
----------	--

NG	Repair or replace malfunction part.
-----------	--

OK

Check and replace the tilt and telescopic ECU (See pge IN-34).
