


Speed Sensor Circuit

CIRCUIT DESCRIPTION


If a speed of 3 km/h or more is detected in this circuit, auto-controlled operation will be stopped.

WIRING DIAGRAM

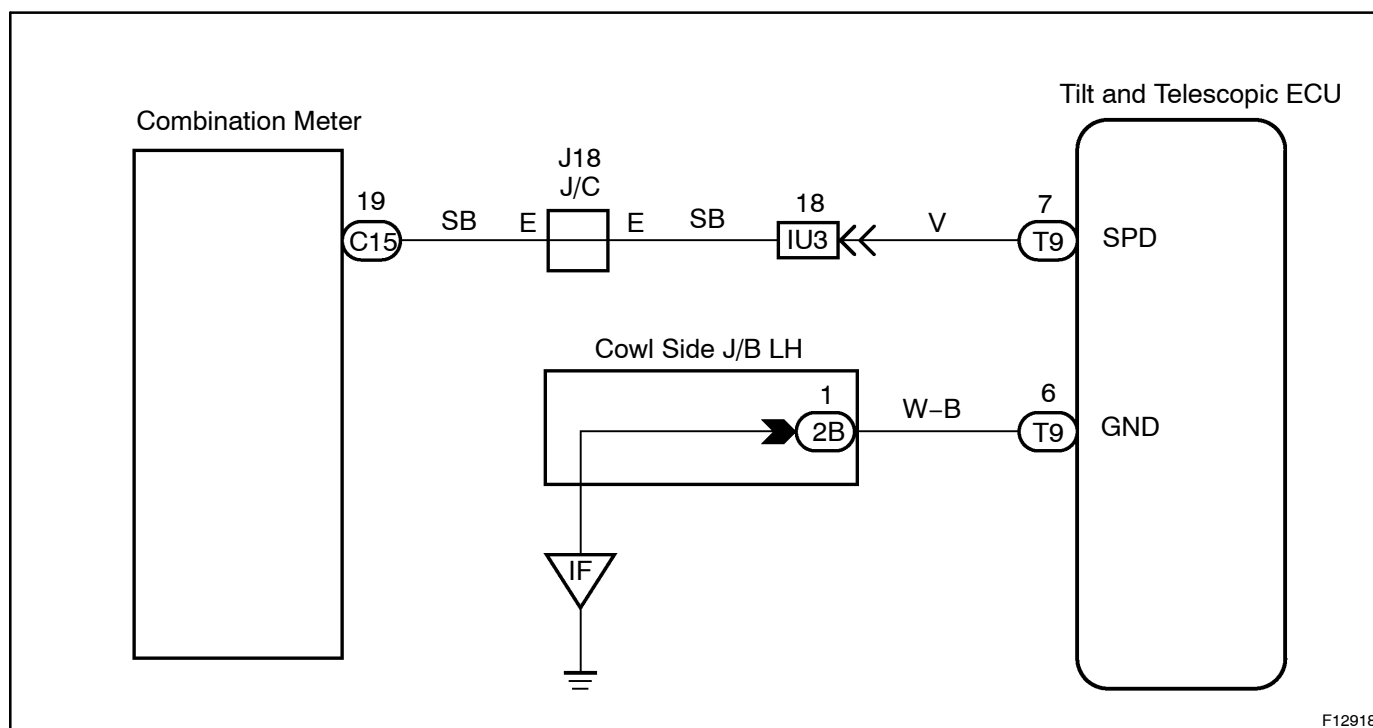

CIRCUIT INSPECTION

- | | |
|----------|--|
| 1 | Check voltage between terminals SPD and GND of ECU connector. |
|----------|--|

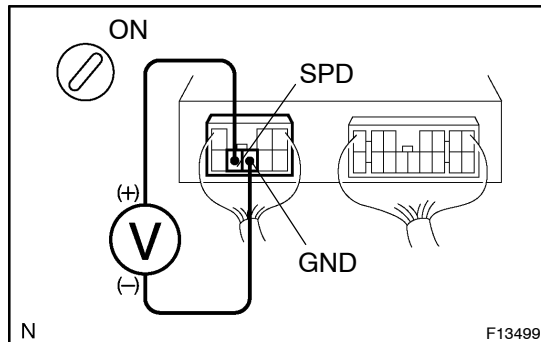**PREPARATION:**

Remove the ECU with connectors still connected.

CHECK:

Turn the ignition switch ON and measure the voltage between terminals SPD and GND of ECU connector.

OK:

Voltage: below 1.5 V or 8–16 V

OK

Check and replace the tilt and telescopic ECU (See page [IN-34](#)).

NG

- | | |
|----------|--|
| 2 | Check for open or short circuit in harness between terminals combination meter and SPD of ECU connector (See page IN-34). |
|----------|--|

NG

Repair or replace harness or connector.

OK

Check the combination meter (See page [BE-79](#)).