

PROBLEM SYMPTOMS TABLE

This system uses the multiplex communication system, so check diagnosis system of the multiplex communication system before you proceed with troubleshooting.

The table below will be useful for you in troubleshooting these electrical systems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

If the instruction "Proceed to next circuit inspection shown on the chart" is given in the flow chart for each circuit, proceed to the circuit with the next highest number in the table to continue the check.

If the problem still occurs even though there are no abnormalities in any of the other circuits, then check and replace ECU.

Symptom	Suspect Area	See page
Both tilt and telescopic: Manual, auto away/return and memory functions - Do not operate - Stop part way - Do not stop	1. Multiplex communication system 2. ECU power source circuit 3. Key unlock warning switch 4. BODY ECU 5. Actuator power source circuit 6. Sensor power source circuit 7. Tilt motor circuit 8. Telescopic motor circuit 9. Tilt and telescopic ECU 10. Speed sensor circuit (Excluding manual)	DI-808 DI-493 BE-26 DI-474 DI-496 DI-498 DI-500 DI-503 IN-34 DI-509
Tilt only: Manual, auto away/return and memory functions - Do not operate - Stop part way - Do not stop	1. Multiplex communication system 2. Sensor power source circuit 3. Tilt motor circuit 4. Tilt and telescopic ECU 5. Speed sensor circuit (Excluding manual)	DI-808 DI-498 DI-500 IN-34 DI-509
Telescopic only: Manual, auto away/return and memory functions - Do not operate - Stop part way - Do not stop	1. Multiplex communication system 2. Sensor power source circuit 3. Telescopic motor circuit 4. Tilt and telescopic ECU 5. Speed sensor circuit (Excluding manual)	DI-808 DI-498 DI-503 IN-34 DI-509
Both tilt and telescopic: Only tilt and telescopic manual switch function does not operate	1. Multiplex communication system 2. Tilt and telescopic manual switch circuit 3. Tilt motor circuit 4. Telescopic motor circuit 5. Tilt and telescopic ECU	DI-808 DI-506 DI-500 DI-503 IN-34
Tilt only: Only tilt and telescopic manual switch function does not operate	1. Multiplex communication system 2. Tilt and telescopic manual switch circuit 3. Tilt motor circuit 4. Tilt and telescopic ECU	DI-808 DI-506 DI-500 IN-34
Telescopic only: Only tilt and telescopic manual switch function does not operate	1. Multiplex communication system 2. Tilt and telescopic manual switch circuit 3. Telescopic motor circuit 4. Tilt and telescopic ECU	DI-808 DI-506 DI-503 IN-34
Both away and return: Only auto away/return function does not operate	1. Check status of auto away function using TOYOTA hand-held tester 2. Multiplex communication system 3. Ignition switch 4. Key unlock warning switch 5. Tilt motor circuit 6. Telescopic motor circuit 7. Tilt and telescopic ECU 8. Speed sensor circuit	– DI-808 BE-26 BE-26 DI-500 DI-503 IN-34 DI-509

Only away: Only Auto away/return function does not operate	1. Multiplex communication system 2. Key unlock warning switch 3. Ignition switch 4. Tilt motor circuit 5. Telescopic motor circuit 6. Tilt and telescopic ECU 7. Speed sensor circuit	DI-808 BE-26 BE-26 DI-500 DI-503 IN-34 DI-509
Only return: Only auto away/return function does not operate	1. Multiplex communication system 2. Key unlock warning switch 3. Ignition switch 4. Tilt motor circuit 5. Telescopic motor circuit 6. Tilt and telescopic ECU 7. Speed sensor circuit	DI-808 BE-26 BE-26 DI-500 DI-503 IN-34 DI-509