


TERMINALS OF ECU

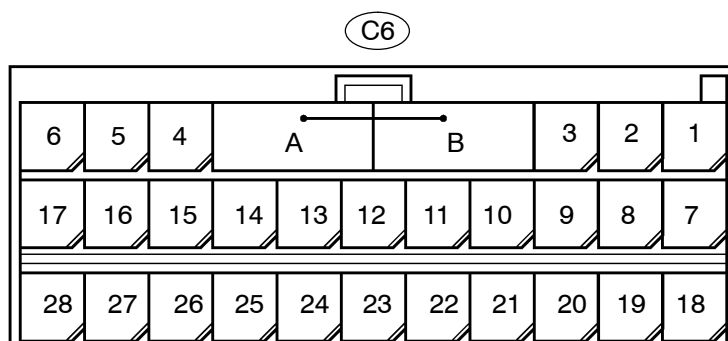

H01318

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C6 – 3	LA	SRS Warning Light
C6 – 5	IG2	Power Source (IGN Fuse)
C6 – 6	ACC	Power Source (CIG Fuse)
C6 – 7	PR–	Squib (Seat Belt Pretensioner, RH)
C6 – 8	PR+	Squib (Seat Belt Pretensioner, RH)
C6 – 9	+SR	Front Airbag Sensor (RH)
C6 – 10	P+	Squib (Passenger)
C6 – 11	P–	Squib (Passenger)
C6 – 12	SIL	Diagnosis
C6 – 13	D–	Squib (Driver)
C6 – 14	D+	Squib (Driver)
C6 – 15	+SL	Front Airbag Sensor (LH)
C6 – 16	PL+	Squib (Seat Belt Pretensioner, LH)
C6 – 17	PL–	Squib (Seat Belt Pretensioner, LH)
C6 – 19	Tc	Diagnosis
C6 – 20	–SR	Front Airbag Sensor (RH)
C6 – 26	–SL	Front Airbag Sensor (LH)
C6 – 27	E1	Ground
C6 – 28	E2	Ground