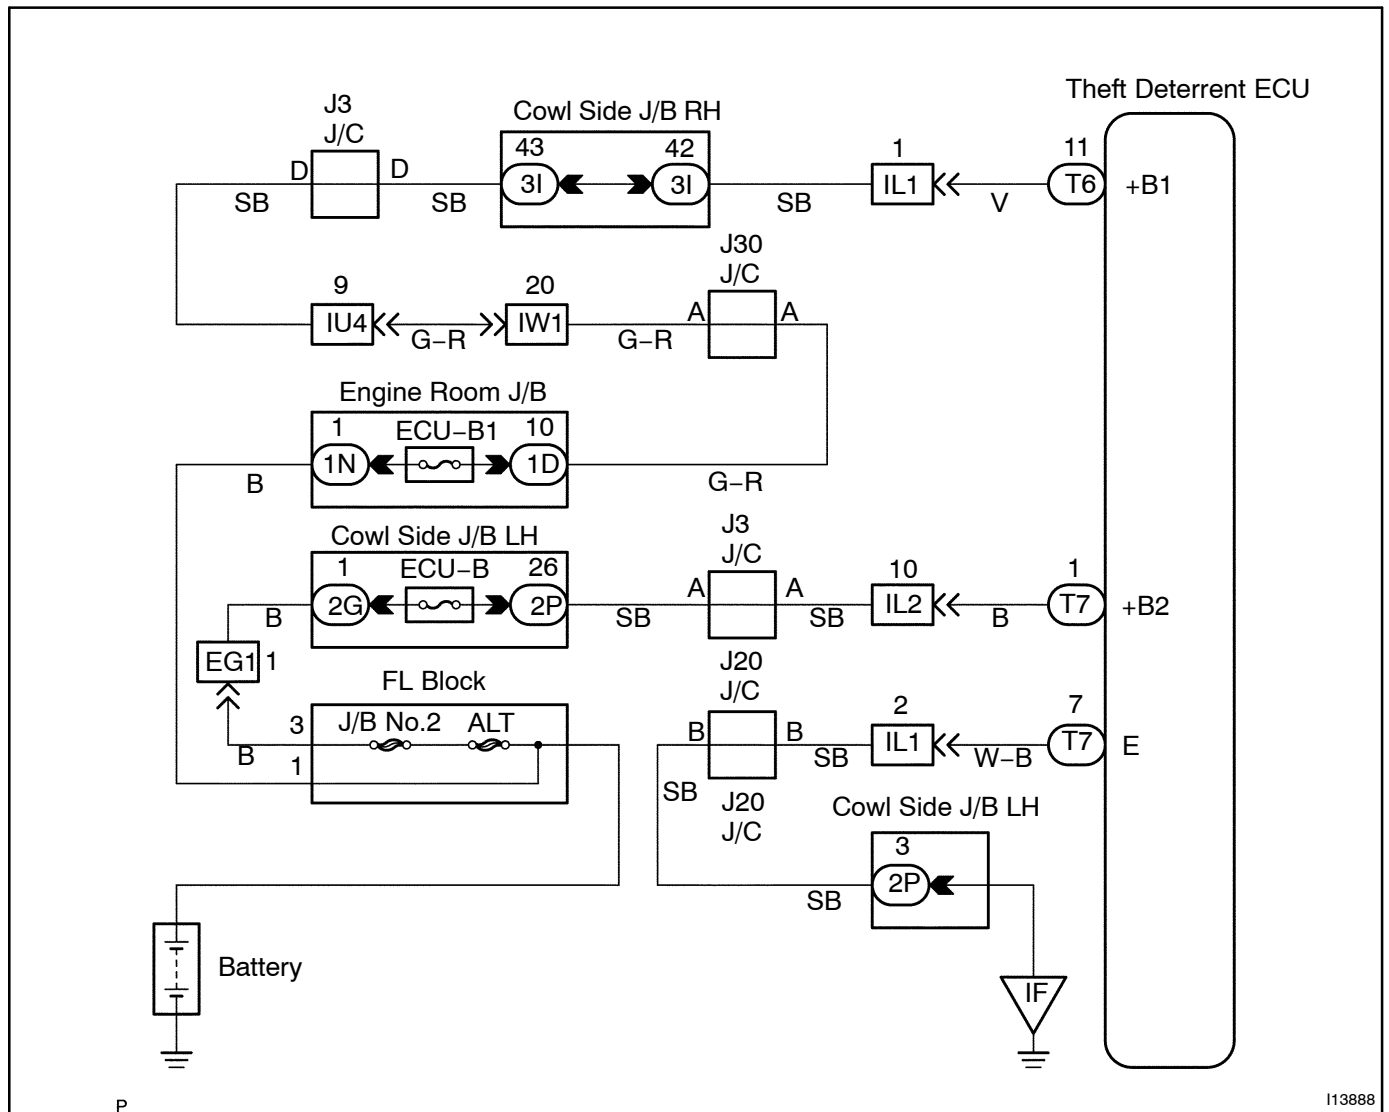


ECU Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the theft deterrent ECU.

WIRING DIAGRAM

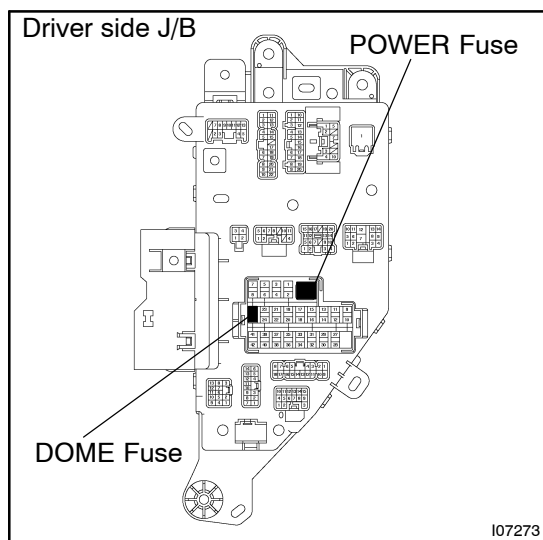


P

I13888

INSPECTION PROCEDURE

1 Check DOME and POWER fuse.

**PREPARATION:**

Remove DOME and POWER fuse from driver side junction block.

CHECK:

Check continuity of DOME and POWER fuse.

OK:

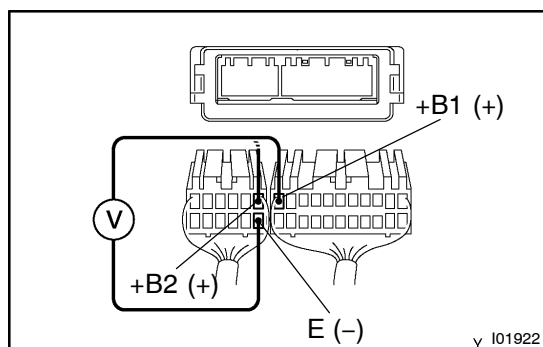
Continuity

NG

Check for short in all the harness and components connected to the DOME and POWER fuse (See attached wiring diagram).

OK

2 Check voltage between terminals +B1, +B2 and E of theft deterrent ECU connector.

**PREPARATION:**

Disconnect the theft deterrent ECU connector.

CHECK:

Measure voltage between terminals +B1, +B2 and E of theft deterrent ECU connector.

OK:

Voltage: 10 - 14V

OK

Proceed to next circuit inspection shown in problem symptom table (See page [DI-694](#)).

NG

3	Check for open in harness and connector between ECU and body ground (See page IN-34).
---	--

NG

Repair or replace harness or connector.

OK

Check and repair harness and connector between ECU and battery.