


114690

INSPECTION PROCEDURE

1	Check key unlock warning switch.
---	----------------------------------

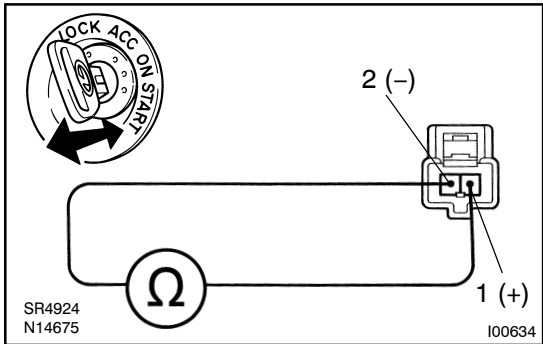

PREPARATION:

Disconnect key unlock warning switch connector.

CHECK:

Check continuity between terminal 1 and 2 of key unlock warning switch connector, when the key is inserted into the key cylinder or removed.

OK:

Switch position	Tester connection	Specified condition
ON (Key inserted)	1 - 2	Continuity
OFF (Key removed)	-	No continuity

NG

Replace key unlock warning switch.

OK

2	Check harness and connectors between ECU and key unlock warning switch, key unlock warning switch and body ground (See page IN-34).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU.*1

*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown in problem symptom table (See page [DI-694](#)).