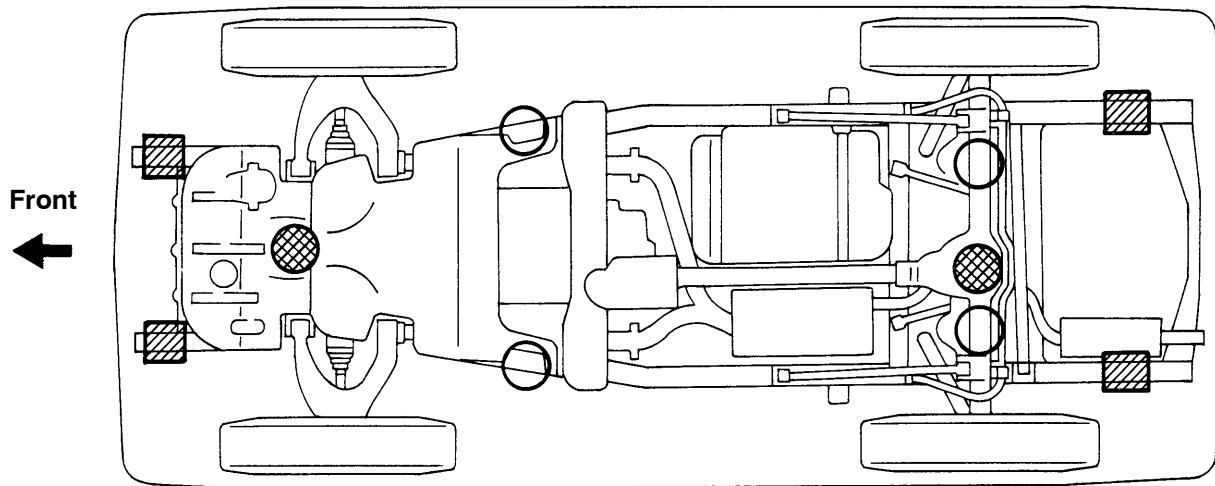


VEHICLE LIFT AND SUPPORT LOCATIONS



JACK POSITION ————— 

Front Engine under cover

Rear Rear differential carrier

CAUTION : When jacking-up the front and rear, make sure the car is not carrying any extra weight.

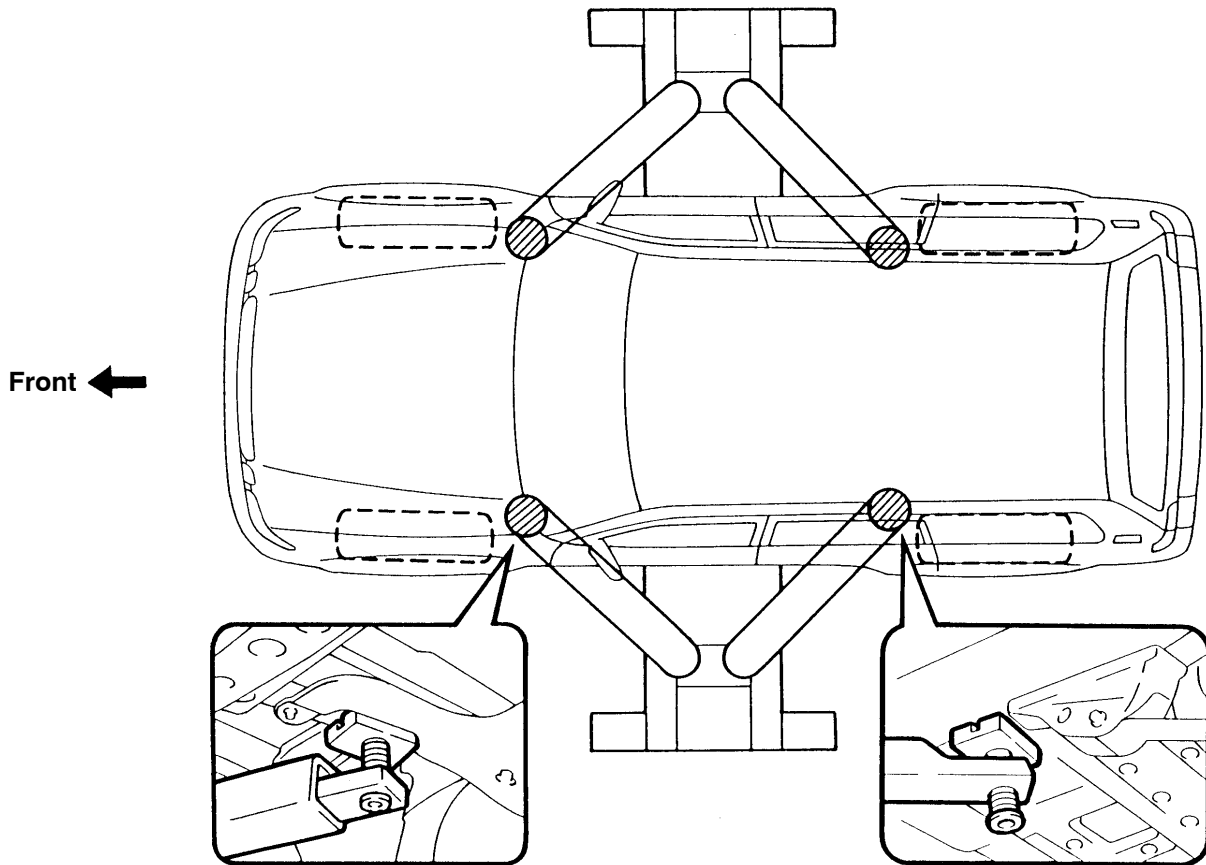
SCREW TYPE JACK POSITION ————— 

SUPPORT POSITION

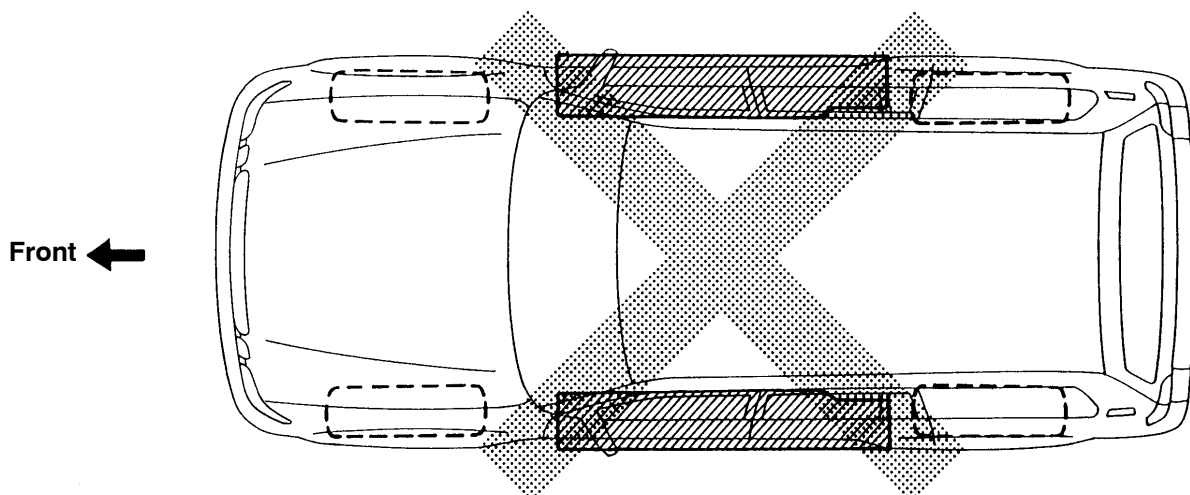
Safety stand 

NOTICE: When jacking up the vehicle with the engine running, turn off the active height control suspension with the height control switch.

B04208

Swing arm type lift:

NOTICE: When lifting the vehicle, place the supports correctly at the positions shown above.

Plate type lift (do not use.):

NOTICE: Never use the plate type lift—using it to lift up the vehicle will cause the body shape to warp.

B04715