


## DISASSEMBLY

### 1. REMOVE STEERING KNUCKLE ARM

Remove the 2 bolts and steering knuckle arm.

### 2. REMOVE OIL SEAL

Using a screwdriver and hammer, remove the oil seal.

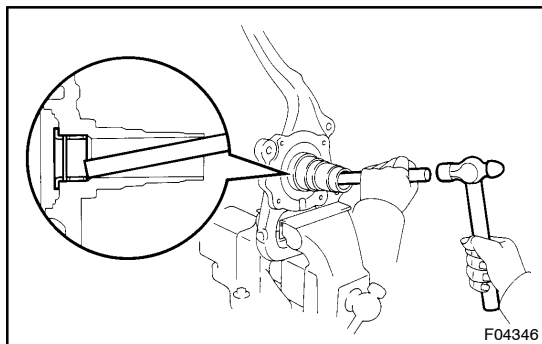

### 3. REMOVE BEARING AND BUSHING

Using a brass and hammer, remove the bearing and bushing.