

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	C 1	Camshaft Position Sensor	90980-10947
A 2	A/C Condenser Fan Motor	90980-11237	C 2	Center Diff. Lock Control Motor	90980-11024
A 3	A/C Condenser Fan Relay	90980-10940	C 3	Crankshaft Position Sensor	90980-11162
A 4	A/C Magnetic Clutch and Lock Sensor	90980-11016	C 6	Center Airbag Sensor Assembly	90980-11872
A 5	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	C 7	Center Diff. Lock Control Relay	90980-10801
A 6	A/T Oil Temp. Sensor	90980-11025	C 8	Center ECU	90980-11390
A11	ABS Speed Sensor Front LH	90980-10941	C 9	Center ECU	90980-11391
A12	ABS Speed Sensor Front RH	90980-11002	C10	Center ECU	90980-11408
A13	Accel Position Sensor	90980-11150	C11	Center ECU	90980-11392
A14	AHC Pump Motor	90980-10928	C12	Cigarette Lighter	90980-10760
A15	Airbag Sensor Front LH	90980-11856	C13	Cigarette Lighter Illumination	90980-11148
A16	Airbag Sensor Front RH		C14	Combination Meter	82824-60060
A17	Auto Antenna Motor	90980-11194	C15	Combination Meter	82824-60050
A18	A/C Solar Sensor	90980-11919	C16	Combination Meter	82824-60060
A19	A/C Thermistor	90980-11918	C17	Combination Meter	82824-60050
A24	AHC Main Relay	90980-10171	C18	Combination SW	90980-11672
A25	Air Inlet Control Servo Motor	90980-11165	C19	Combination SW	90980-11581
A26	Air Mix Control Servo Motor	90980-10797	C20	Combination SW	90980-11616
A27	Air Vent Mode Control Servo Motor	90980-11165	C21	Combination SW	90980-11594
A28	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	C22	Control Valve Assembly	90980-11599
A29	Airbag Squib (Steering Wheel Pad)	90980-10850	C23	Cellular Phone (Hand Set)	90980-11912
A30	Ashtray Illumination	90980-10825	C24	Center ECU	90980-11469
A31	Auto Antenna Control Relay	90980-10819	C25	Center ECU	90980-11391
A32	Automatic Light Control Sensor	90980-11633	C26	Center ECU	90980-11392
A33	A/C Amplifier	90980-11502	C27	Center ECU	90980-11913
A34	A/C Amplifier	90980-11497	C28	Center ECU	90980-11350
A35	A/C Amplifier	90980-11475	C29	Center Speaker LH	90980-10860
A36	ABS Speed Sensor Rear LH	90980-11073	C30	Center Speaker RH	
A37	ABS Speed Sensor Rear RH		D 1	Data Link Connector 1	90980-11195
A38	Accumulator Solenoid	90980-11019	D 2	Daytime Running Light Relay No.3	90980-10939
A39	ABS & BA & TRAC & VSC ECU	90980-11935	D 3	Daytime Running Light Relay No.3	90980-10940
A40	ABS & BA & TRAC & VSC ECU	90980-11476	D 4	Detection SW (Center Diff. Lock)	90980-11250
A41	ABS & BA & TRAC & VSC ECU	90980-11637	D 5	Detection SW (Transfer L Position)	
A42	ABS & BA & TRAC & VSC ECU	90980-11638	D 6	Detection SW (Transfer Neutral Position)	90980-11025
A43	ABS & BA & TRAC & VSC Actuator	90980-11413	D 7	Damping Mode Select SW and Height Control SW	90980-11533
A44	ABS & BA & TRAC & VSC Actuator	90980-10895	D 8	Data Link Connector 3	90080-98012
A45	ABS & BA & TRAC & VSC Actuator	90980-11151	D 9	Daytime Running Light Relay (Main)	90980-10819
A46	ABS & BA & TRAC & VSC Actuator	90980-11009	D10	Damping Force Control Actuator Front LH	90980-11960
B 1	Blower Motor Controller	90980-10910	D11	Damping Force Control Actuator Front RH	
B 2	Back Door Courtesy SW	90980-10039	D12	Damping Force Control Actuator Rear LH	
B 3	Back Door Key Lock and Unlock SW	90980-11490	D13	Damping Force Control Actuator Rear RH	90980-11148
B 4	Back Door Lock Motor and Back Door Unlock Detection SW	90980-11150	D15	Door Courtesy Light Front LH	
B 5	Buckle SW LH	90980-11211	D16	Door Courtesy Light Front RH	
B 6	Buckle SW RH		D17	Door Courtesy Light Rear LH	
			D18	Door Courtesy Light Rear RH	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D19	Door Courtesy SW Front LH	90980-10871	G 4	Garage Door Opener	90980-11212
D20	Door Courtesy SW Front RH		G 5	Gateway ECU	90980-11911
D21	Door Courtesy SW Rear LH		H 1	Headlight Cleaner Control Relay	90980-10939
D22	Door Courtesy SW Rear RH		H 2	Headlight Cleaner Motor	90980-11410
D23	Door Key Lock and Unlock SW LH	90980-11170	H 3	Headlight LH (High)	90980-11659
D24	Door Key Lock and Unlock SW RH		H 4	Headlight LH (Low)	90980-11294
D25	Door Lock Control SW RH	90980-10601	H 5	Headlight RH (High)	90980-11659
D26	Door Lock Motor and Door Unlock Detection SW Front LH	90980-11150	H 6	Headlight RH (Low)	90980-11294
D27	Door Lock Motor and Door Unlock Detection SW Front RH		H 7	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
D28	Door Lock Motor and Door Unlock Detection SW Rear LH		H 8	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
D29	Door Lock Motor and Door Unlock Detection SW Rear RH		H 9	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869
D30	Driving Position Memory SW	90980-10601	H10	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
D31	Deceleration Sensor	90980-11182	H11	Height Control Sensor Front LH	90980-11015
D32	DVD Automatic Changer	90980-11971	H12	Height Control Sensor Front RH	
E 1	Electronically Controlled Transmission Solenoid	90980-10891	H13	Horn LH	90980-10619
E 2	Engine Coolant Temp. Sensor	90980-10736	H14	Horn RH	
E 3	Engine Hood Courtesy SW	90980-11003	H15	Height Control Sensor Rear	90980-11143
E 4	Exhaust Gas Sensor	90980-11150	H16	High Mounted Stop Light	90980-11211
E 5	Electronically Controlled Transmission Pattern Select SW	90980-10933	I 1	Ignition Coil and Igniter No.1	90980-11885
E 6	Engine Control Module	90980-11421	I 2	Ignition Coil and Igniter No.2	
E 7	Engine Control Module	90980-11476	I 3	Ignition Coil and Igniter No.3	
E 8	Engine Control Module	90980-11586	I 4	Ignition Coil and Igniter No.4	
E 9	Engine Control Module	90980-11637	I 5	Ignition Coil and Igniter No.5	
E10	Engine Control Module	90980-11638	I 6	Ignition Coil and Igniter No.6	
F 1	Fluid Pressure Sensor	90980-11451	I 7	Ignition Coil and Igniter No.7	
F 2	Front Fog Light LH	90980-11156	I 8	Ignition Coil and Igniter No.8	
F 3	Front Fog Light RH		I 9	Injector No.1	90980-11153
F 4	Front Turn Signal Light LH	90980-11019	I10	Injector No.2	
F 5	Front Turn Signal Light RH		I11	Injector No.3	
F 6	Front Wiper Motor	90980-11599	I12	Injector No.4	
F 7	Fusible Link Block	82620-60010	I13	Injector No.5	
F 8	Fuel Control SW	90980-10860	I14	Injector No.6	
F 9	Front Door Speaker LH	90980-10935	I15	Injector No.7	
F10	Front Door Speaker RH		I16	Injector No.8	
F11	Front Interior light and Rear Personal Light	90980-10365	I17	Ignition Key Cylinder Light	90980-10906
F12	Front Personal Light	90980-10935	I18	Ignition SW	90980-11615
F13	Fuel Pump and Sender	90980-11077	I19	Instrument ECU	90980-11927
F14	Fuel Pump Control ECU	90980-10862	I20	Instrument ECU	90980-11914
G 1	Generator	90980-09212	I21	Instrument ECU	90980-11925
G 2	Generator	90980-11349	I22	Inner Mirror	90980-11186
G 3	Glove Box Light	90980-11098	J 1	Junction Connector	—
			J 3	Junction Connector	90980-11927
			J 4	Junction Connector	
			J 5	Junction Connector	90980-11925
			J 6	Junction Connector	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J 7	Junction Connector	—	M 4	Master Cylinder Pressure Sensor	90980-11451
J 8	Junction Connector		M 5	Multi-Display	90980-11911
J11	Junction Connector		M 6	Multi-Display	90980-11923
J12	Junction Connector		M 7	Multi-Display	90980-12012
J13	Junction Connector	90980-11927	M 8	Multi-Display	90980-10799
J14	Junction Connector		N 1	Noise Filter (Ignition)	90980-10843
J15	Junction Connector		N 2	Navigation ECU	90980-11973
J16	Junction Connector		N 3	Navigation ECU	90980-11923
J17	Junction Connector	90980-11927	O 1	O/D Direct Clutch Speed Sensor	90980-11156
J18	Junction Connector		O 2	Oil Pressure Sender	90980-11363
J19	Junction Connector		O 3	O/D Main SW and Shift Lock Control ECU	90980-11614
J20	Junction Connector		P 1	Park/Neutral Position SW,A/T Indicator Light SW and Back-Up Light SW	90980-11784
J21	Junction Connector	—	P 2	Parking Light and Side Marker Light LH	90980-11156
J22	Junction Connector		P 3	Parking Light and Side Marker Light RH	
J23	Junction Connector		P 4	Power Outlet (Front)	90980-10760
J24	Junction Connector		P 5	Power Outlet (Rear Console Box)	90980-10860
J25	Junction Connector	90980-11925	P 6	Power Quarter Window SW LH	90980-10797
J26	Junction Connector		P 7	Power Quarter Window SW RH	90980-10996
J27	Junction Connector		P 8	Parking Brake SW	90980-10871
J28	Junction Connector		P 9	Power Outlet (Luggage Compartment)	90980-10860
J29	Junction Connector	—	P10	Power Vent Window Motor LH	
J30	Junction Connector		P11	Power Vent Window Motor RH	
J31	Junction Connector		P12	Power Window Control SW Front RH	90980-11947
J32	Junction Connector		P13	Power Window Control SW Rear LH	
J33	Junction Connector		P14	Power Window Control SW Rear RH	
J34	Junction Connector	—	P15	Power Window Master SW	90980-11469
J35	Junction Connector		P16	Power Window Motor Front LH	90980-11599
J36	Junction Connector		P17	Power Window Motor Front RH	
J37	Junction Connector		P18	Power Window Motor Rear LH	
J38	Junction Connector		P19	Power Window Motor Rear RH	
J39	Junction Connector	90980-11166	P20	Pretensioner LH	90980-11862
J40	Junction Connector		P21	Pretensioner RH	
J41	Junction Connector		P22	Power Seat Control SW (Driver's Seat)	90980-10803
J42	Junction Connector		P23	Power Seat Control SW (Front Passenger's Seat)	
J43	Junction Connector	82824-10020	P24	Power Seat ECU	90980-11502
J44	Junction Connector	82824-10010	P25	Power Seat ECU	90980-11527
J45	Junction Connector		P26	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825
K 1	Knock Sensor 1	90980-11166	P27	Power Seat Motor (Driver's Seat Lumbar Support Control)	
K 2	Knock Sensor 2		P28	Power Seat Motor (Driver's Seat Rear Vertical Control)	
K 3	Key Interlock Solenoid	90980-10825	P29	Power Seat Motor (Driver's Seat Reclining Control)	
L 1	License Plate Light LH	90980-11148	P30	Power Seat Motor (Driver's Seat Slide Control)	
L 2	License Plate Light RH				
L 3	Lumbar Support Control SW (Driver's Seat)	90980-10601			
M 1	Mass Air Flow Meter	90980-11317			
M 2	Moon Roof Control ECU	90980-10997			
M 3	Moon Roof Control SW	90980-10789			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
P31	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	90980-10825	S 3	Seat Heater SW (Driver's Seat)	90980-10797
P32	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)		S 4	Seat Heater SW (Front Passenger's Seat)	90980-10996
P33	Power Seat Motor (Front Passenger's Seat Reclining Control)		S 5	Stop Light SW	90980-11118
P34	Power Seat Motor (Front Passenger's Seat Slide Control)		S 6	Suspension Control ECU	90980-11390
P35	Power Seat Position Sensor (Driver's Seat Front Vertical Control)	90980-10908	S 7	Suspension Control ECU	90980-11391
P36	Power Seat Position Sensor (Driver's Seat Rear Vertical Control)		S 8	Suspension Control ECU	90980-11424
P37	Power Seat Position Sensor (Driver's Seat Reclining Control)		S13	Seat Belt Warning Occupant Detection Sensor	90980-10860
P38	Power Seat Position Sensor (Driver's Seat Slide Control)		S14	Seat Heater (Driver's Seat)	90980-10907
R 4	Remote Control Mirror SW	90980-11657	S15	Seat Heater (Front Passenger's Seat)	
R 5	Remote Control Mirror SW	90980-11319	S16	Side Step Light LH	90980-11051
R 6	Rheostat	90980-10799	S17	Side Step Light RH	
R 7	Room Temp. Sensor (Front)	90980-11918	S18	Stereo Component Amplifier	90980-10848
R 8	Rear A/C Control SW	90980-11503	S19	Stereo Component Amplifier	90980-11877
R 9	Rear Air Mix Control Servo Motor	90980-11319	T 1	Temp. Sensor (AHC)	90980-10737
R10	Rear Combination Light LH	90980-11587	T 2	Theft Deterrent Horn	90980-10619
R11	Rear Combination Light LH	90980-10795	T 3	Throttle Control Motor	90980-10942
R12	Rear Combination Light RH		T 4	Throttle Position Sensor	90980-11037
R13	Rear Combination Light RH	90980-11587	T 5	Telescopic Motor	90980-10799
R14	Rear Cooler Blower Motor	90980-10214	T 6	Theft Deterrent ECU	90980-10765
R15	Rear Cooler Magnetic Valve	90980-10860	T 7	Theft Deterrent ECU	90980-10973
R16	Rear Cooler Power Transistor	90980-10171	T 8	Tilt and Telescopic ECU	90980-10848
R17	Rear Cooler Relay		T 9	Tilt and Telescopic ECU	90980-10799
R19	Rear Door Speaker LH	90980-10935	T10	Tilt Motor	
R20	Rear Door Speaker RH		T11	Transponder Key Amplifier	90980-10933
R21	Rear Evaporator Temp. Sensor	90980-11918	T12	Turn Signal Flasher	90980-10799
R22	Rear Heater Blower Motor	90980-10860	T15	Trailer Socket	90980-10941
R23	Rear Heater Power Transistor	90980-10171	T16	Tweeter LH	90980-11300
R24	Rear Inlet Air Temp. Sensor	90980-11369	T17	Tweeter RH	
R25	Rear Interior Light	90980-10935	T18	Telephone Microphone	90980-11920
R26	Rear Window Defogger	90980-11097	T19	Telephone Transceiver and Speaker Relay	90980-11001
R27	Rear Window Defogger		T20	Telephone Transceiver and Speaker Relay	90980-10998
R28	Rear Wiper Motor	90980-10795	T21	Telephone Transceiver and Speaker Relay	90980-11912
R29	Rear Wiper Relay	90980-10797	T22	Telephone Transceiver and Speaker Relay	90980-11910
R30	Remote Control Mirror ECU	90980-11877	T23	Towing Converter Relay	90980-11527
R31	Remote Control Mirror LH	90980-11573	U 1	Unlock Warning SW	90980-10860
R32	Remote Control Mirror RH		V 1	Vapor Pressure Sensor	90980-11143
R33	Room Temp. Sensor (Rear)	90980-11918	V 2	Vehicle Speed Sensor (Combination Meter)	
R34	Radio and Player	90980-12038	V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
R35	Radio and Player	90980-10803	V 4	VSV (EVAP)	
S 1	Starter	90980-11400	V 5	VSV (Vapor Pressure Sensor)	
S 2	Starter	90980-09585	V 6	Vanity Light LH	90980-11369
			V 7	Vanity Light RH	
			V 8	VSC Warning Buzzer	90980-10906
			W 1	Washer Motor	90980-11290

L PART NUMBER OF CONNECTORS

[illegible]

Note: Not all of the above part numbers of the connector are established for the supply.

