


CHARGING

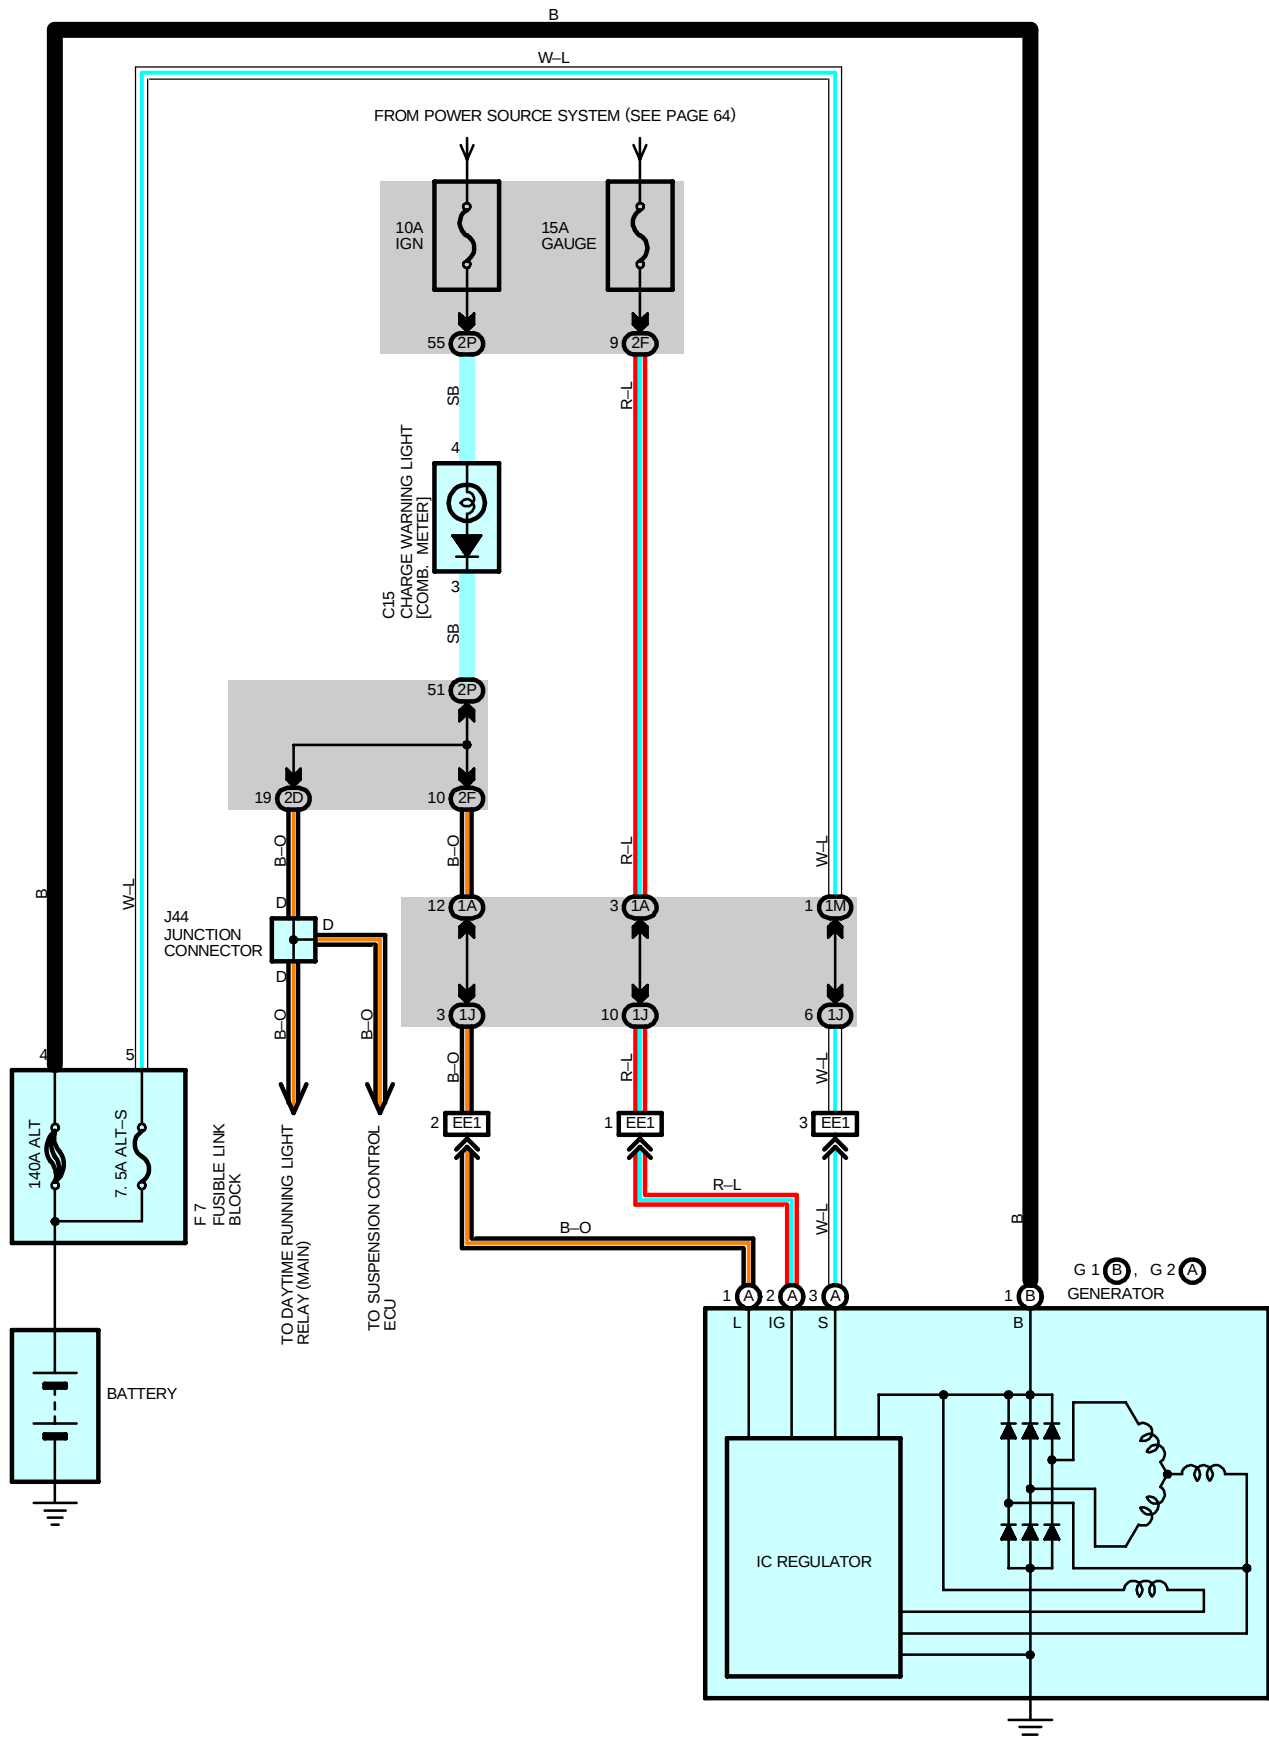

SERVICE HINTS

G2 GENERATOR

1-GROUND : **13.2–14.0** volts with engine running at **5000** rpm and **115°C (239°F)**

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
C15	40	G1	B	38	J44	41
F7	38	G2	A	38		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1J	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1M	23	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	46	Engine Room Main Wire and Alternator Wire (Near the Battery)