


FRONT FOG LIGHT

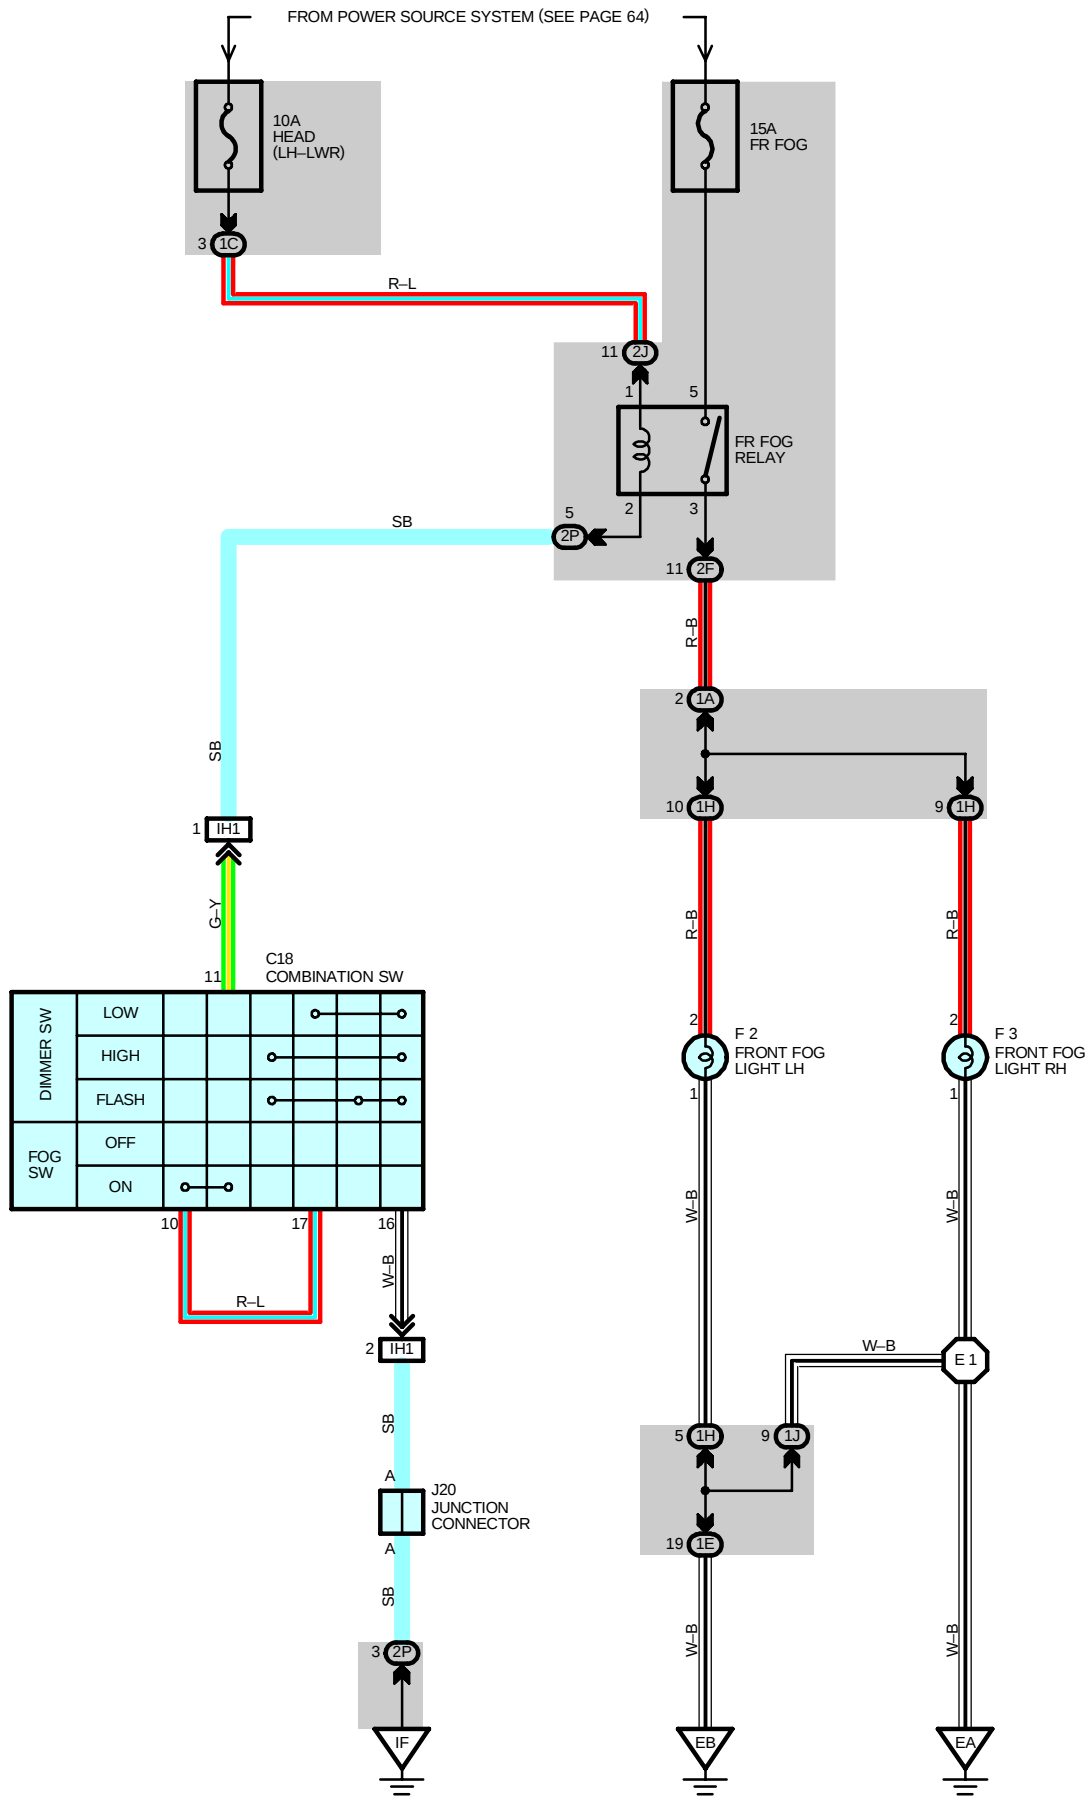

SERVICE HINTS

FR FOG RELAY

5-3 : Closed with light control SW at **HEAD** position, dimmer SW at **LOW** position and fog SW at **ON** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C18	40	F3	38		
F2	38	J20	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2J		
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)

: GROUND POINTS

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		
IF	48	Set Bolt of Cowl Side J/B LH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	46	Engine Room Main Wire			