



TURN SIGNAL AND HAZARD WARNING LIGHT

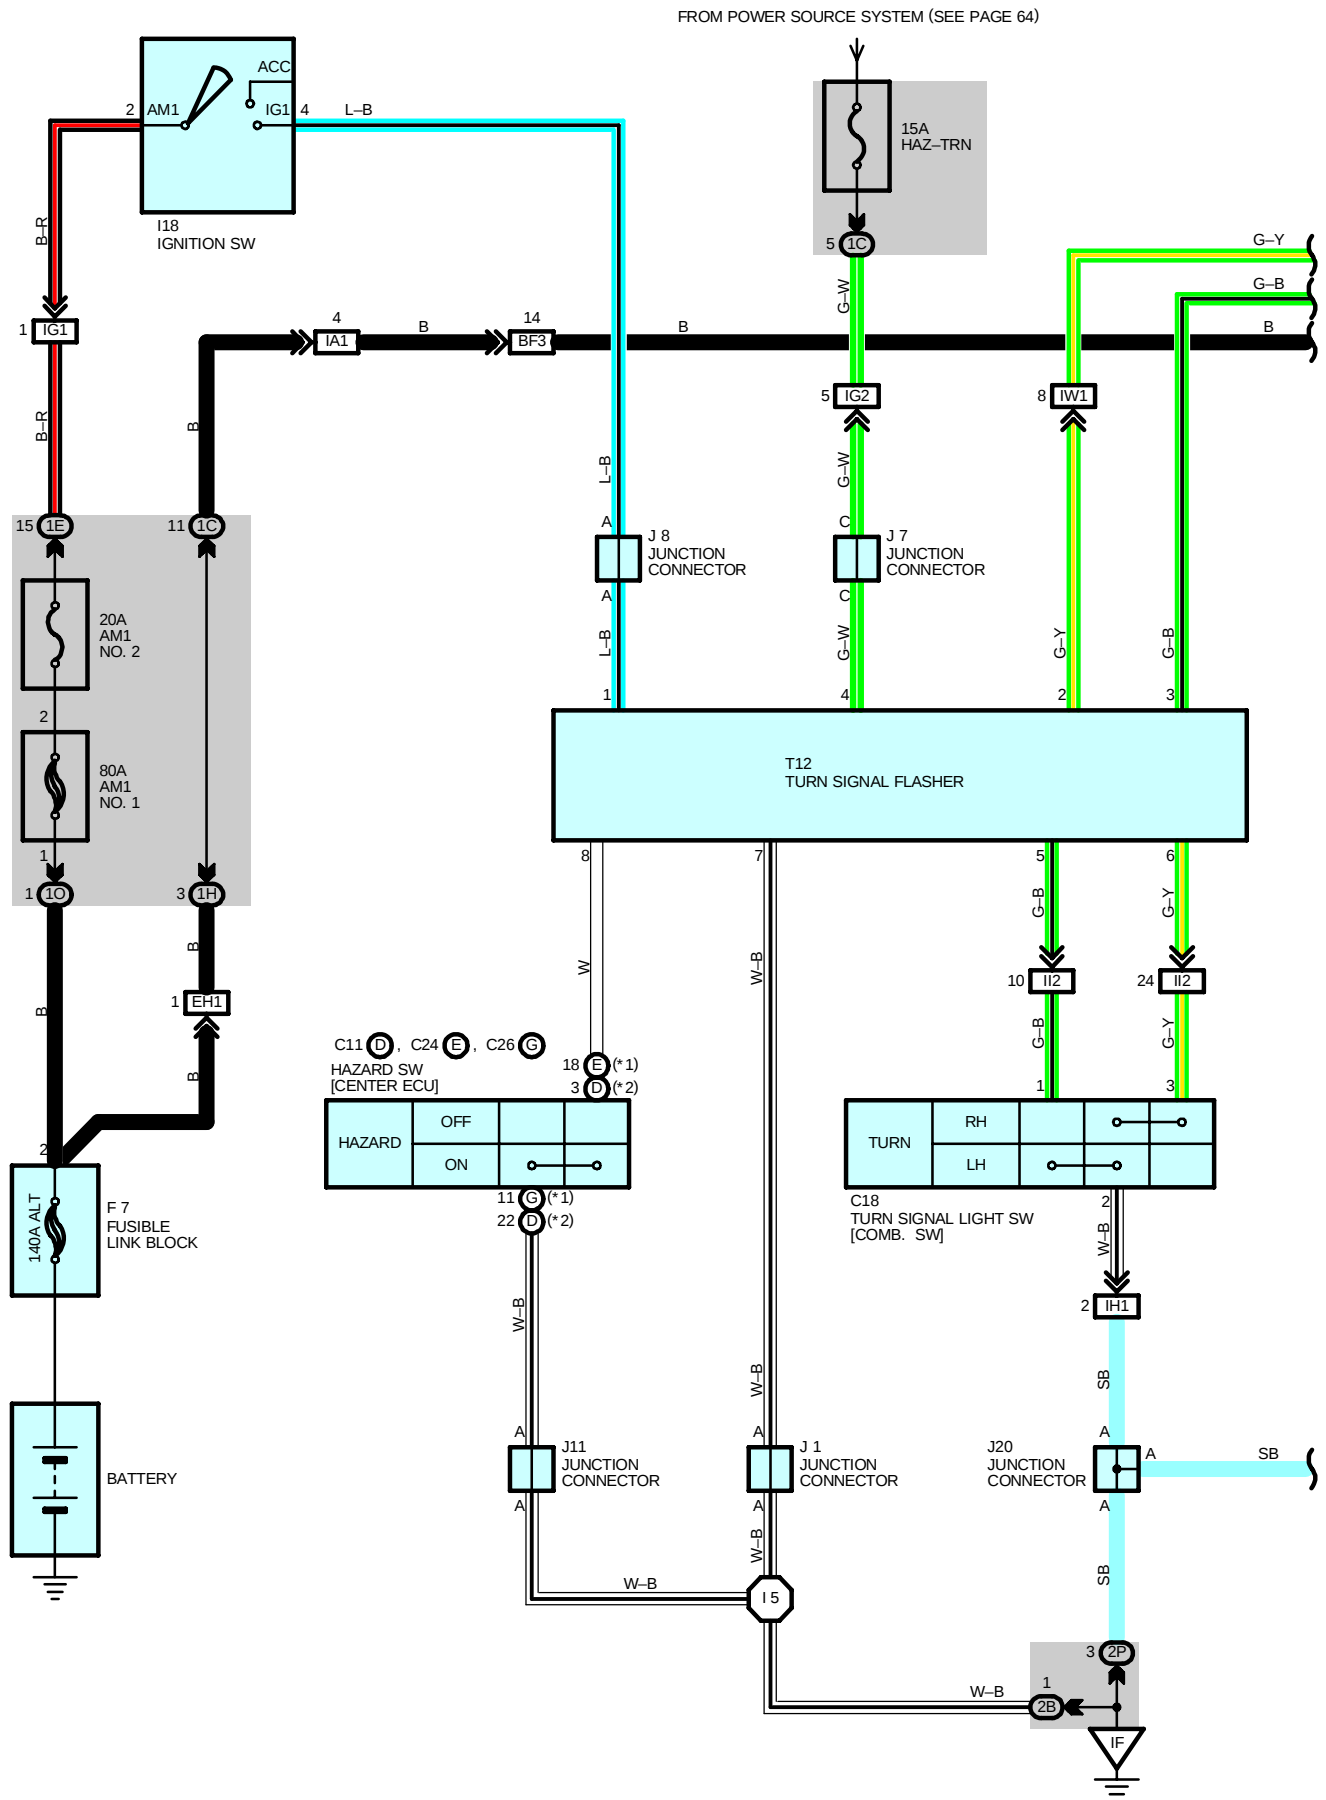

- * 1 : W/ LEXUS NAVIGATION SYSTEM
- * 2 : W/O LEXUS NAVIGATION SYSTEM

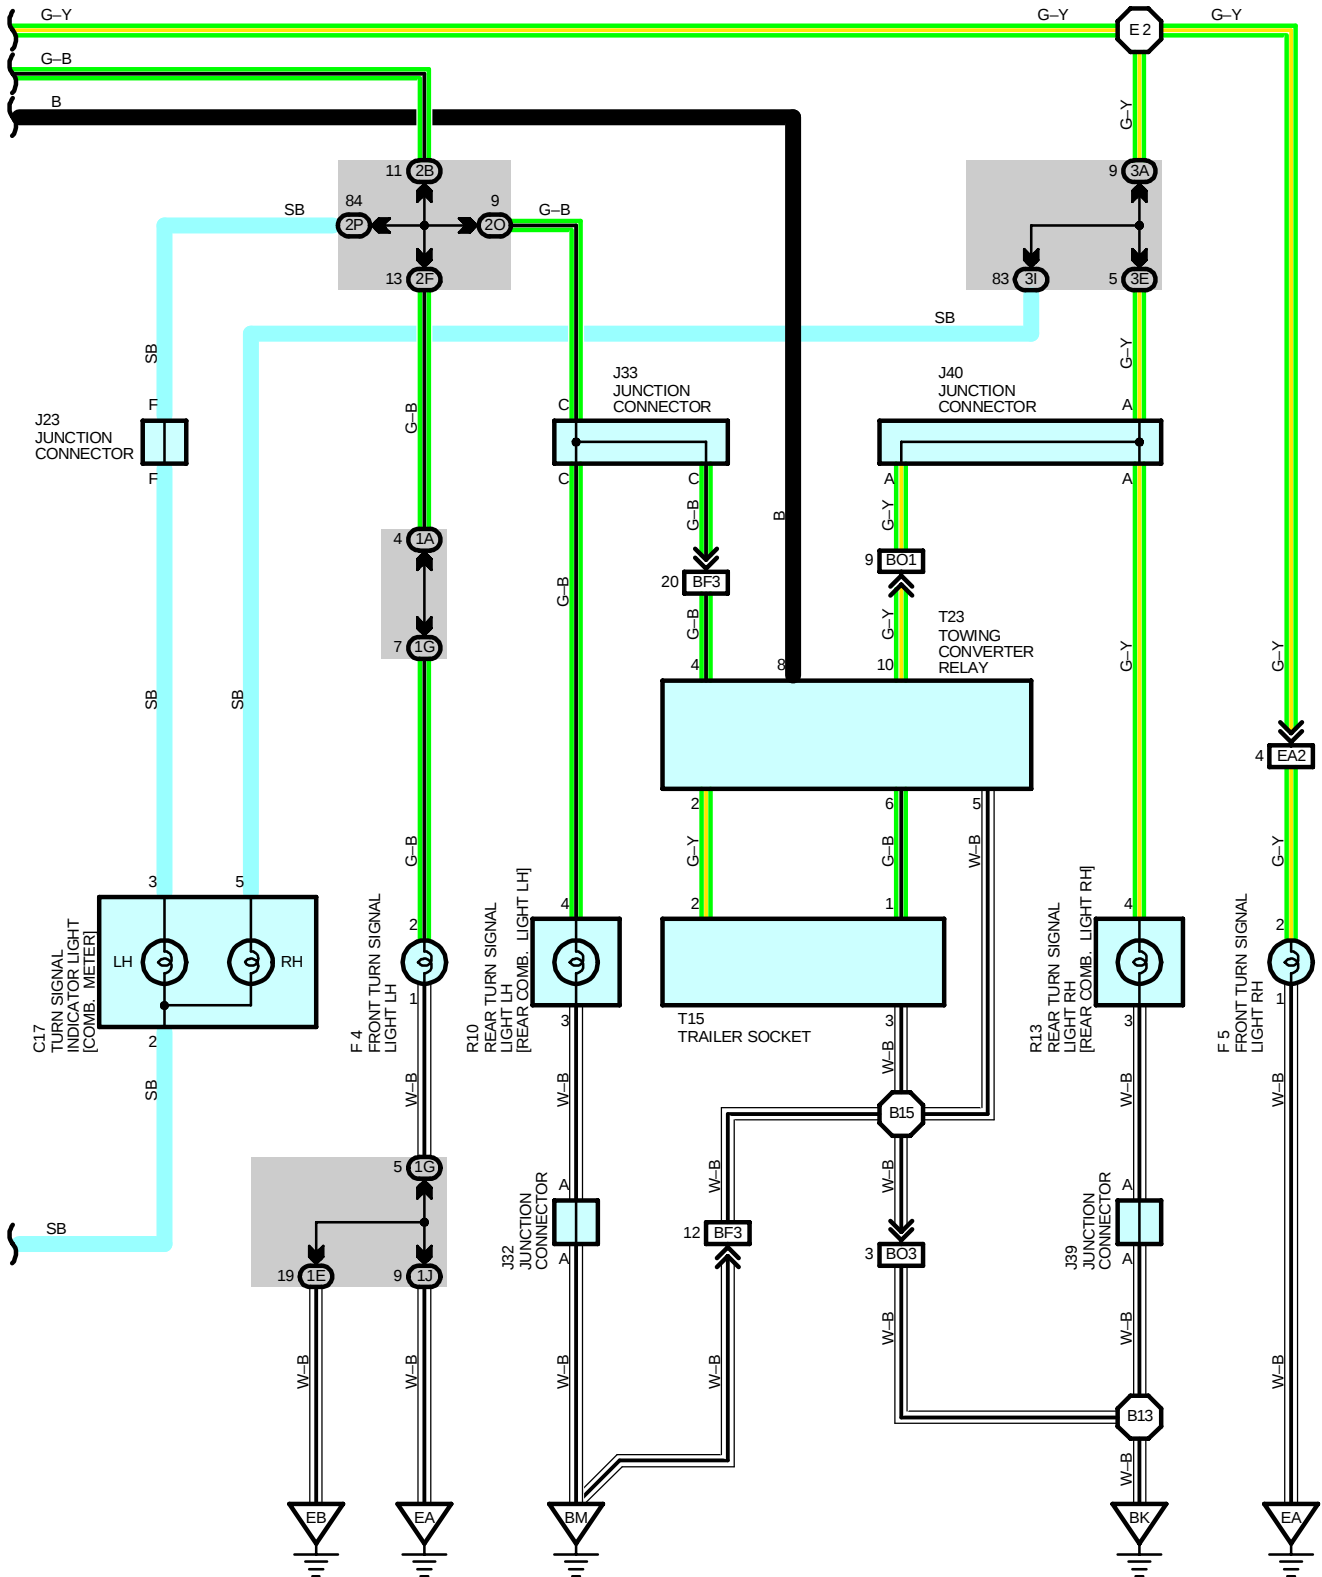

TURN SIGNAL AND HAZARD WARNING LIGHT

SERVICE HINTS

T12 TURN SIGNAL FLASHER

- 4-GROUND : Always approx. **12** volts
- 1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 7-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C11	D 40	I18	40	J33	42
C17	40	J1	41	J39	42
C18	40	J7	41	J40	42
C24	E 40	J8	41	R10	43
C26	G 40	J11	41	R13	43
F4	38	J20	41	T12	41
F5	38	J23	41	T15	43
F7	38	J32	42	T23	43

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1G	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
1J		
1O	23	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	46	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EH1	46	Engine Room Main Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
IA1	48	Floor Wire and Engine Room No.2 Wire (Left Kick Panel)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG2		
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II2	50	Column Wire and Dash Wire (Near the Ignition SW)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BO1	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO3		

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		
IF	48	Set Bolt of Cowl Side J/B LH
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	46	Engine Room No.2 Wire	B13	58	Floor No.2 Wire
I5	50	Dash Wire	B15	58	Floor No.3 Wire