




ILLUMINATION

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

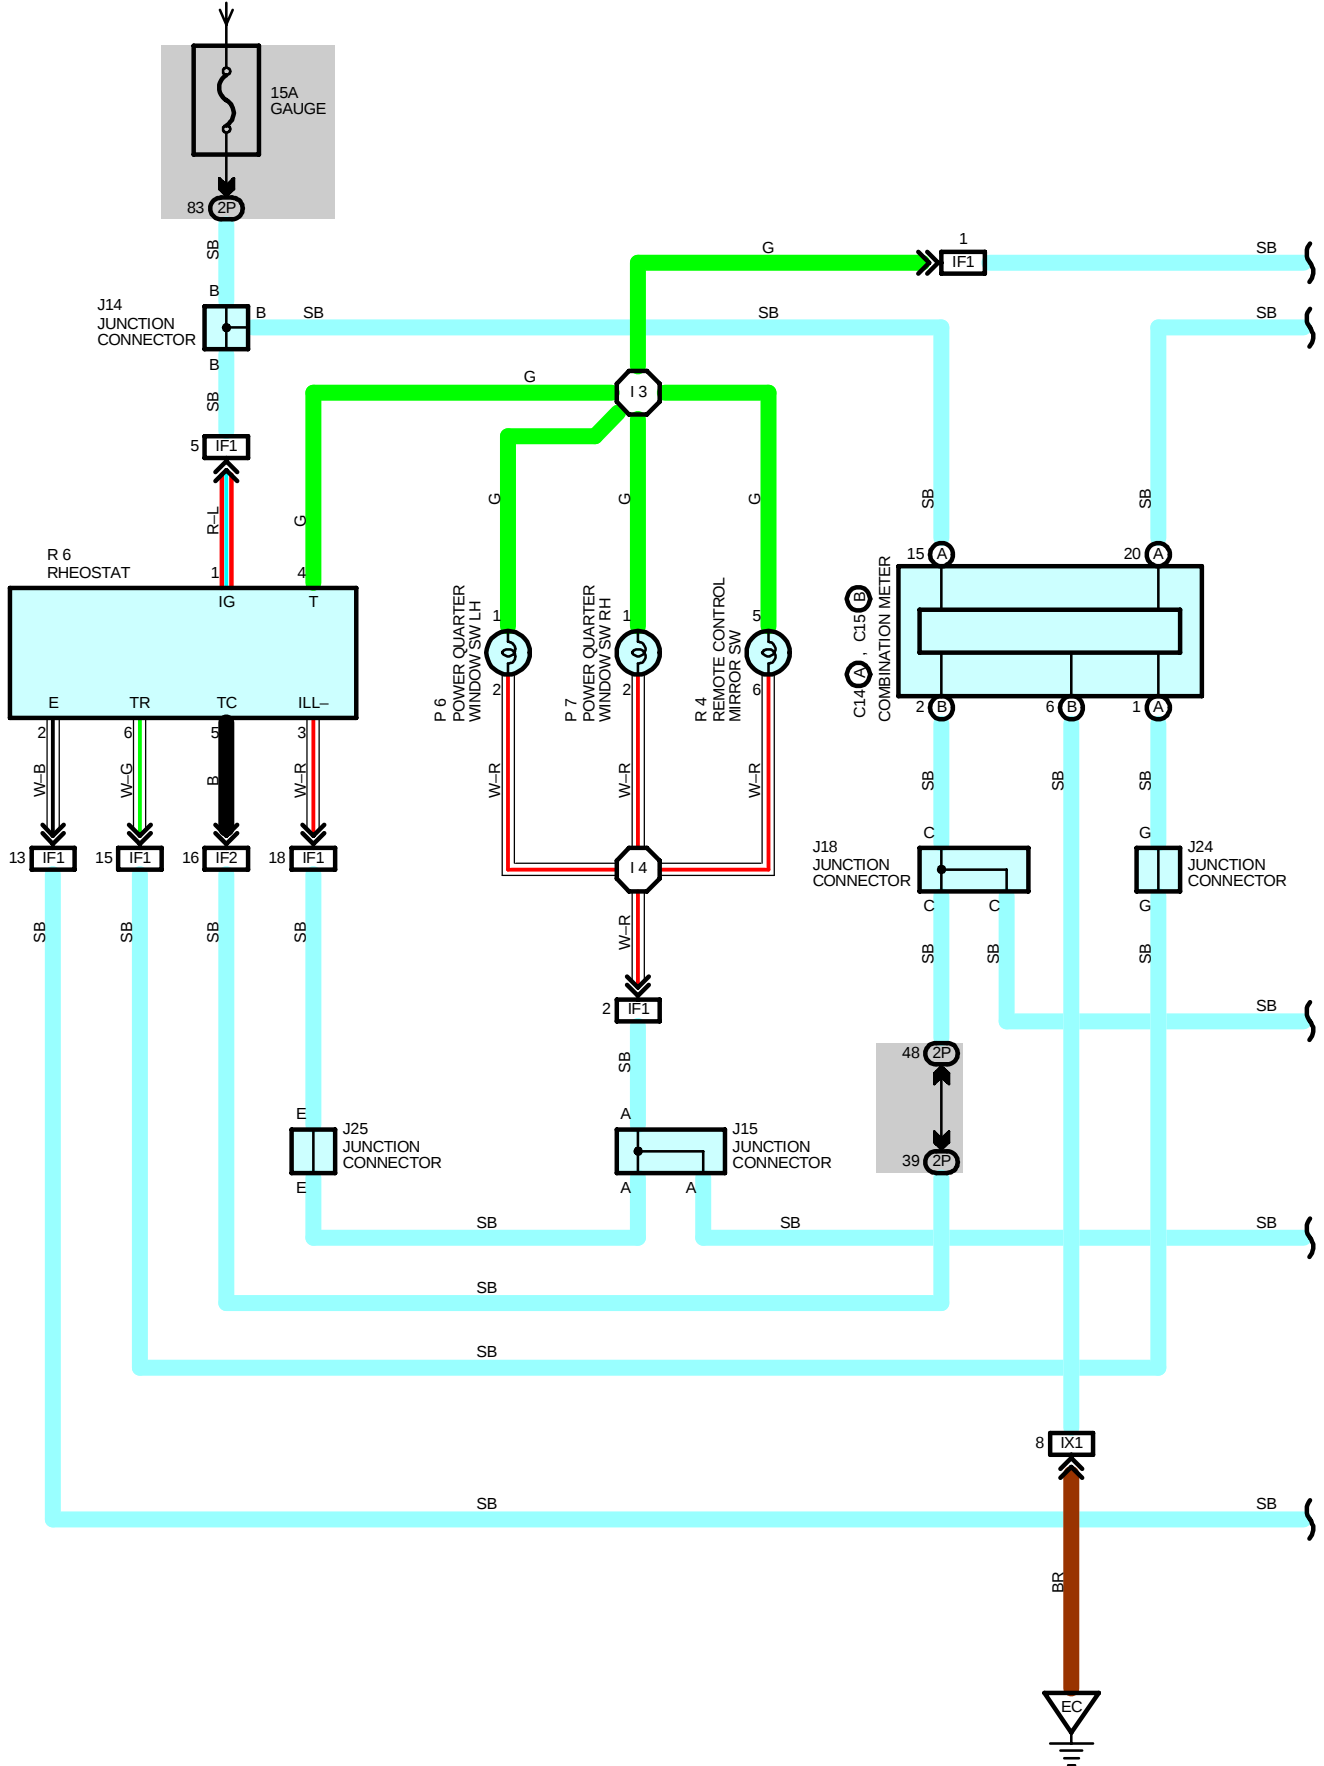

 - * 1 : W/ LEXUS NAVIGATION SYSTEM
- * 2 : W/O LEXUS NAVIGATION SYSTEM

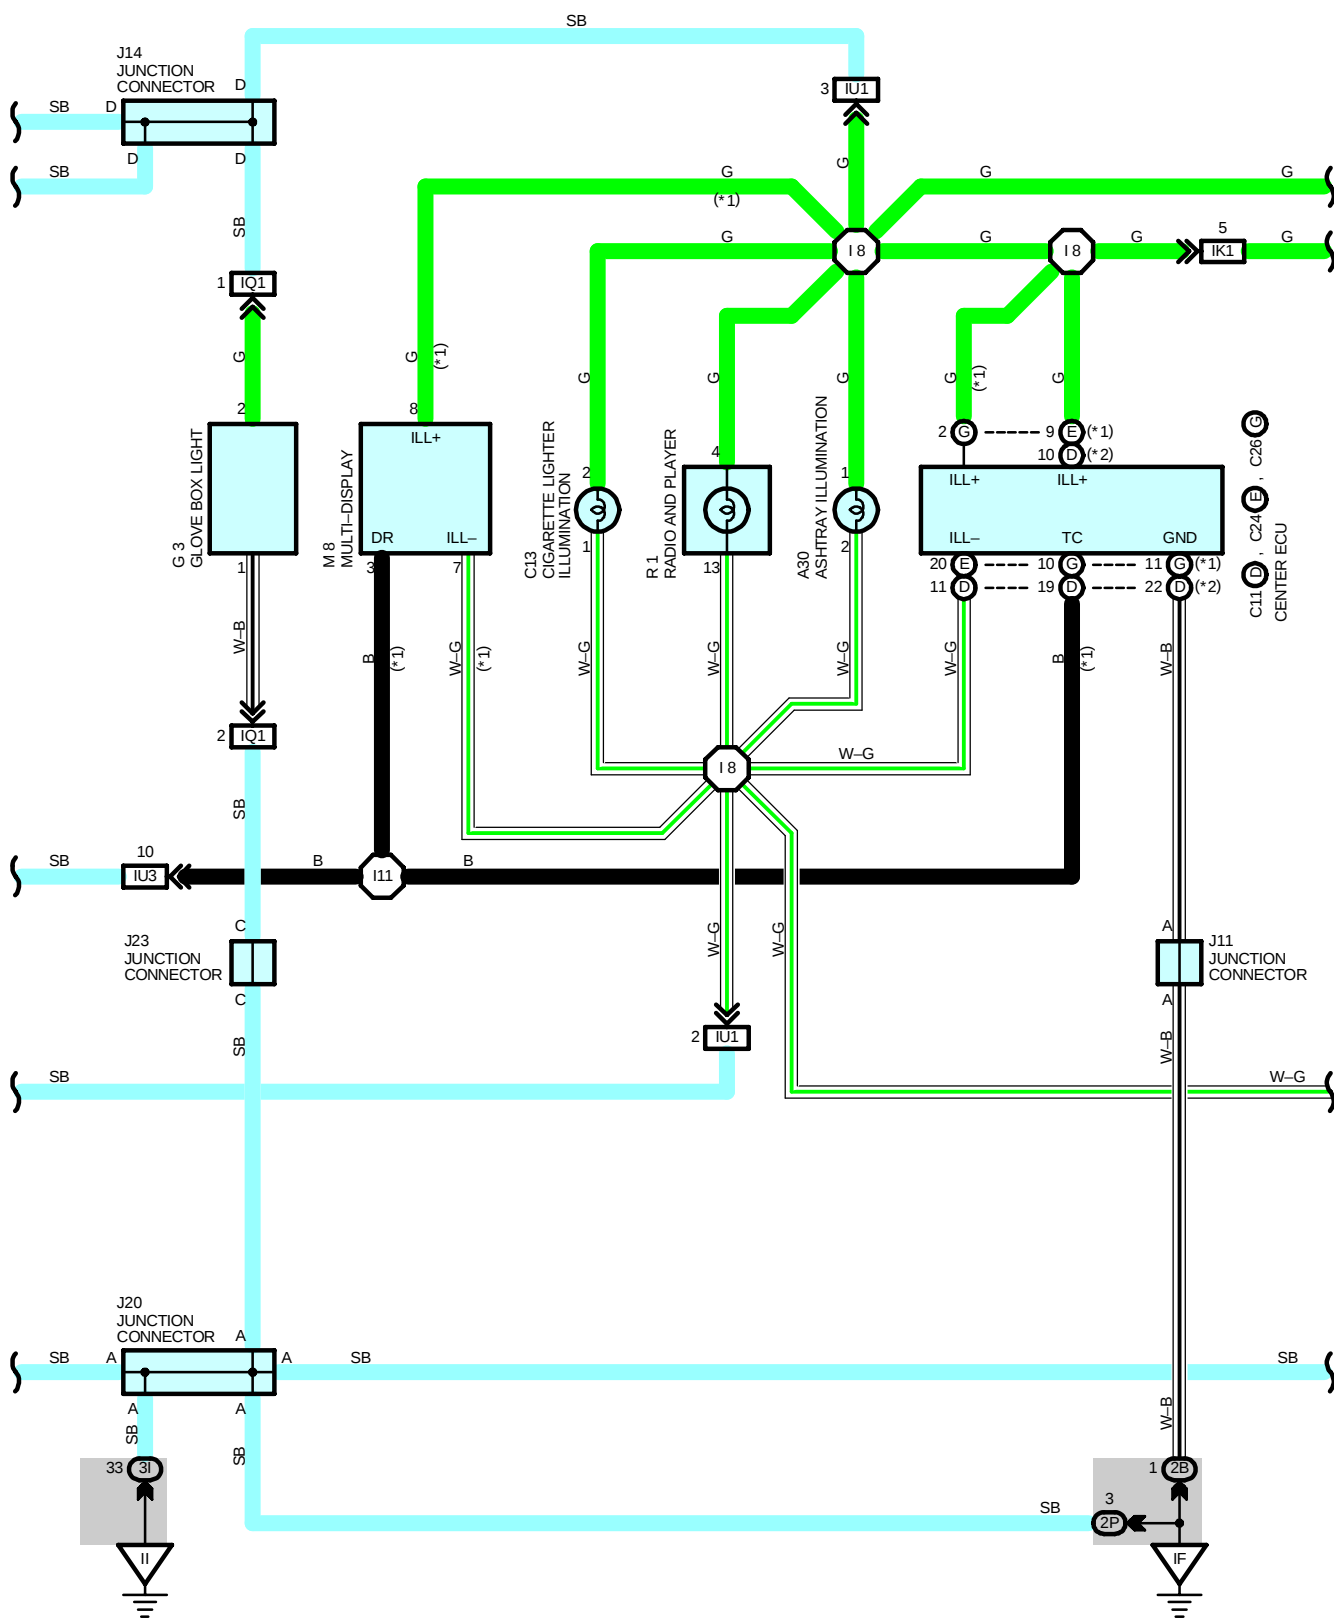



SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C18 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

: PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
A30		40		I19	A	40		J38	42		
A33	A	42		I21	C	40		J39	42		
A34	B	42		J4		41		M8	41		
A35	C	42		J8		41		O3	41		
C11	D	40		J11		41		P6	41		
C13		40		J14		41		P7	41		
C14	A	40		J15		41		R1	41		
C15	B	40		J18		41		R4	41		
C18		40		J20		41		R6	41		
C24	E	40		J23		41		R8	43		
C26	G	40		J24		41		S3	41		
D7		40		J25		41		S4	41		
E5		40		J34		42					
G3		40		J37		42					

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IK1	50	Console Box Wire and Dash Wire (Left Side of Front Console)
IQ1	52	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU1		
IU3	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BO3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

: GROUND POINTS

Code	See Page	Ground Points Location
EC	46	Rear Bank of Right Cylinder Head
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH
BK	56	Front Side Under the Front Passenger's Seat

ILLUMINATION



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	50	Instrument Panel Wire	I9	50	Console Box Wire
I4			I11	50	Dash Wire
I8	50	Dash Wire			