


STOP LIGHT

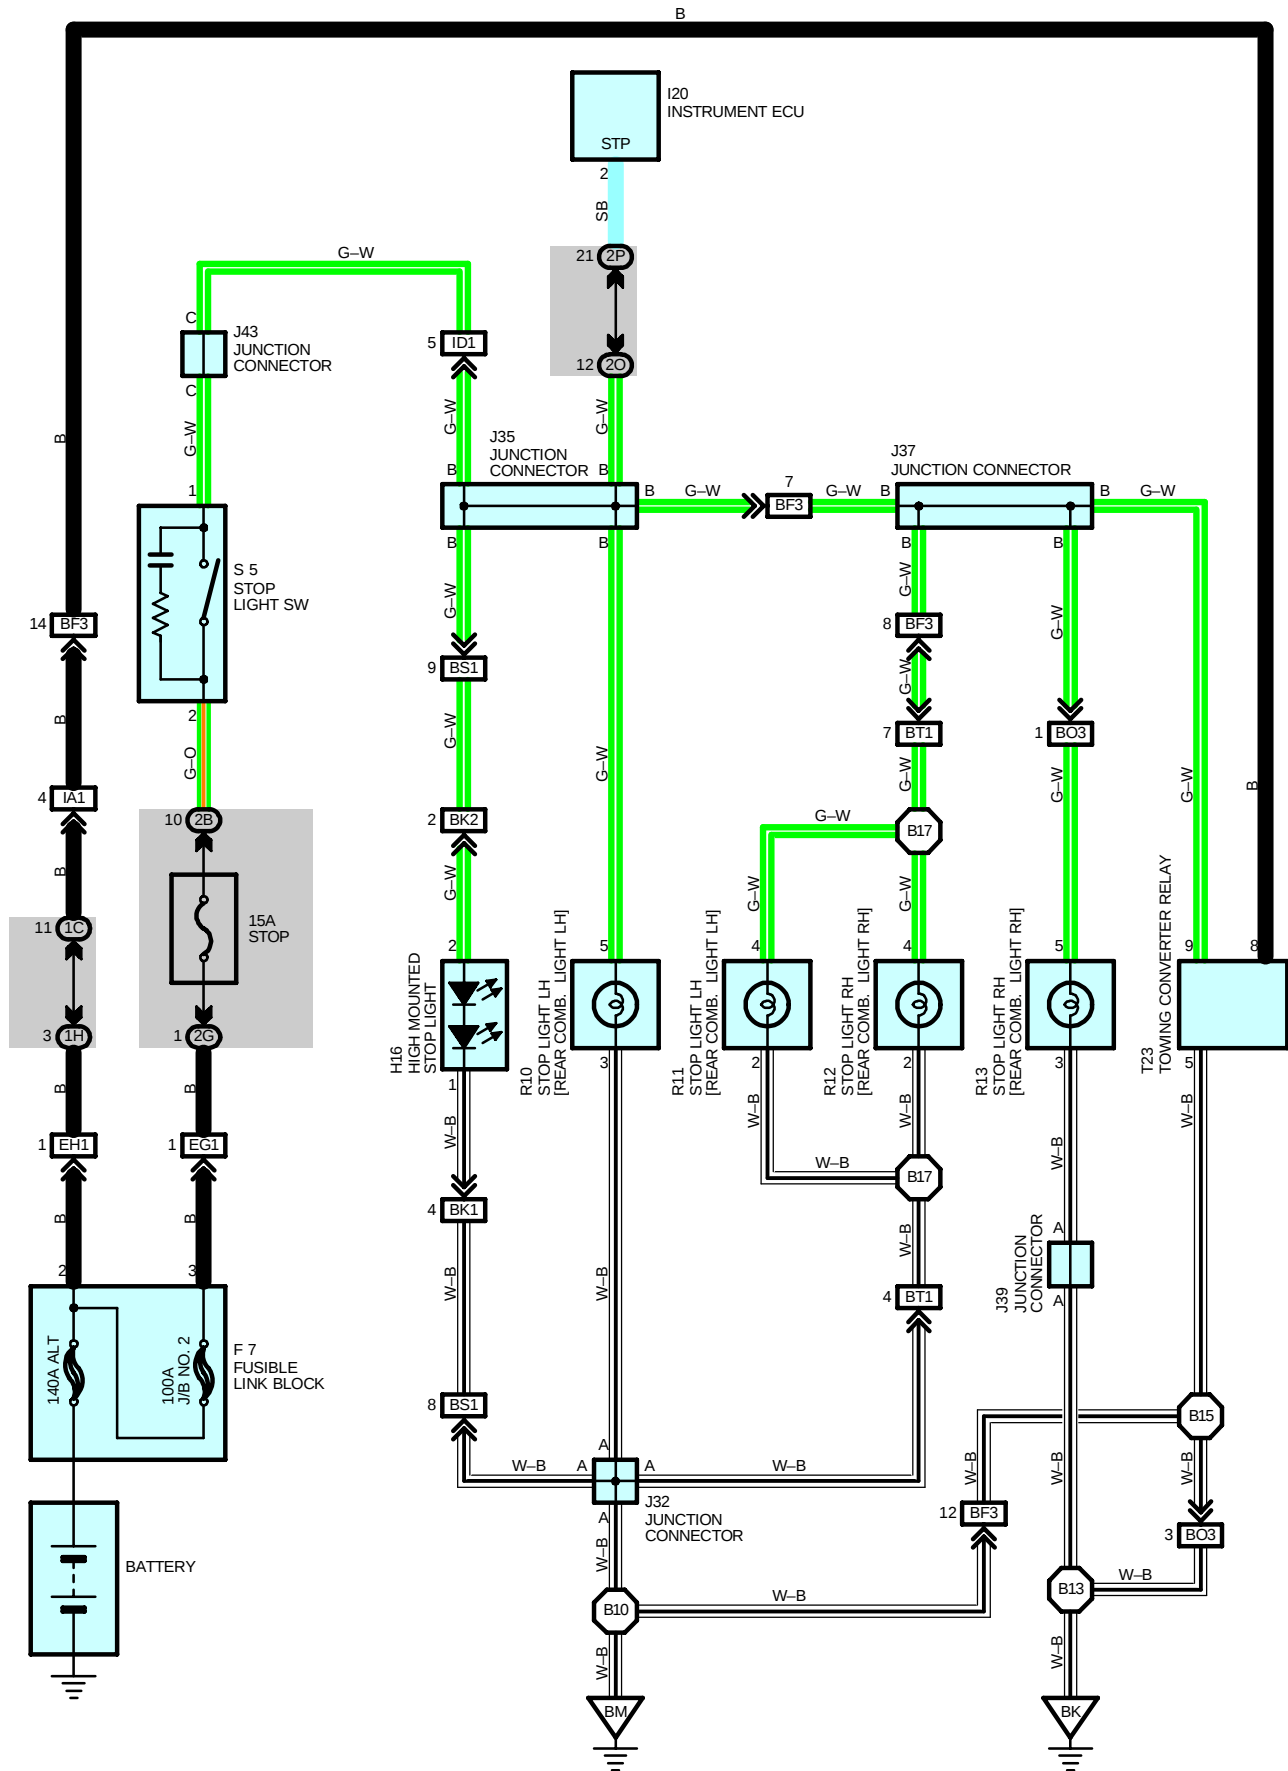

SERVICE HINTS**S5 STOP LIGHT SW**

2-1 : Closed with brake pedal depressed

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F7	38	J37	42	R12	43
H16	42	J39	42	R13	43
I20	40	J43	41	S5	41
J32	42	R10	43	T23	43
J35	42	R11	43		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2G	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EG1	46	Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
EH1	46	Engine Room Main Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
IA1	48	Floor Wire and Engine Room No.2 Wire (Left Kick Panel)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BK1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2		
BO3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BS1	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)
BT1	58	Back Door Lower Wire and Floor Wire (Left Rear Side Quarter Panel)

 : GROUND POINTS

Code	See Page	Ground Points Location
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	58	Floor Wire	B15	58	Floor No.3 Wire
B13	58	Floor No.2 Wire	B17	58	Back Door Lower Wire