


TRAILER TOWING

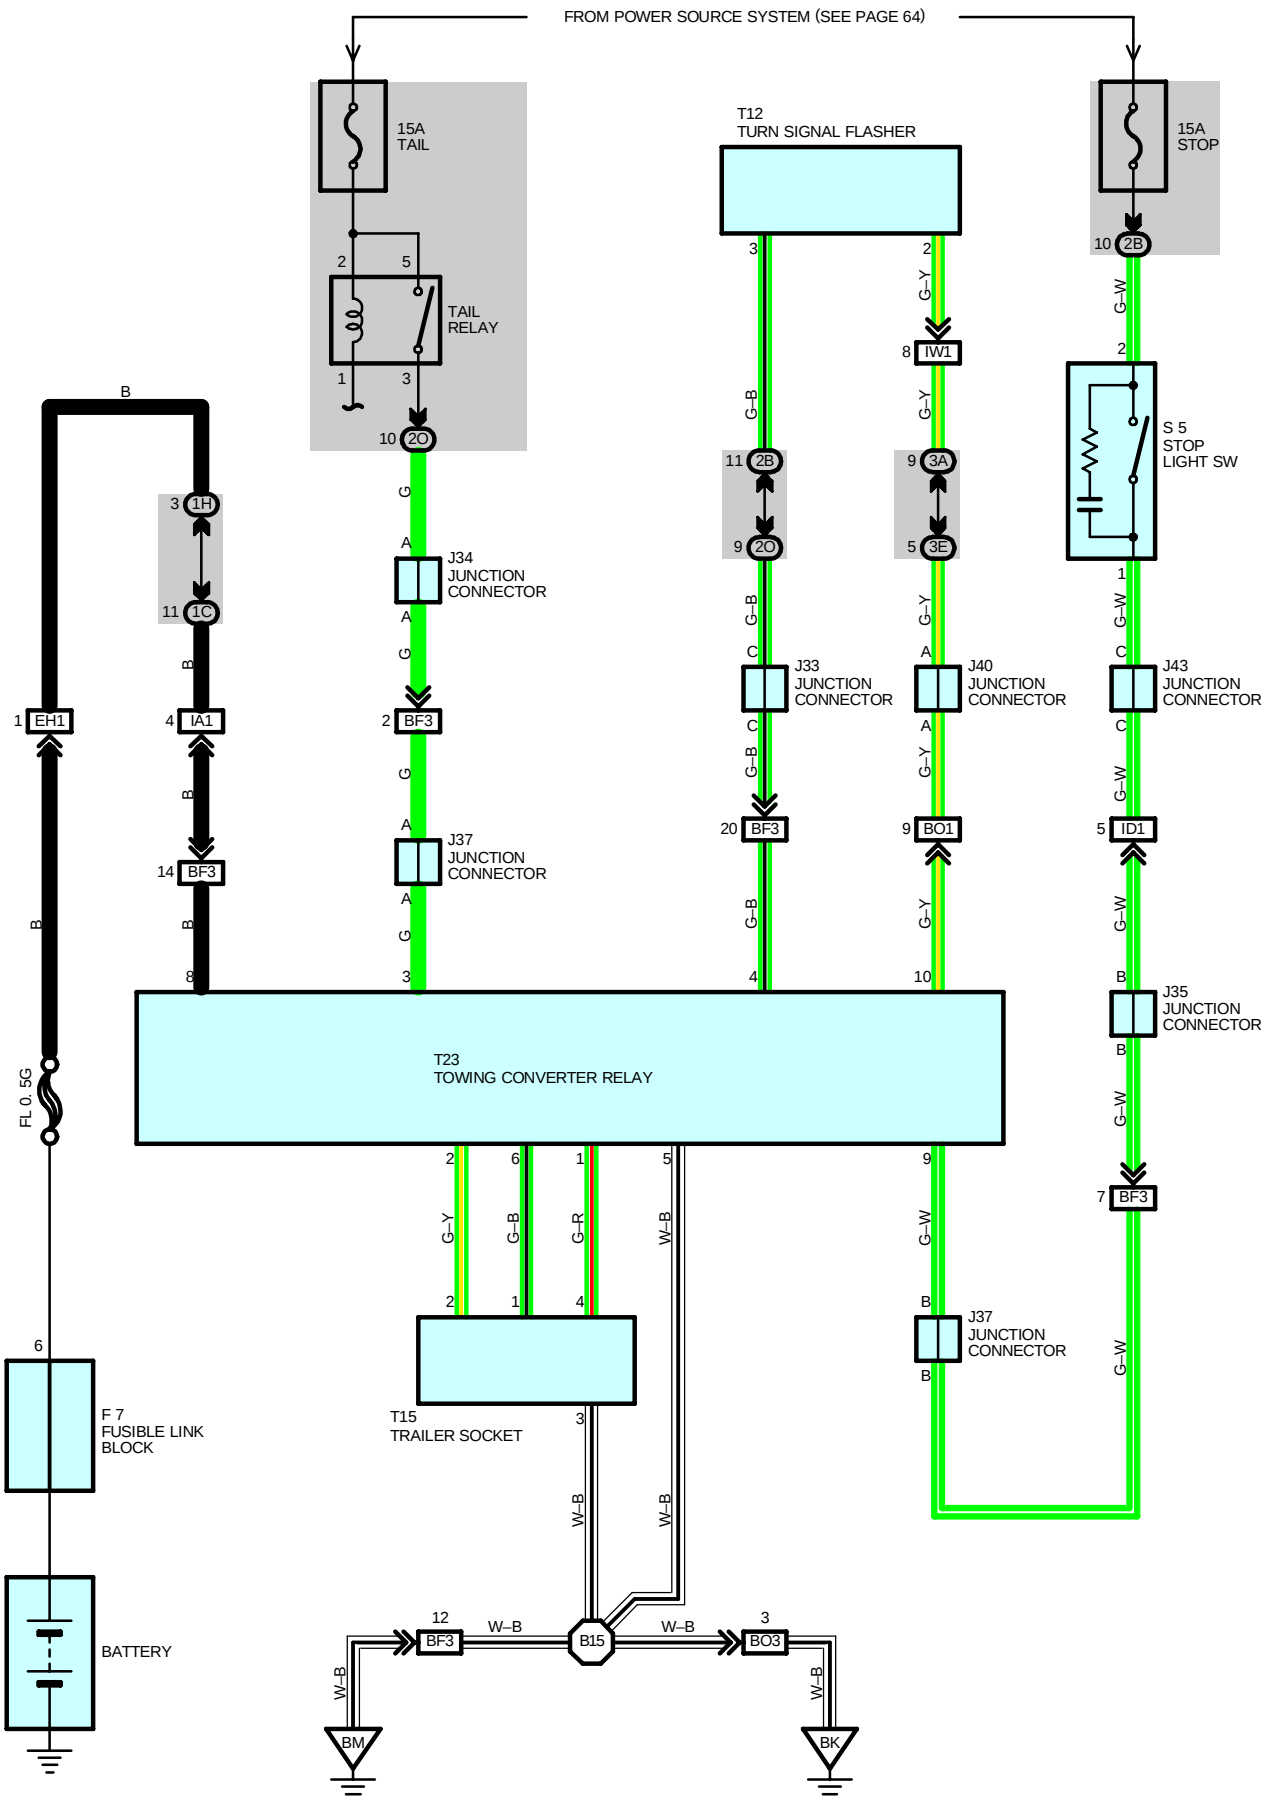

SERVICE HINTS

T23 TOWING CONVERTER RELAY

8-GROUND : Always approx. 12 volts

5-GROUND : Always continuity

S5 STOP LIGHT SW

2-1 : Closed with brake pedal depressed

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F7	38	J37	42	T12	41
J33	42	J40	42	T15	43
J34	42	J43	41	T23	43
J35	42	S5	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
3A	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EH1	46	Engine Room Main Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
IA1	48	Floor Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BO1	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO3		

: GROUND POINTS

Code	See Page	Ground Points Location
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B15	58	Floor No.3 Wire			