


FROM POWER SOURCE SYSTEM (SEE PAGE 64)

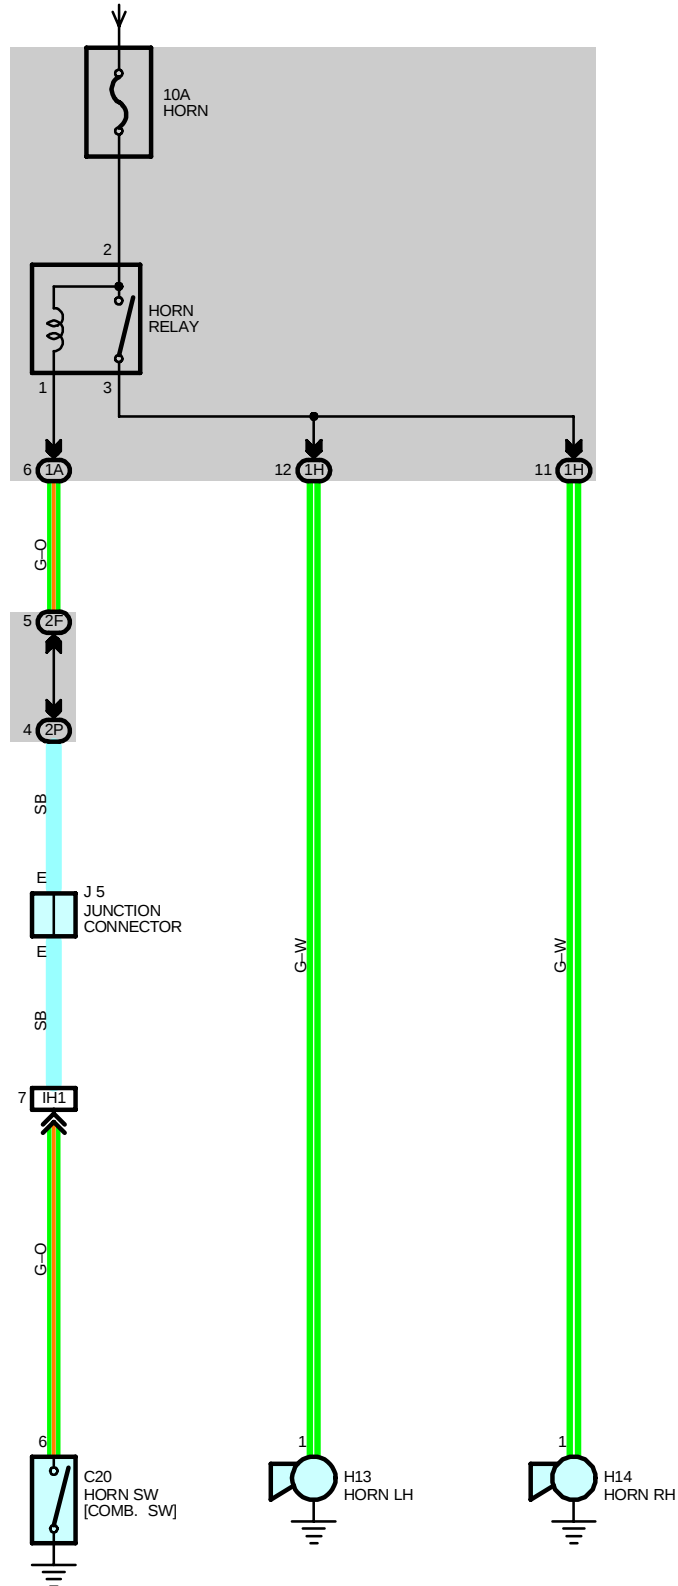

SERVICE HINTS

HORN RELAY

2-3 : Closed with horn SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C20	40	H14	39		
H13	39	J5	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)