



CENTER DIFFERENTIAL LOCK

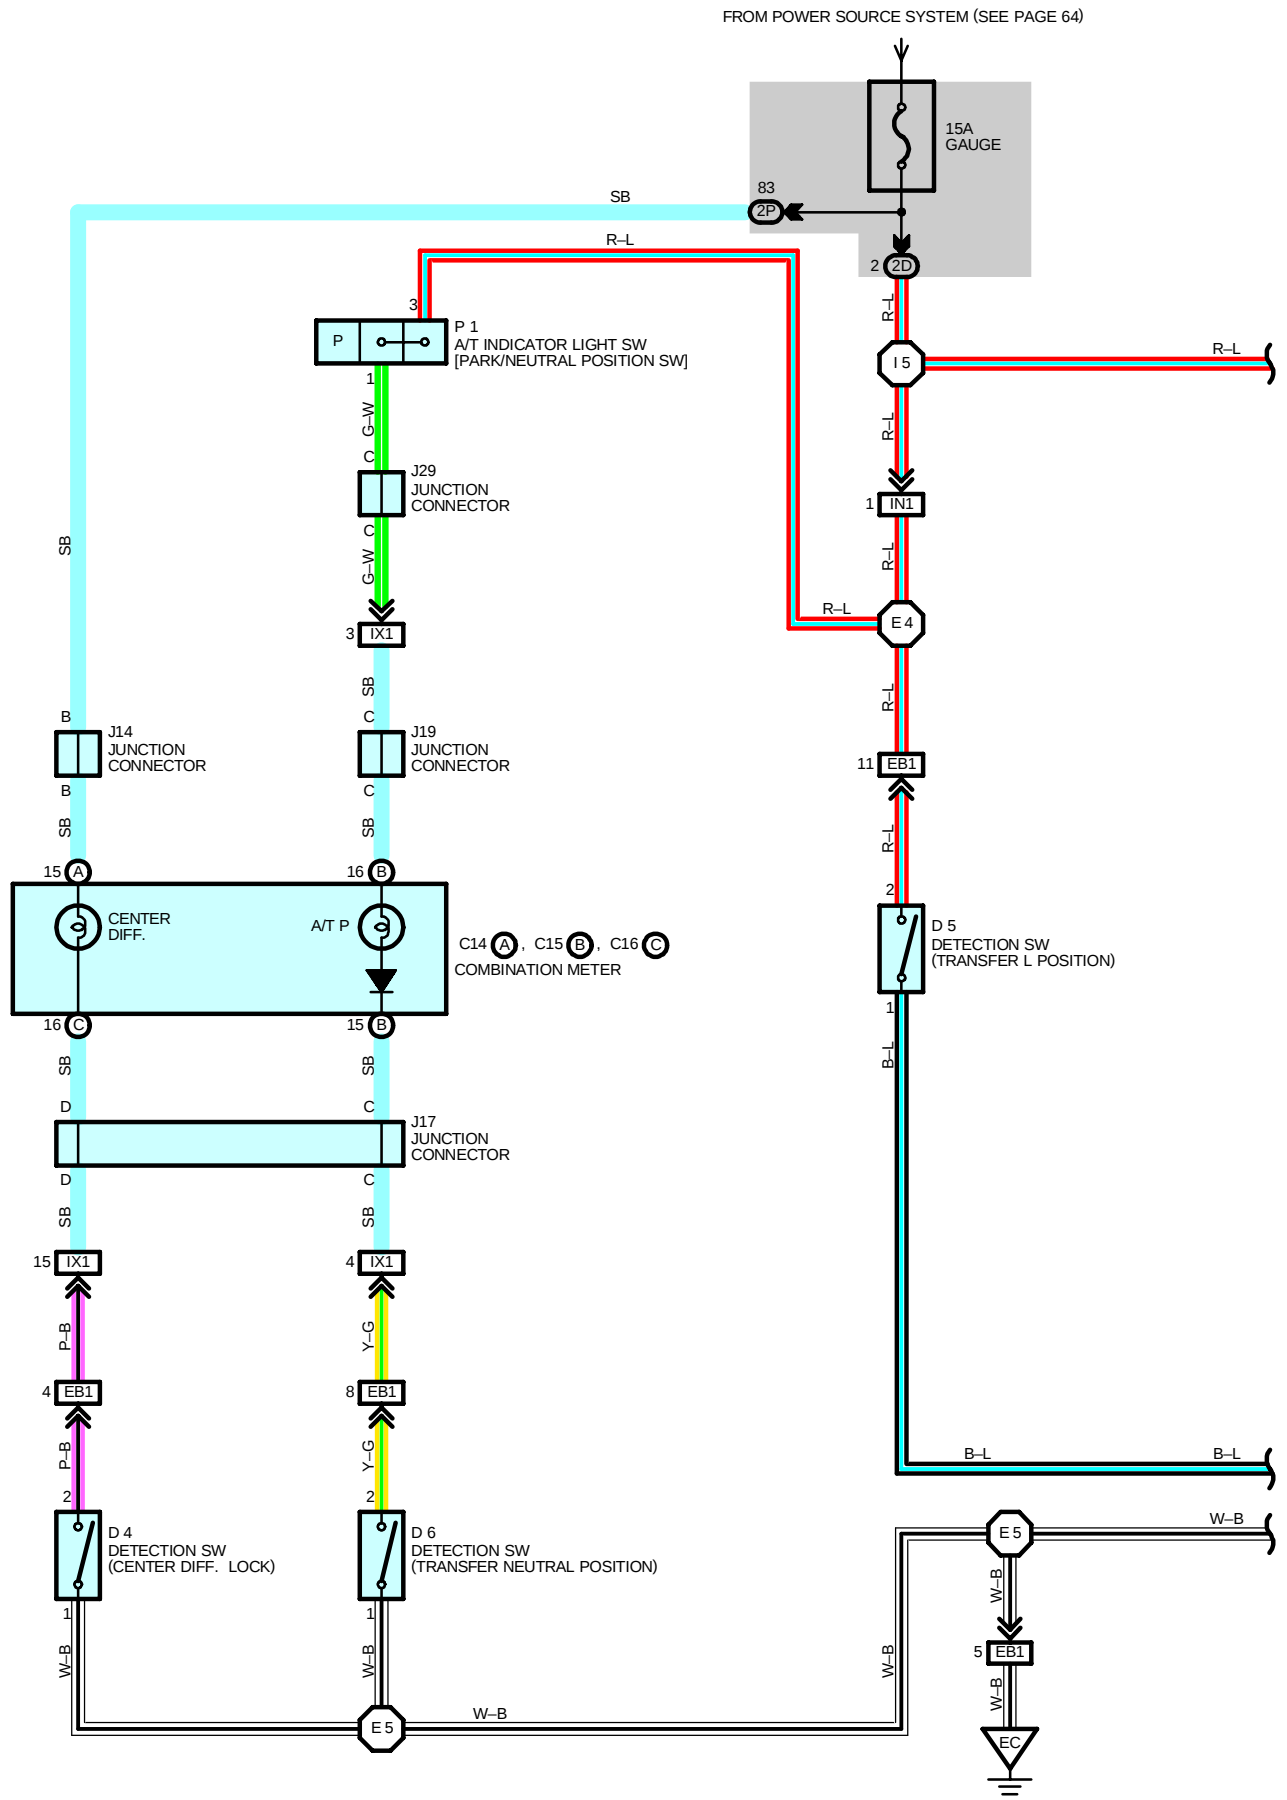

* 1 : W/ LEXUS NAVIGATION SYSTEM
 * 2 : W/O LEXUS NAVIGATION SYSTEM

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

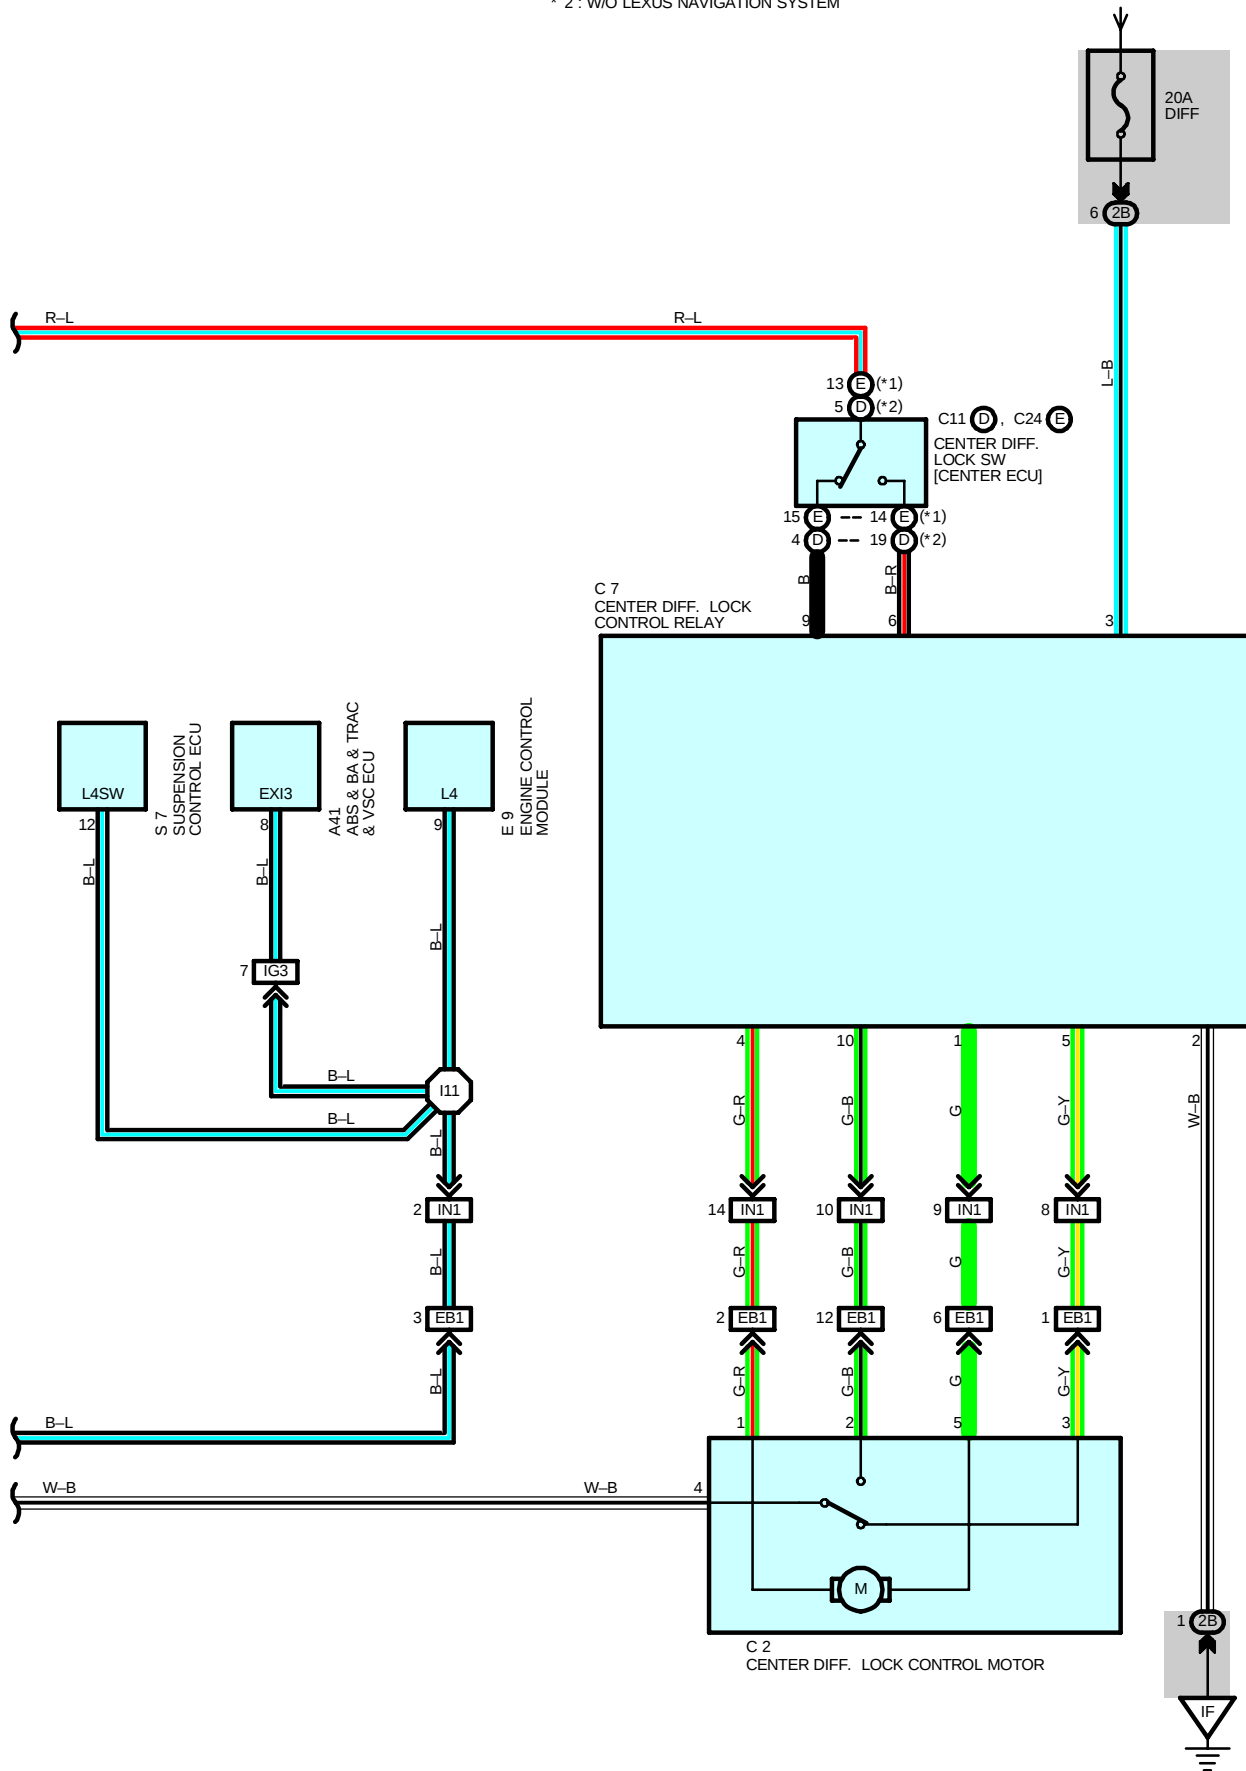

CENTER DIFFERENTIAL LOCK

SERVICE HINTS

C7 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

2-GROUND : Always continuity

: PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
A41		40		C16	C	40		J14		41	
C2		38		C24	E	40		J17		41	
C7		40		D4		38		J19		41	
C11	D	40		D5		38		J29		41	
C14	A	40		D6		38		P1		39	
C15	B	40		E9		40		S7		41	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	46	Engine Wire and Transmission Wire (On the Transmission)
IG3	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)

: GROUND POINTS

Code	See Page	Ground Points Location
EC	46	Rear Bank of Right Cylinder Head
IF	48	Set Bolt of Cowl Side J/B LH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	46	Engine Wire	I5	50	Dash Wire
E5	46	Transmission Wire	I11		