




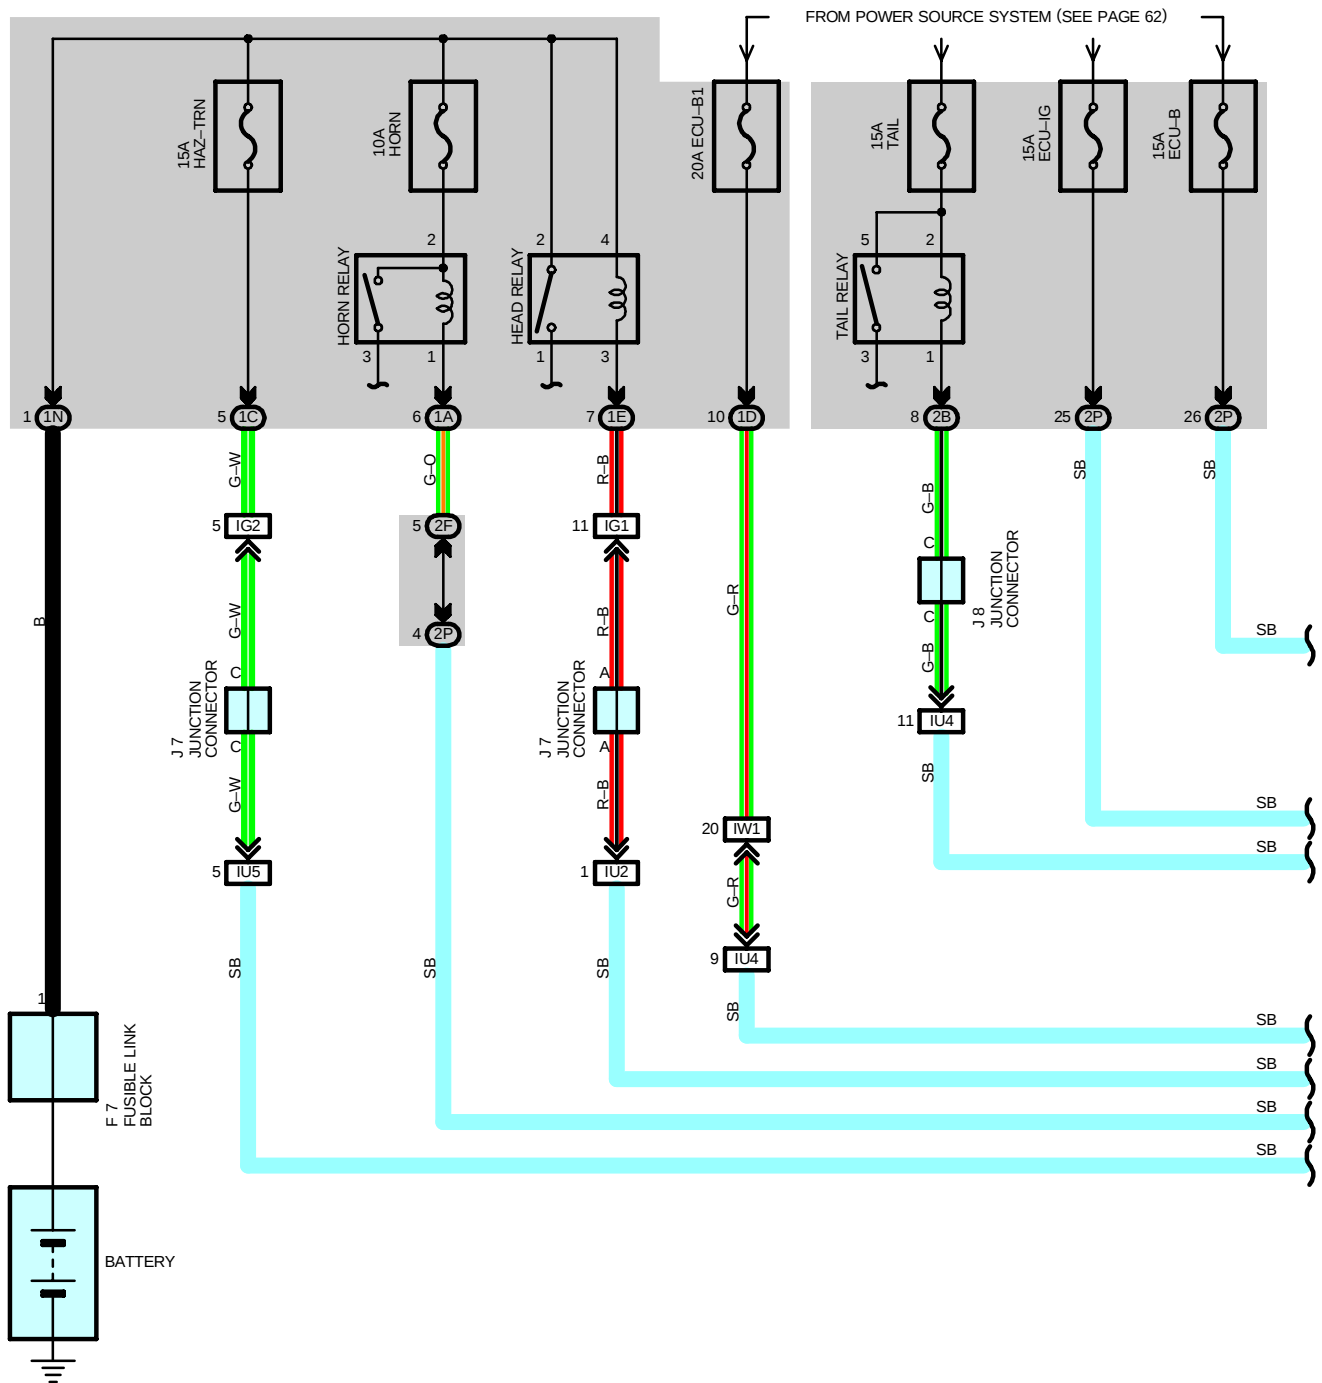

T 6 (B), T 7 (A)
THEFT DETERRENT ECU

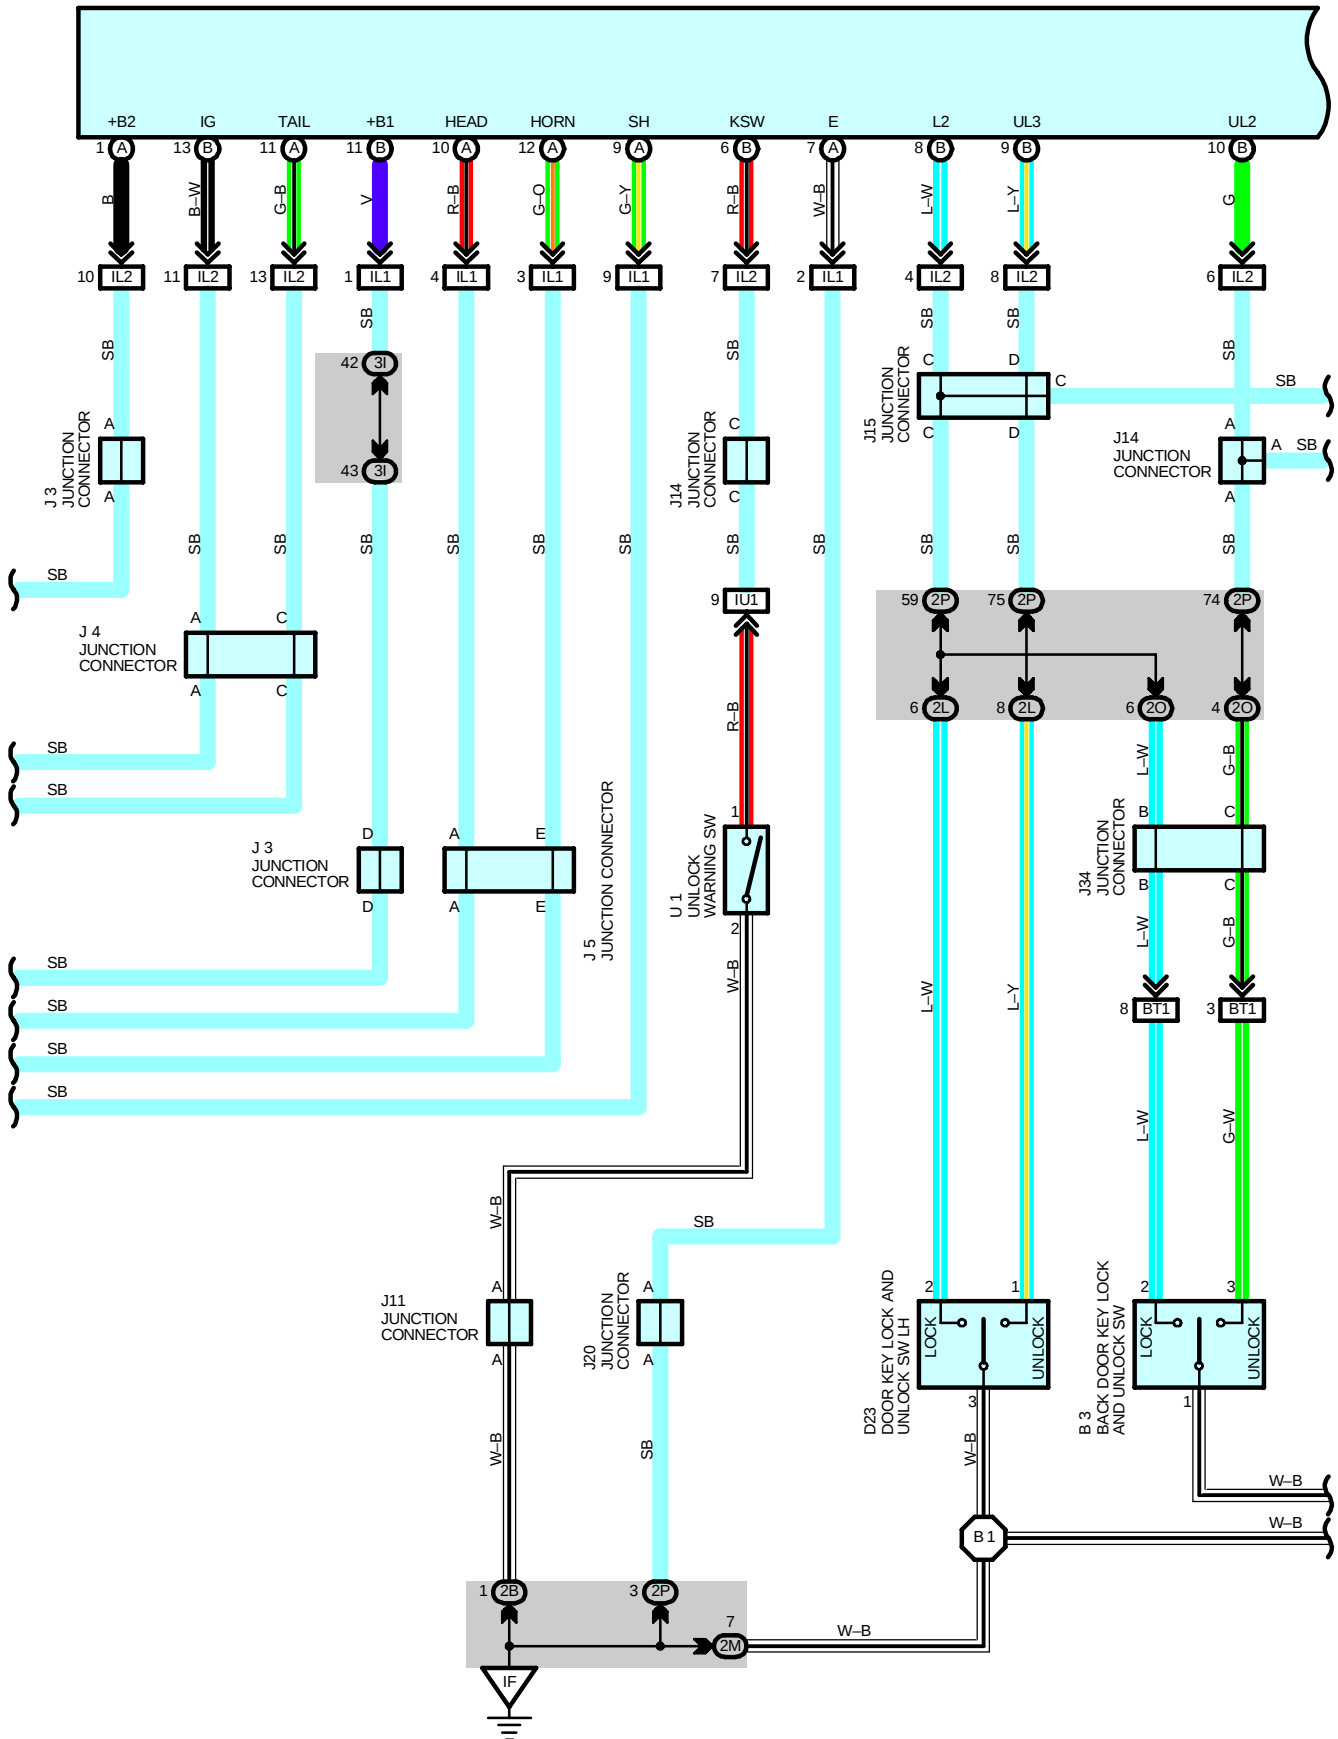


THEFT DETERRENT

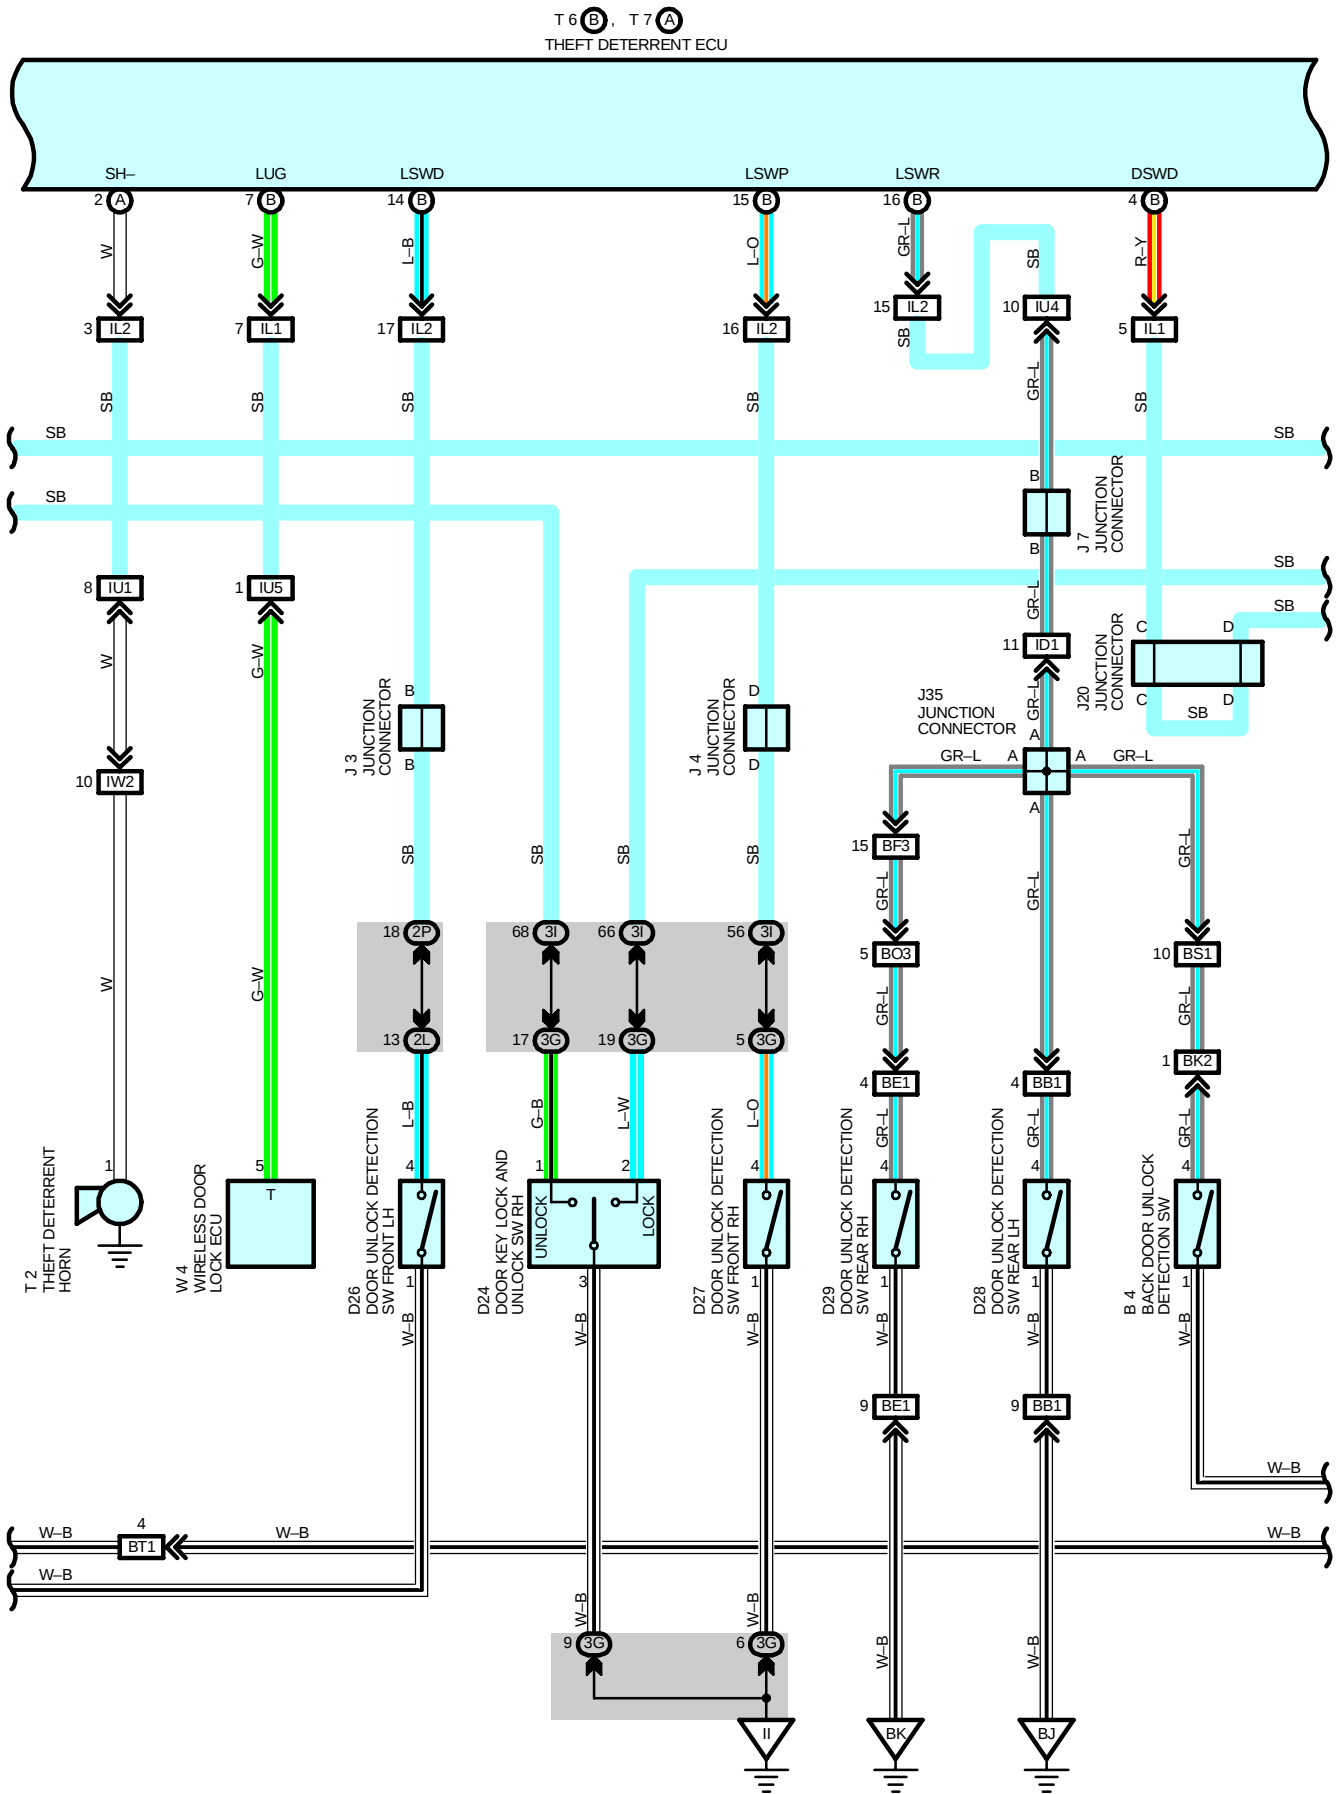

T 6 (B), T 7 (A)
THEFT DETERRANT ECU

* 1 : W/ LEXUS NAVIGATION SYSTEM
* 2 : W/O LEXUS NAVIGATION SYSTEM

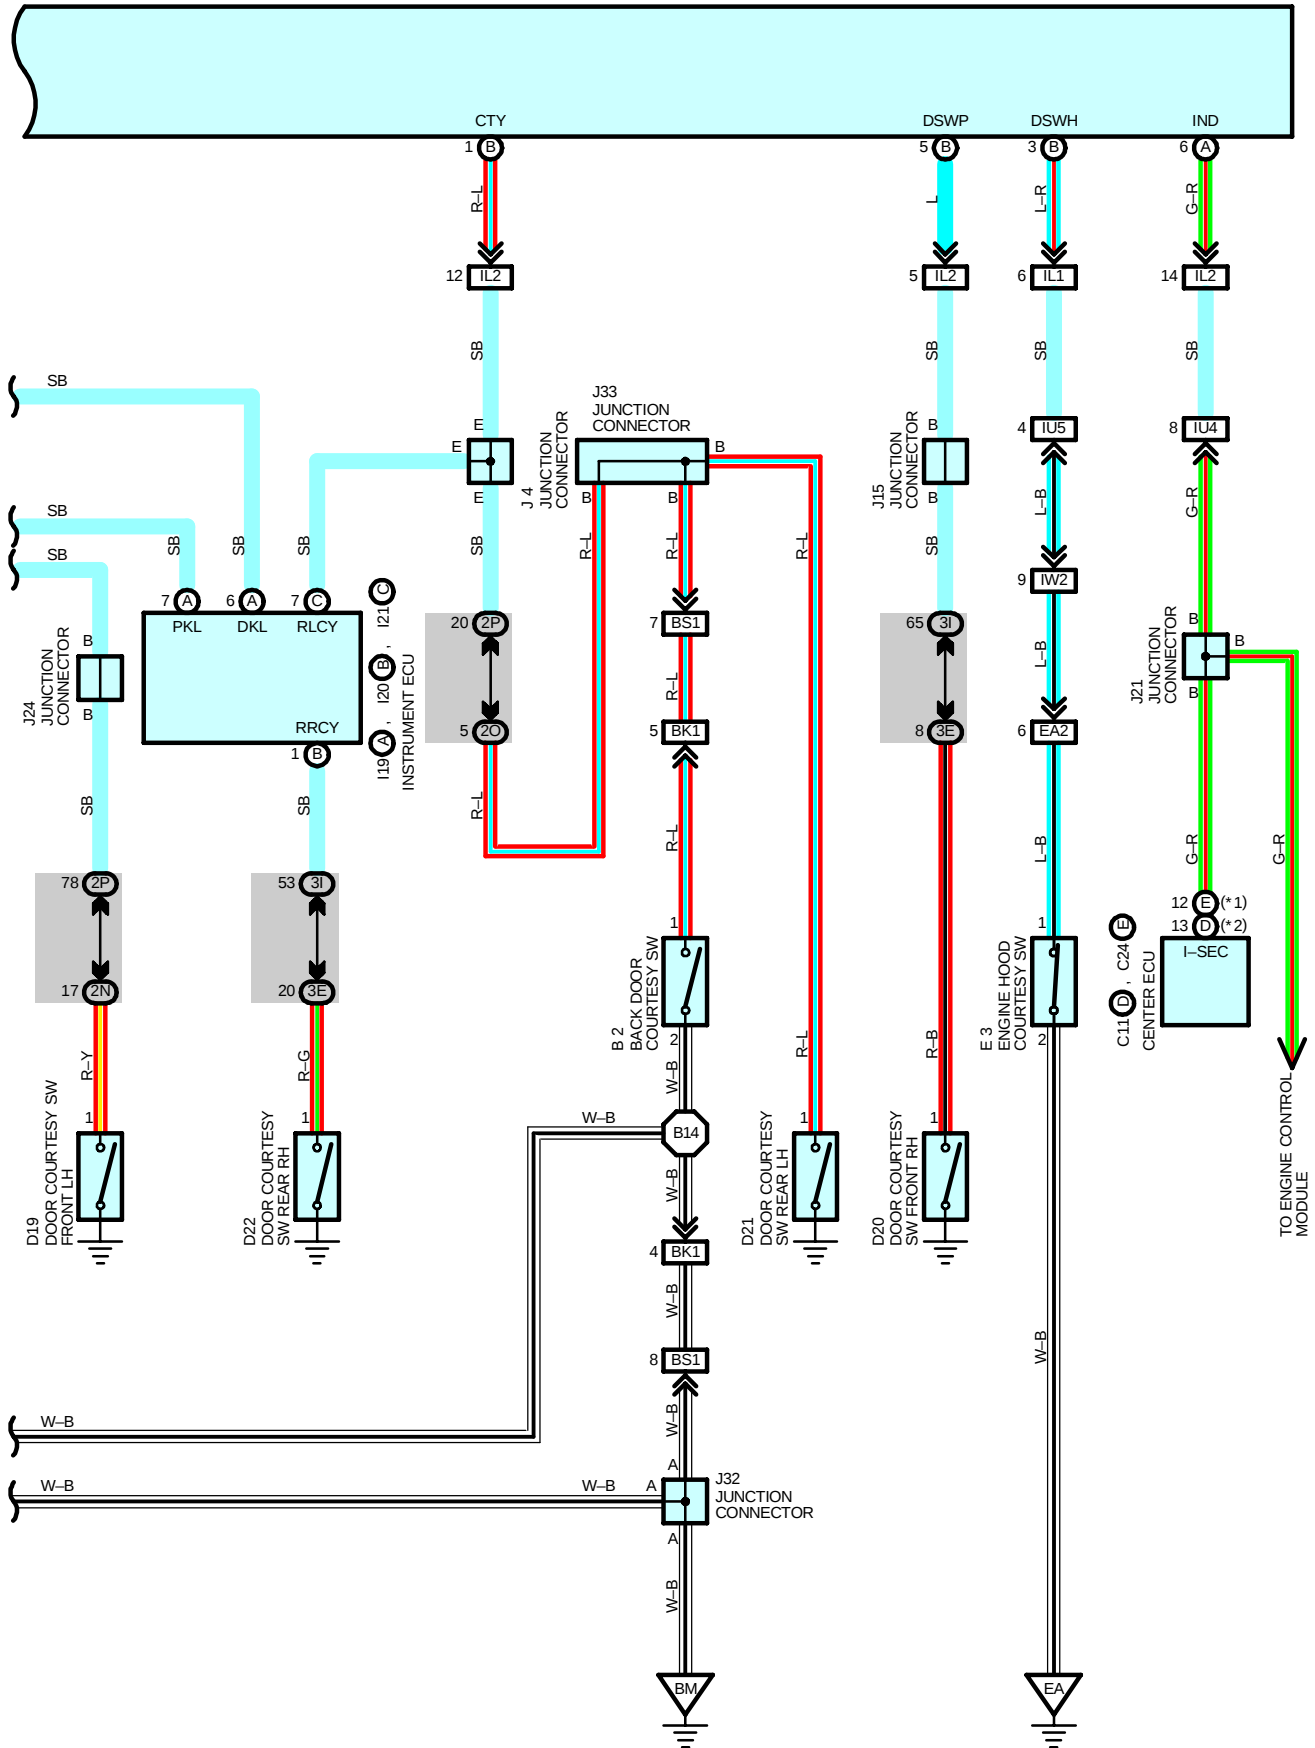

THEFT DETERRENT

SERVICE HINTS

D23, D24 DOOR KEY LOCK AND UNLOCK SW LH, RH

- 1-3 : Closed with door lock cylinder unlocked with key
- 2-3 : Closed with door lock cylinder locked with key

B3 BACK DOOR KEY LOCK AND UNLOCK SW

- 1-3 : Closed with door lock cylinder unlocked with key
- 1-2 : Closed with door lock cylinder locked with key

E3 ENGINE HOOD COURTESY SW

- 2-1 : Opened with engine hood open

U1 UNLOCK WARNING SW

- 2-1 : Closed with ignition key in cylinder

T6 (B), T7 (A) THEFT DETERRENT ECU

- (B) 6-GROUND : Continuity with ignition key in cylinder
- (B)15-GROUND : Continuity with front RH door unlocked
- (B)14-GROUND : Continuity with front LH door unlocked
- (B) 5-GROUND : Continuity with front RH door open
- (B) 4-GROUND : Continuity with front LH door open
- (B) 8-GROUND : Continuity with door key lock SW at **LOCK** position
- (A) 7-GROUND : Always continuity
- (B) 3-GROUND : Continuity with engine hood close
- (B) 9, (B) 10-GROUND : Continuity with door key lock SW to **UNLOCK** position
- (A)1, (A) 9, (B) 11-GROUND : Always approx. **12** volts

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B2	42	D29	42	J20	41
B3	42	E3	38	J21	41
B4	42	F7	38	J24	41
C11	D 40	I19	A 40	J32	42
C24	E 40	I20	B 40	J33	42
D19	42	I21	C 40	J34	42
D20	42	J3	41	J35	42
D21	42	J4	41	T2	39
D22	42	J5	41	T6	B 41
D23	42	J7	41	T7	A 41
D24	42	J8	41	U1	41
D26	42	J11	41	W4	41
D27	42	J14	41		
D28	42	J15	41		

THEFT DETERRENT



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1D		
1E		
1N	23	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2O		
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3G	32	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	46	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG2		
IL1	50	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IL2		
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2		
IU4		
IU5		
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IW2		
BB1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BE1	56	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BK1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2		
BO3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BS1	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)
BT1		



: GROUND POINTS

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH
BJ	56	Under the Driver's Seat
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	58	Front Door LH Wire	B14	58	Back Door Upper Wire