


AUTOMATIC GLARE-RESISTANT EC MIRROR WITH COMPASS

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

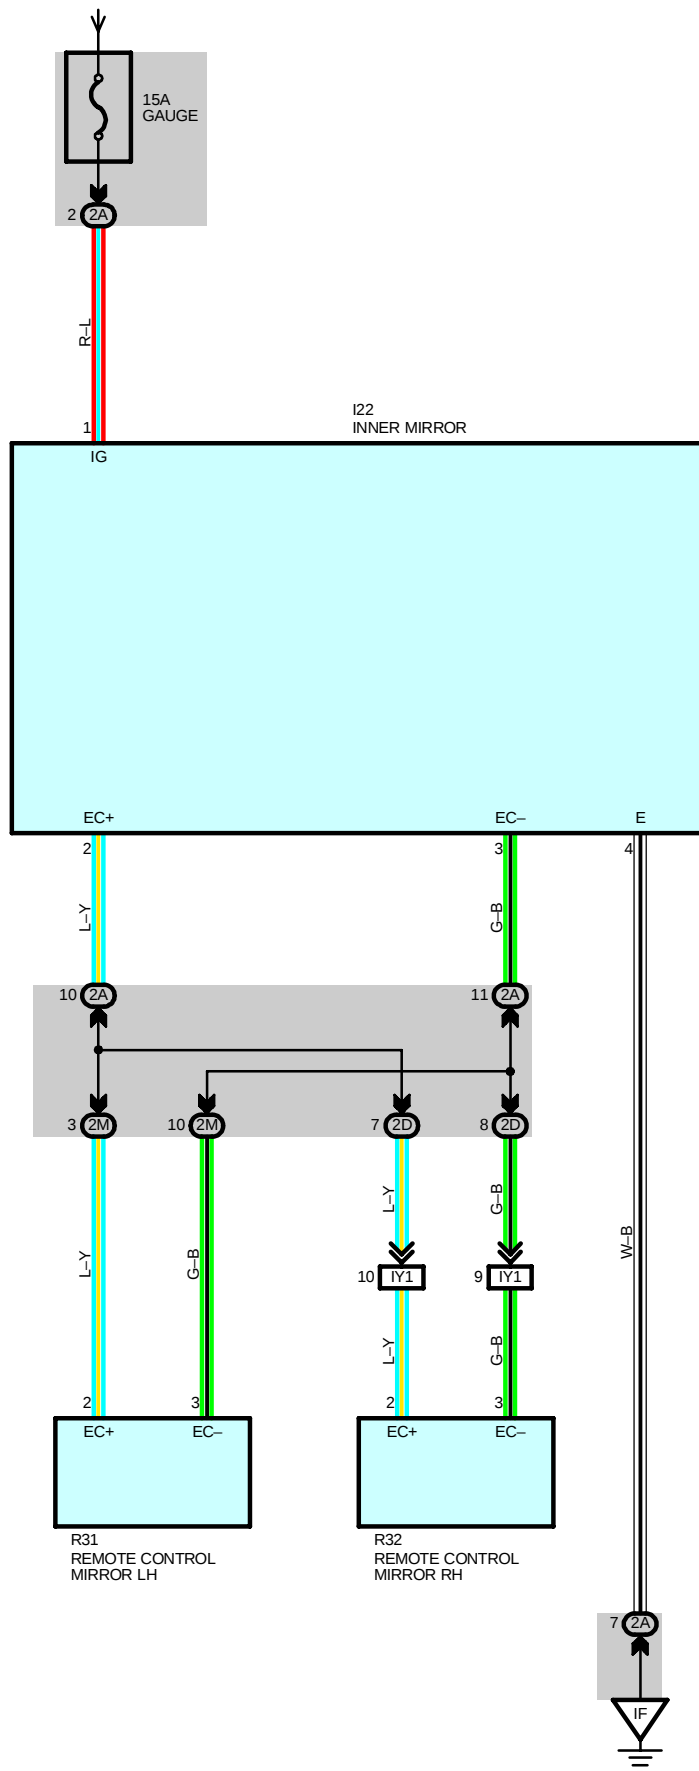

SERVICE HINTS

I22 INNER MIRROR

- 1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
4-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I22	42	R31	43	R32	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	26	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2M	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IY1	54	Front Door RH Wire and Dash Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH