


POWER REAR QUARTER WINDOW

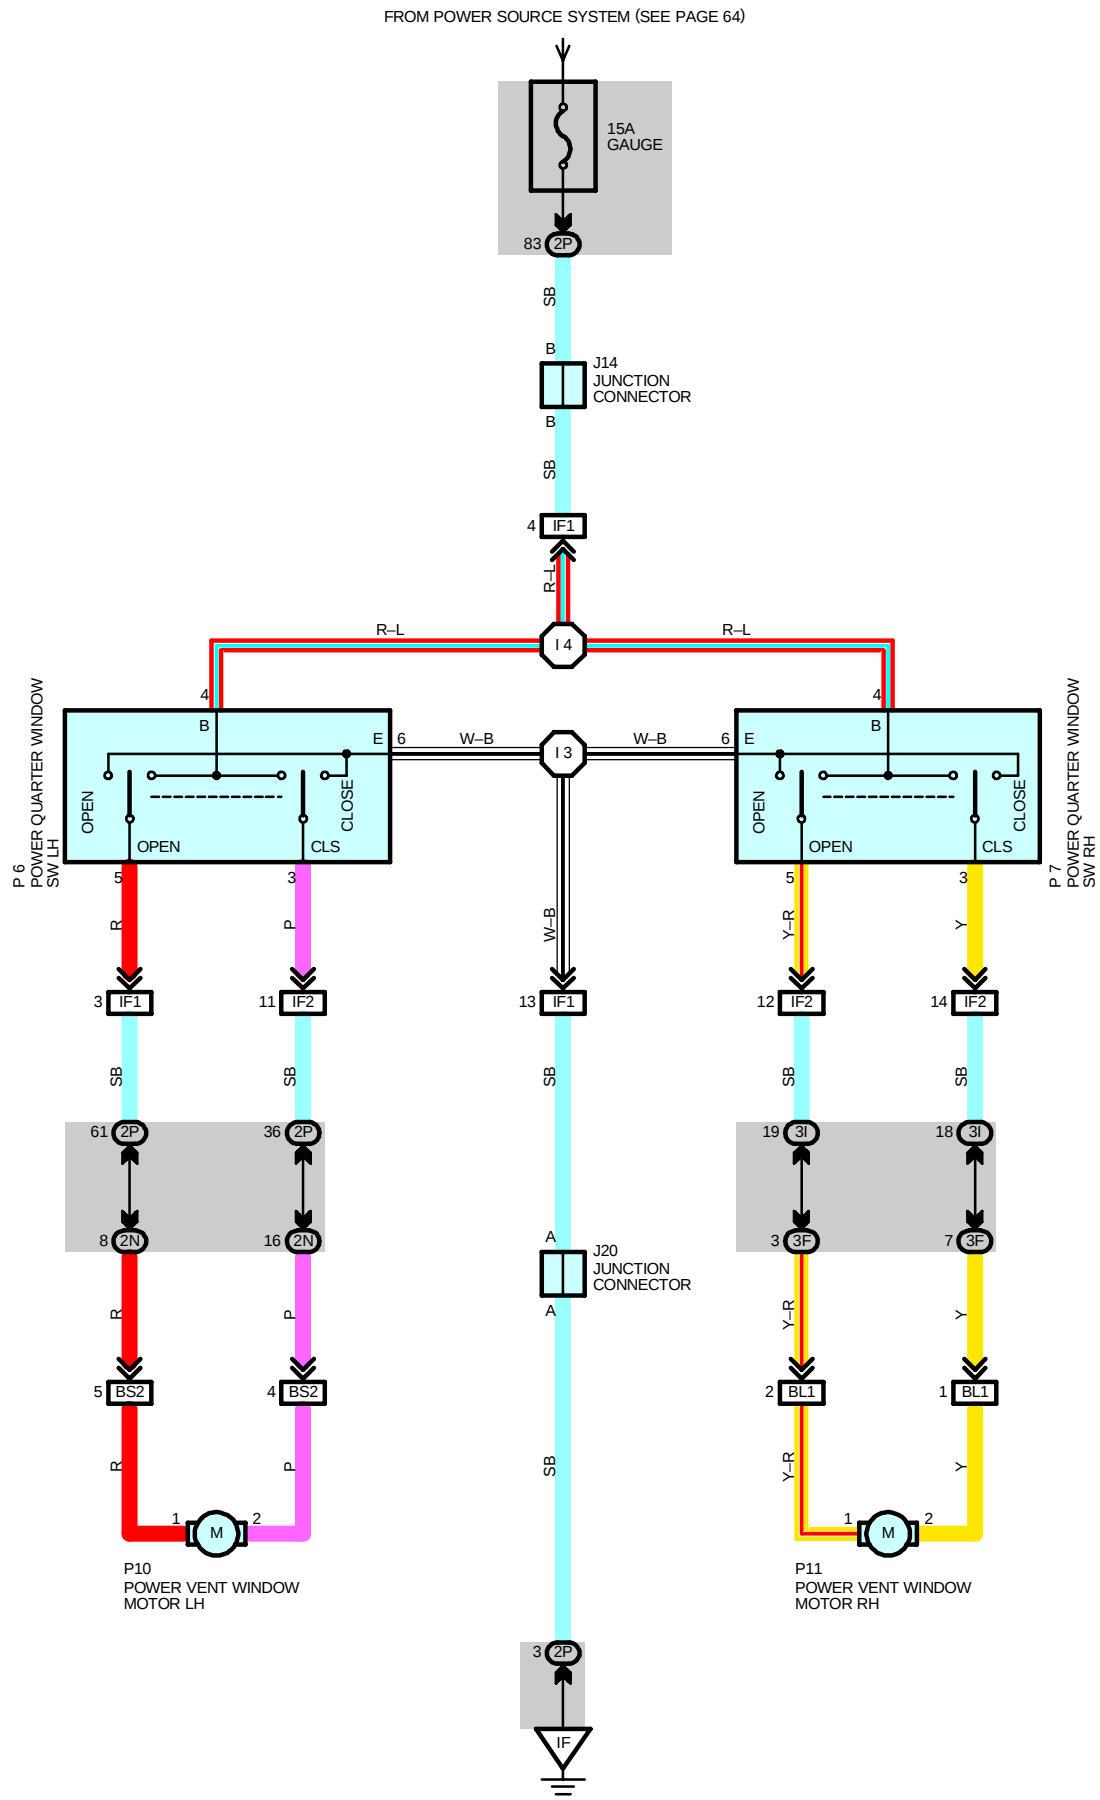

SERVICE HINTS

P6 POWER QUARTER WINDOW SW LH

4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

P7 POWER QUARTER WINDOW SW RH

4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J14	41	P6	41	P10	43
J20	41	P7	41	P11	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3F	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
BL1	58	Roof No.2 Wire and Floor No.2 Wire (Right Side Rear Quarter Panel)
BS2	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	50	Instrument Panel Wire	I4	50	Instrument Panel Wire