


AUTO ANTENNA

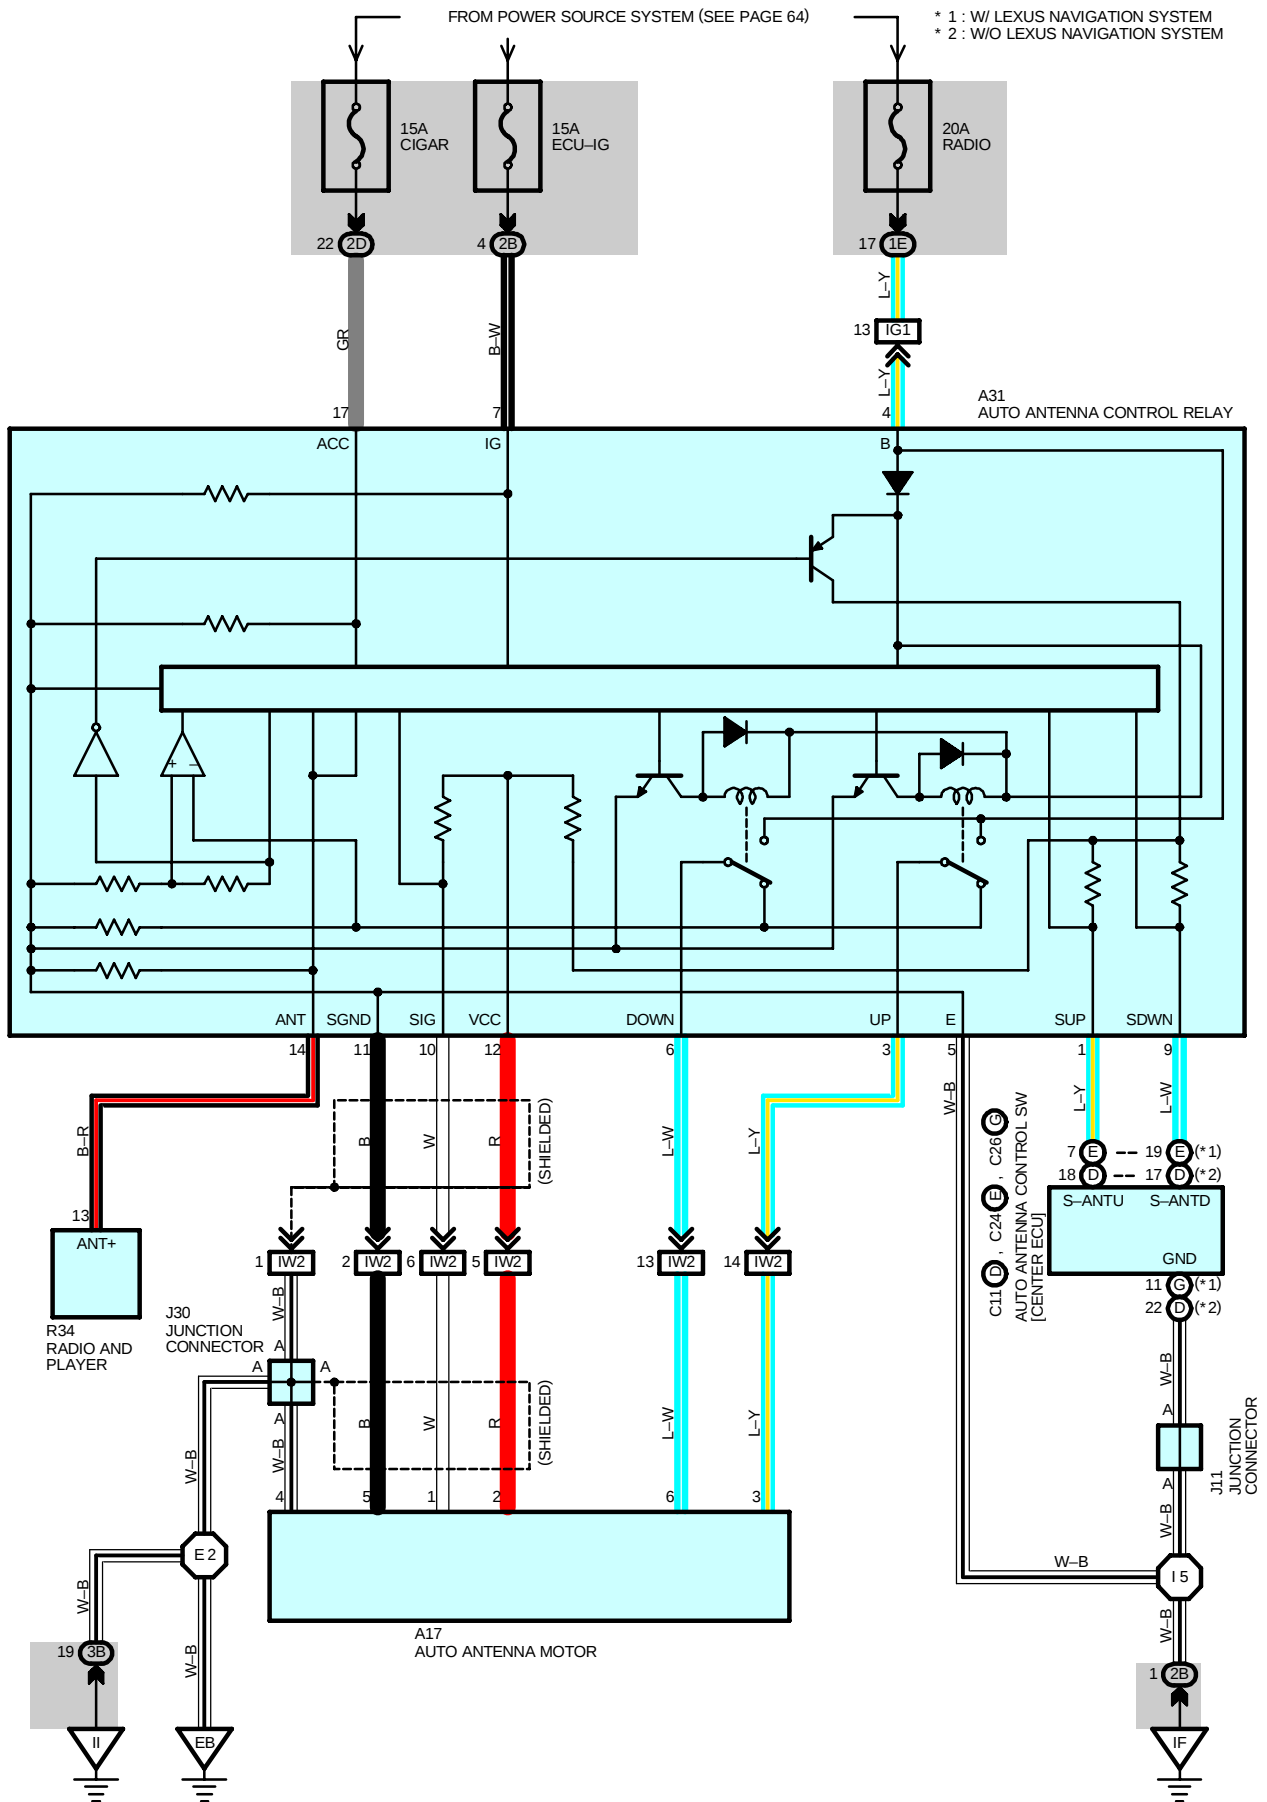

SERVICE HINTS

A31 AUTO ANTENNA CONTROL RELAY

- 4-GROUND : Always approx. **12** volts
- 7-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 17-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 5-GROUND : Always continuity

: PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
A17		38		C24	E	40		J30	41		
A31		40		C26	G	40		R34	41		
C11	D	40		J11		41					

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
3B	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IW2	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)

: GROUND POINTS

Code	See Page	Ground Points Location
EB	46	Front Right Side of Fender Apron
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	46	Engine Room No.2 Wire	I5	50	Dash Wire