



CELLULAR MOBILE TELEPHONE

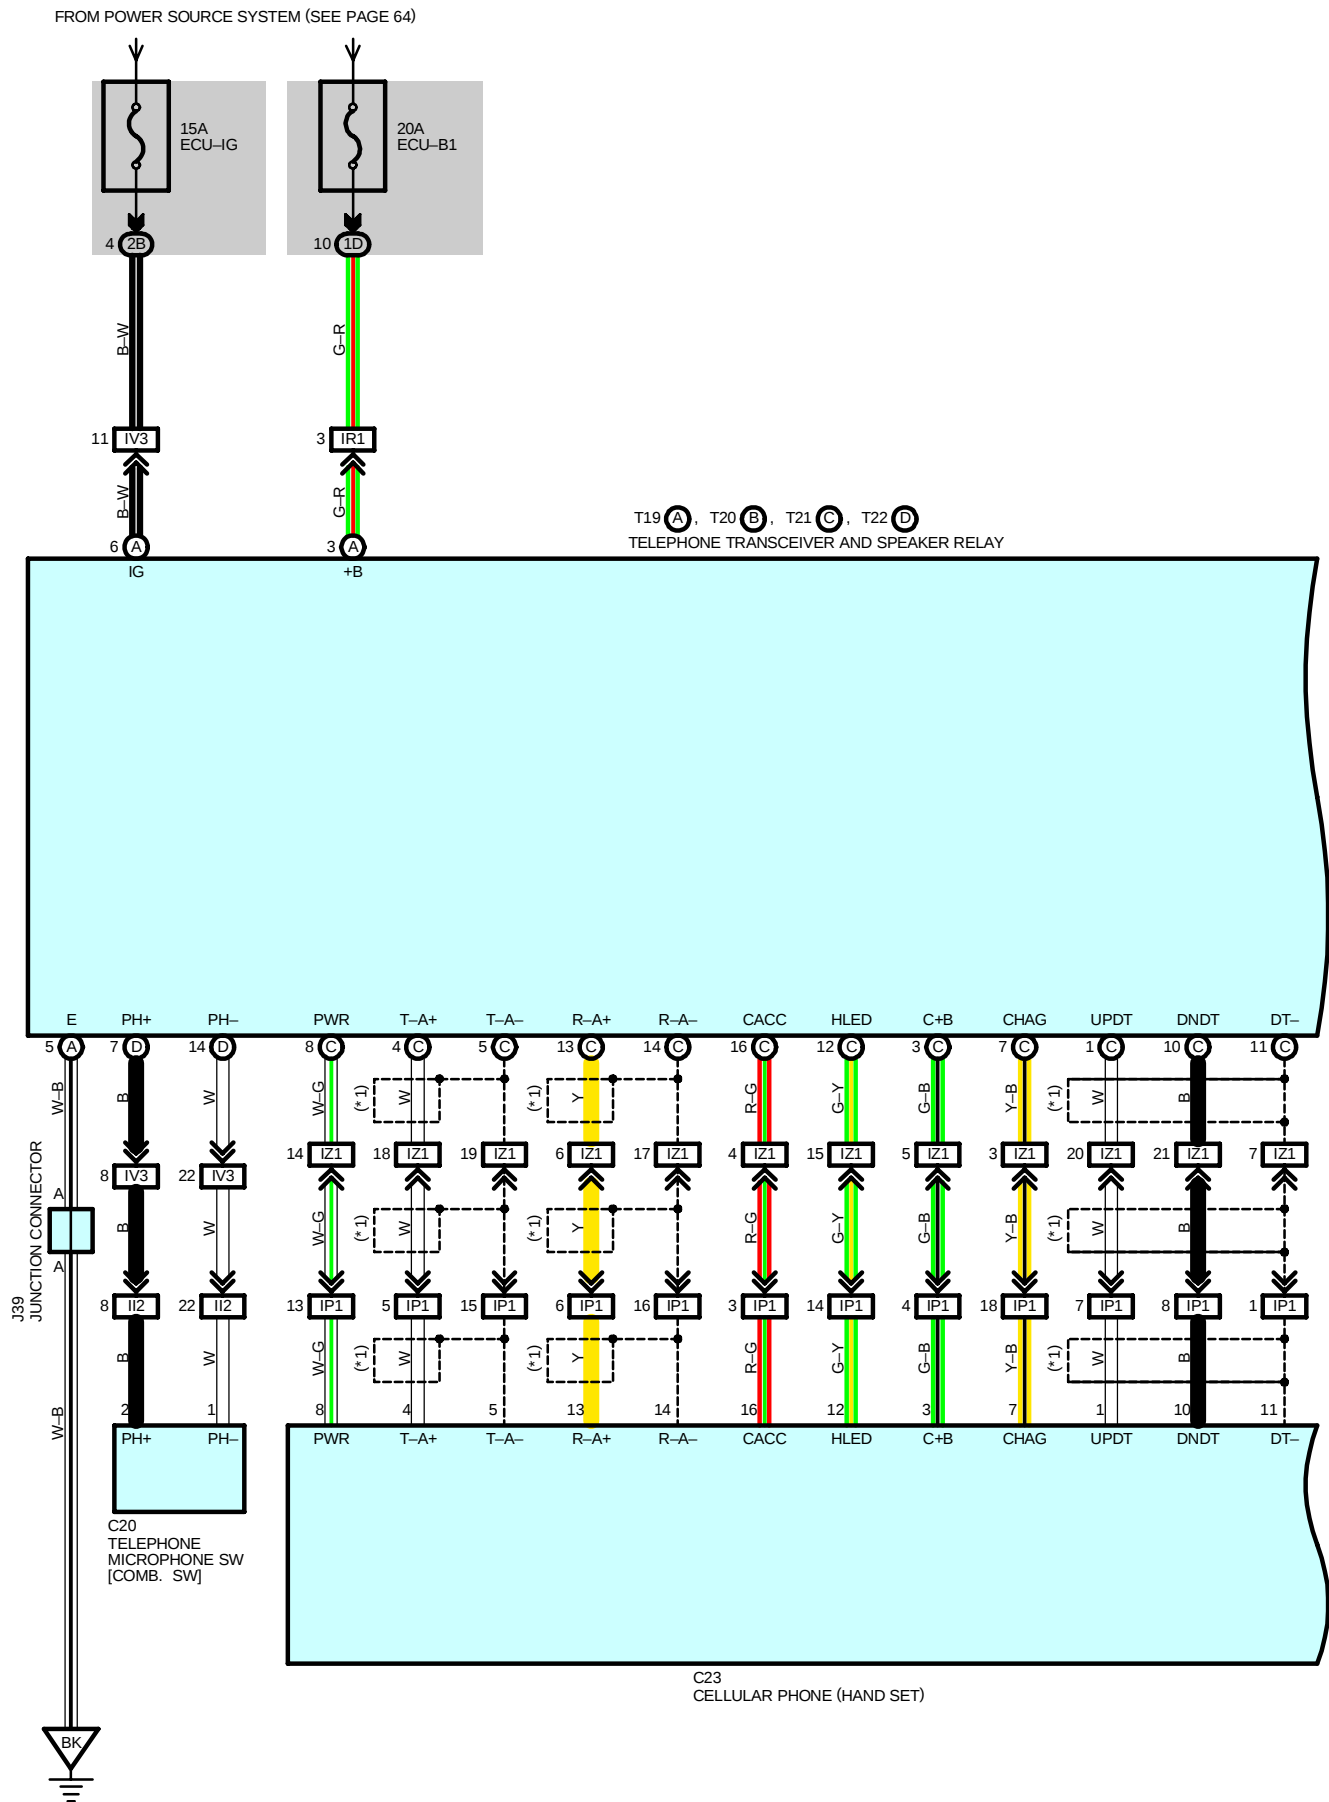

- * 1 : SHIELDED
- * 2 : W/ LEXUS NAVIGATION SYSTEM
- * 3 : W/O LEXUS NAVIGATION SYSTEM

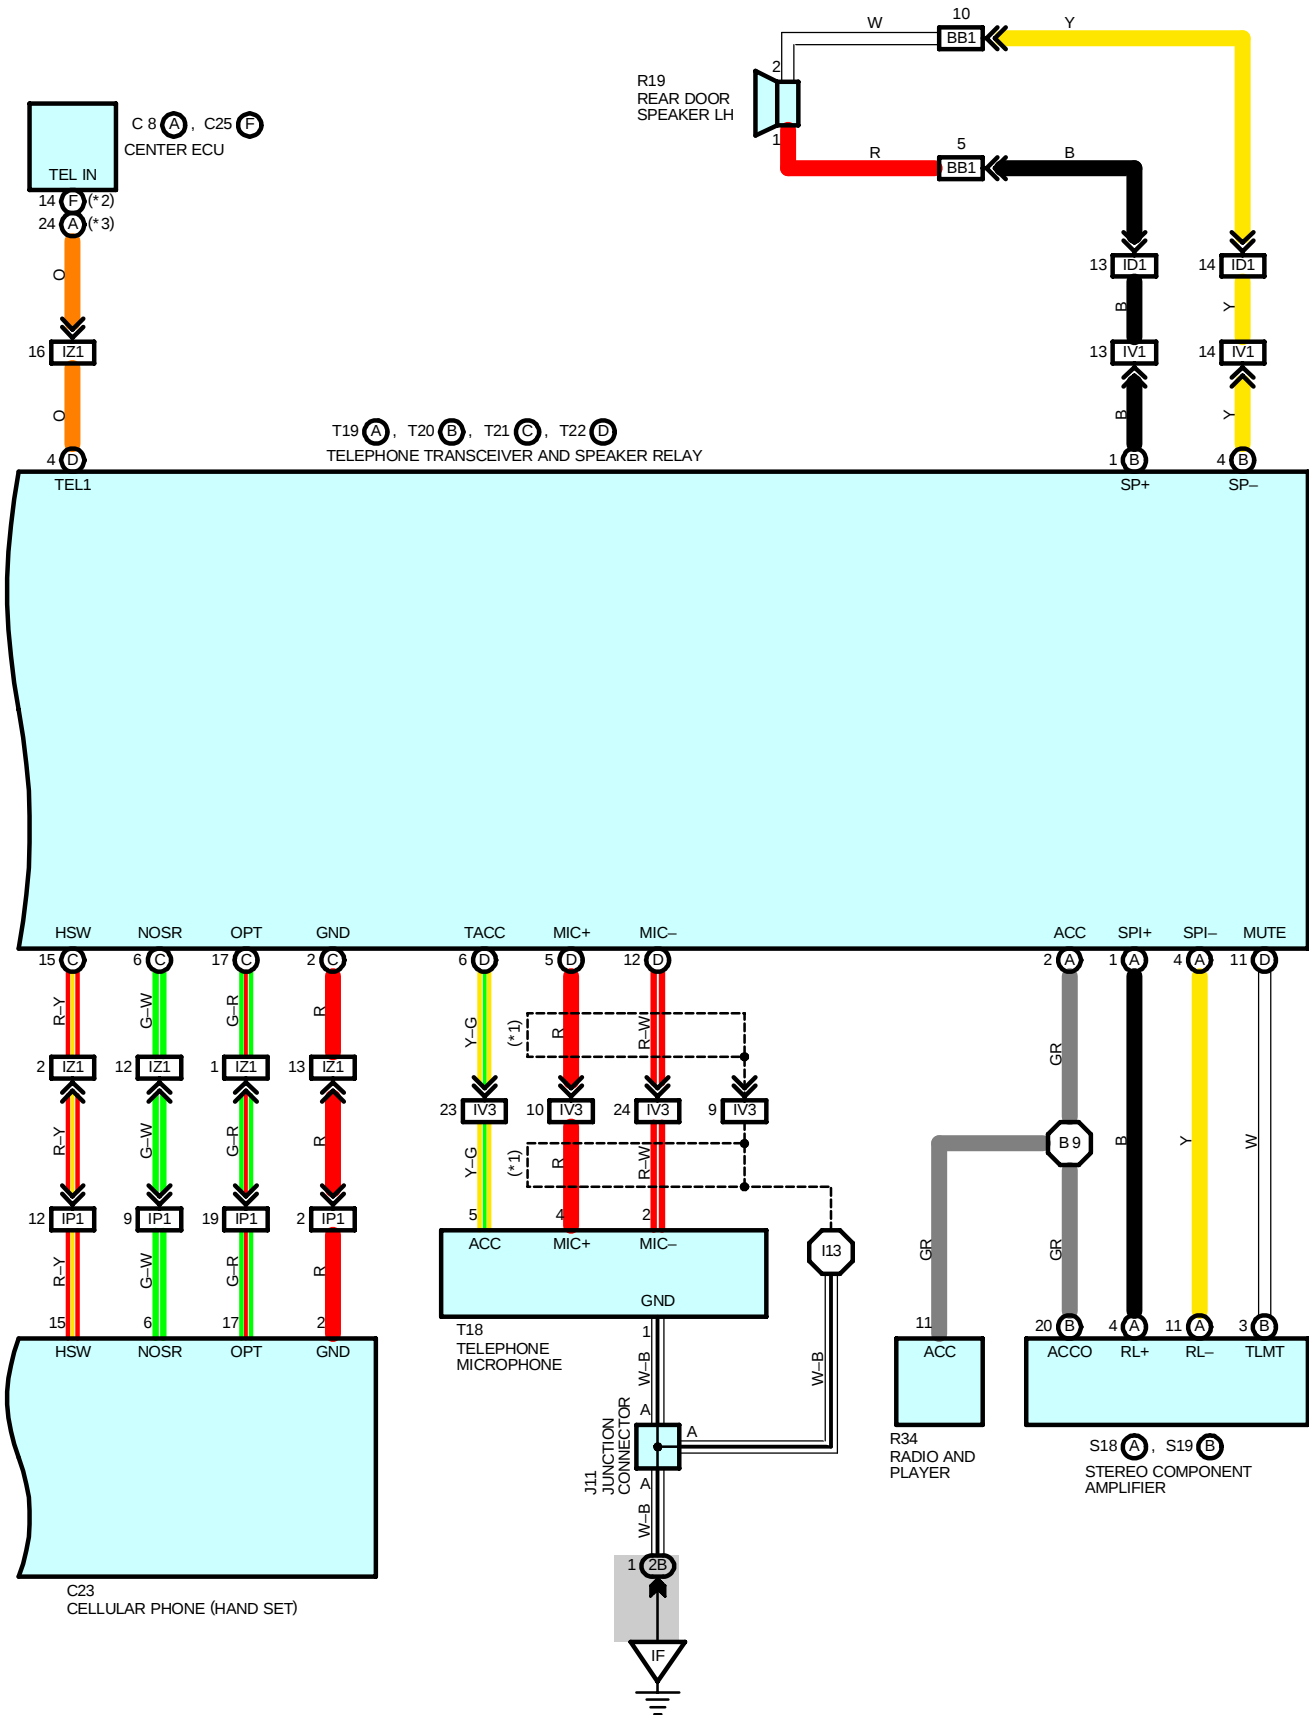

CELLULAR MOBILE TELEPHONE

SERVICE HINTS

T19 TELEPHONE TRANSCEIVER AND SPEAKER RELAY

- 3-GROUND : Always approx. **12** volts
- 6-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 5-GROUND : Always continuity

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C8	A	40	J39		42	T18		41
C20		40	R19		43	T19	A	43
C23		40	R34		41	T20	B	43
C25	F	40	S18	A	43	T21	C	43
J11		41	S19	B	43	T22	D	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
II2	50	Column Wire and Dash Wire (Near the Ignition SW)
IP1	52	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IR1	52	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IV3		
IZ1	54	Floor No.2 Wire and Dash Wire (Right Side of Front Console)
BB1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
BK	56	Front Side Under the Front Passenger's Seat

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I13	50	Dash Wire	B9	58	Floor No.2 Wire