




COMBINATION METER

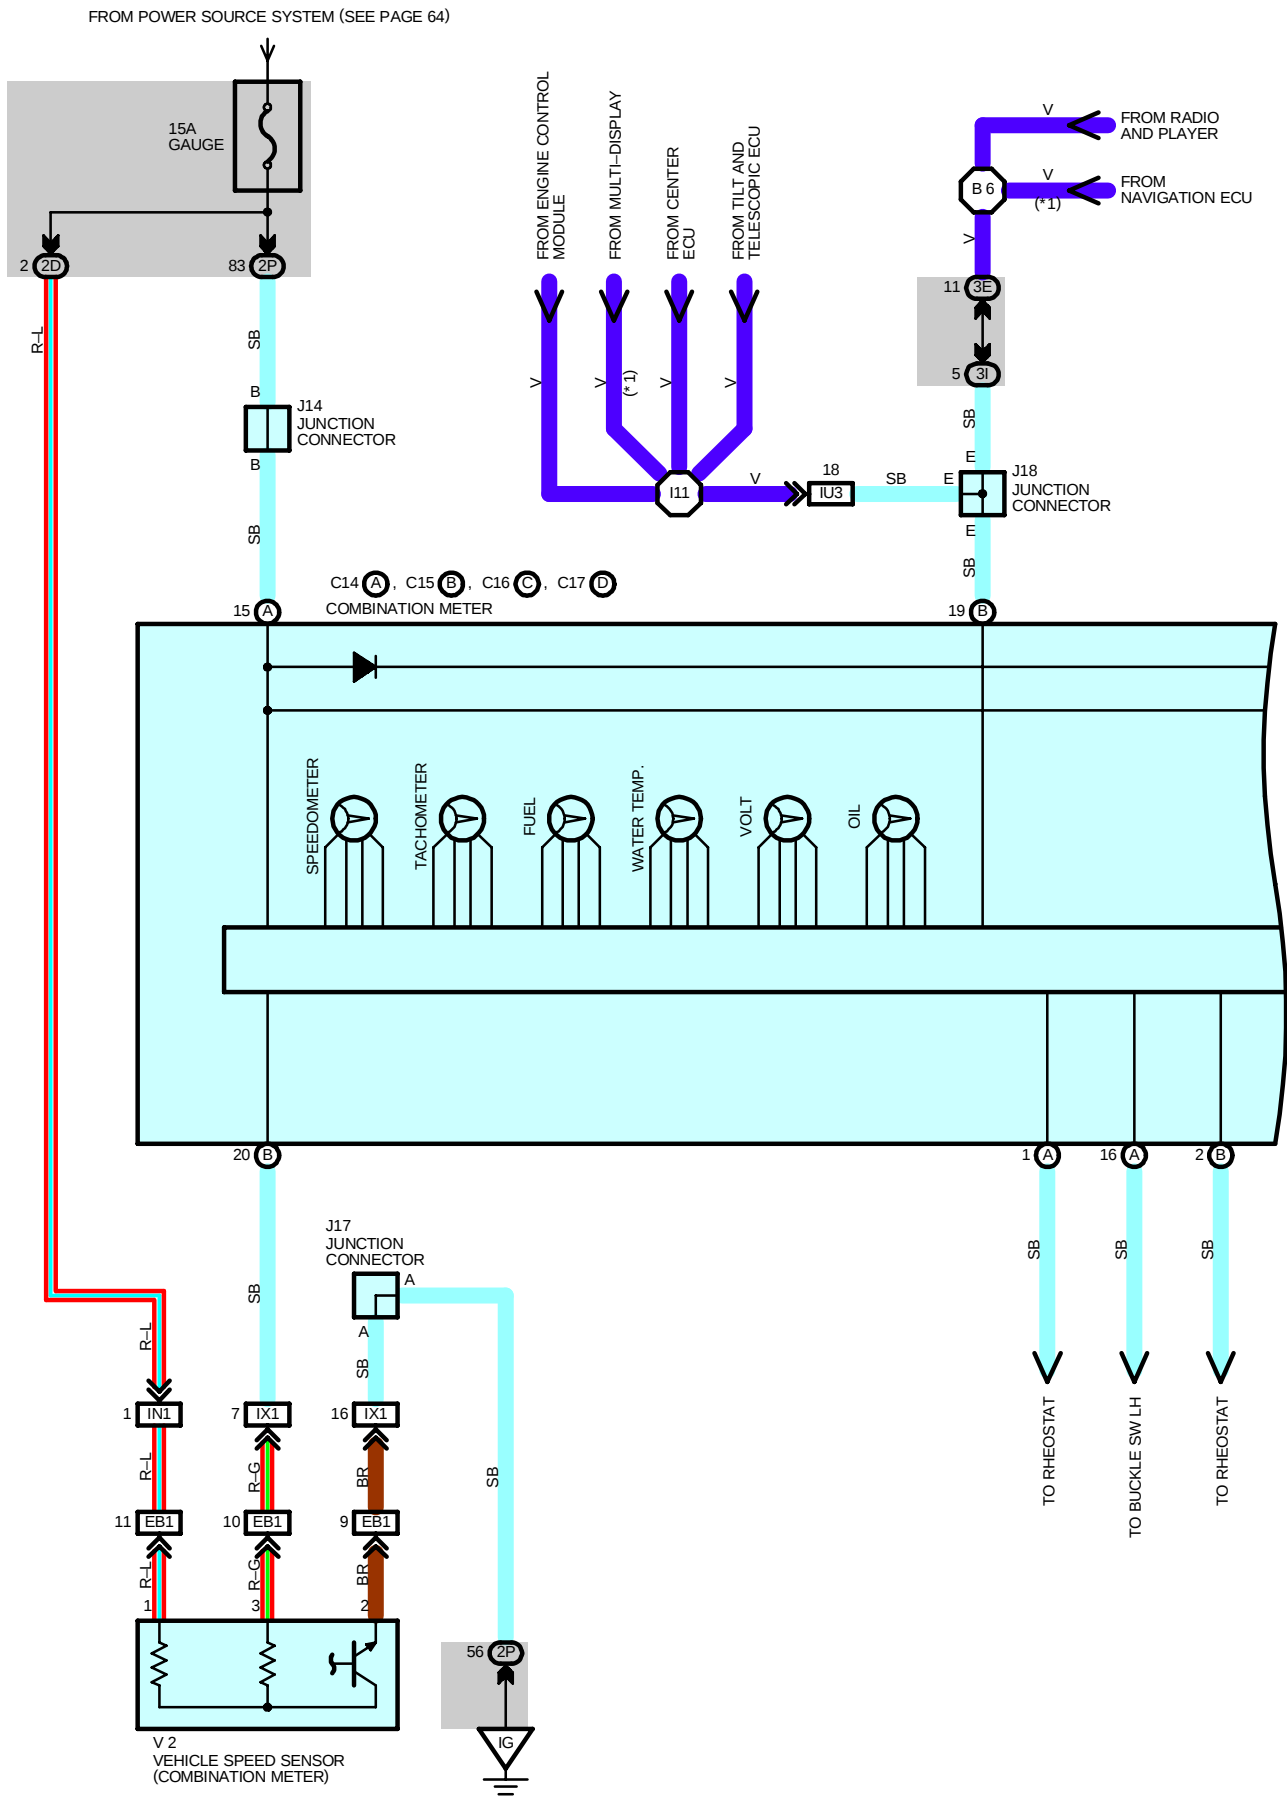


FROM POWER SOURCE SYSTEM (SEE PAGE 64)

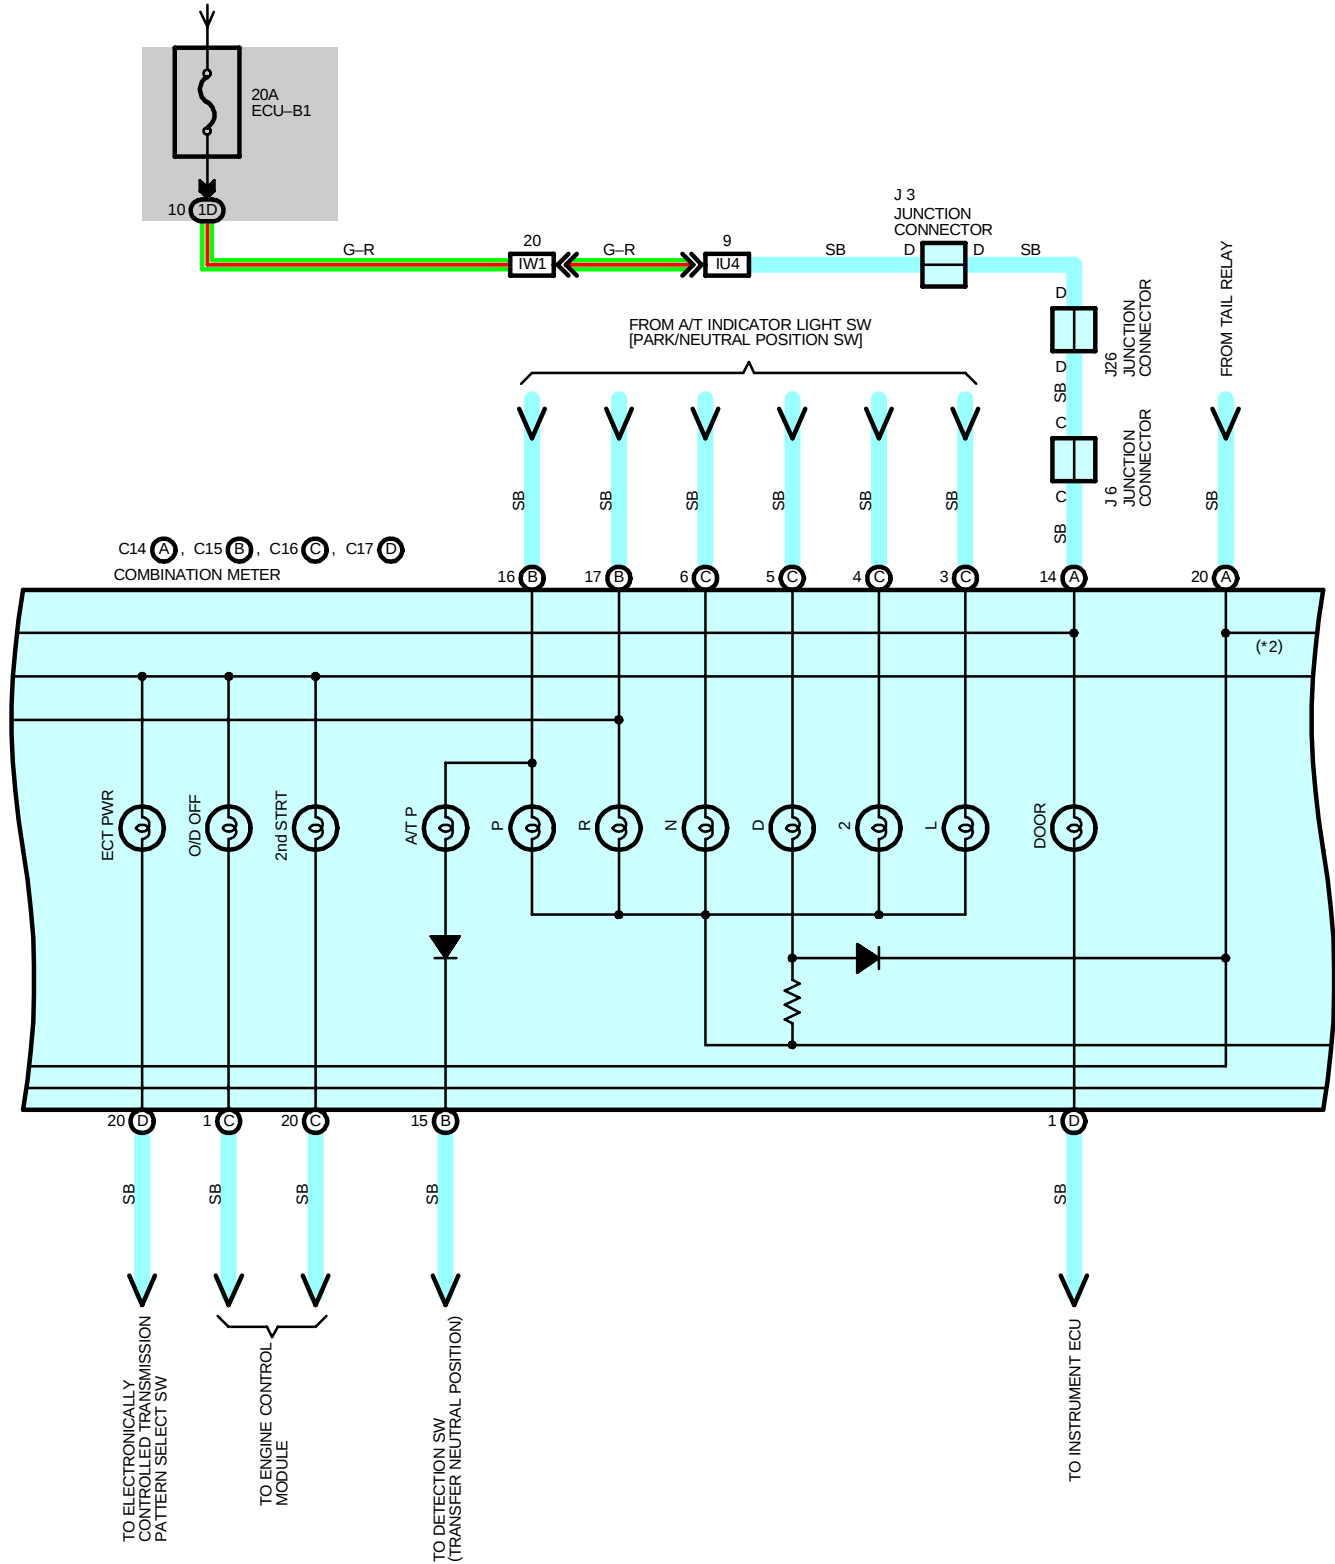

COMBINATION METER

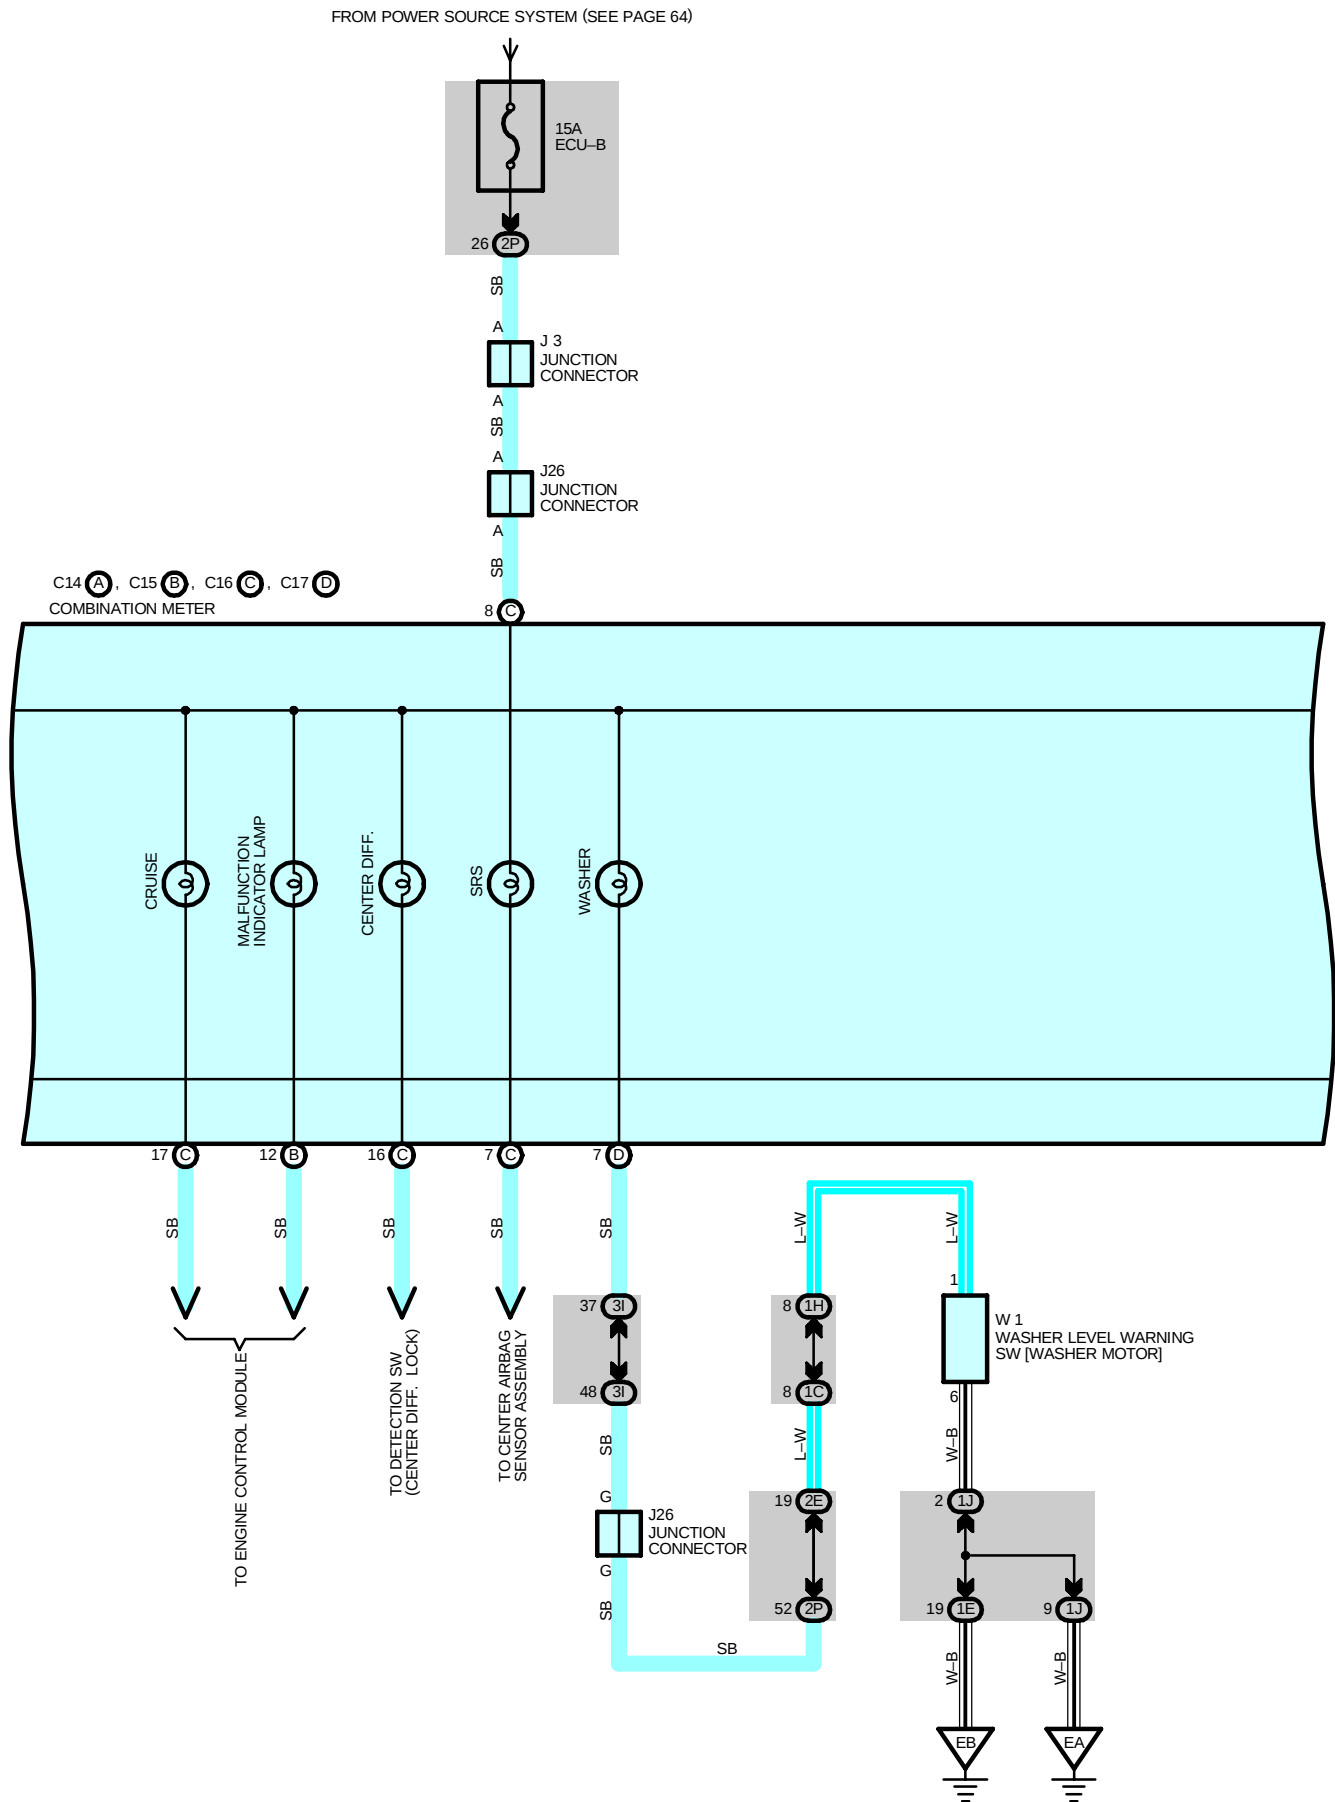

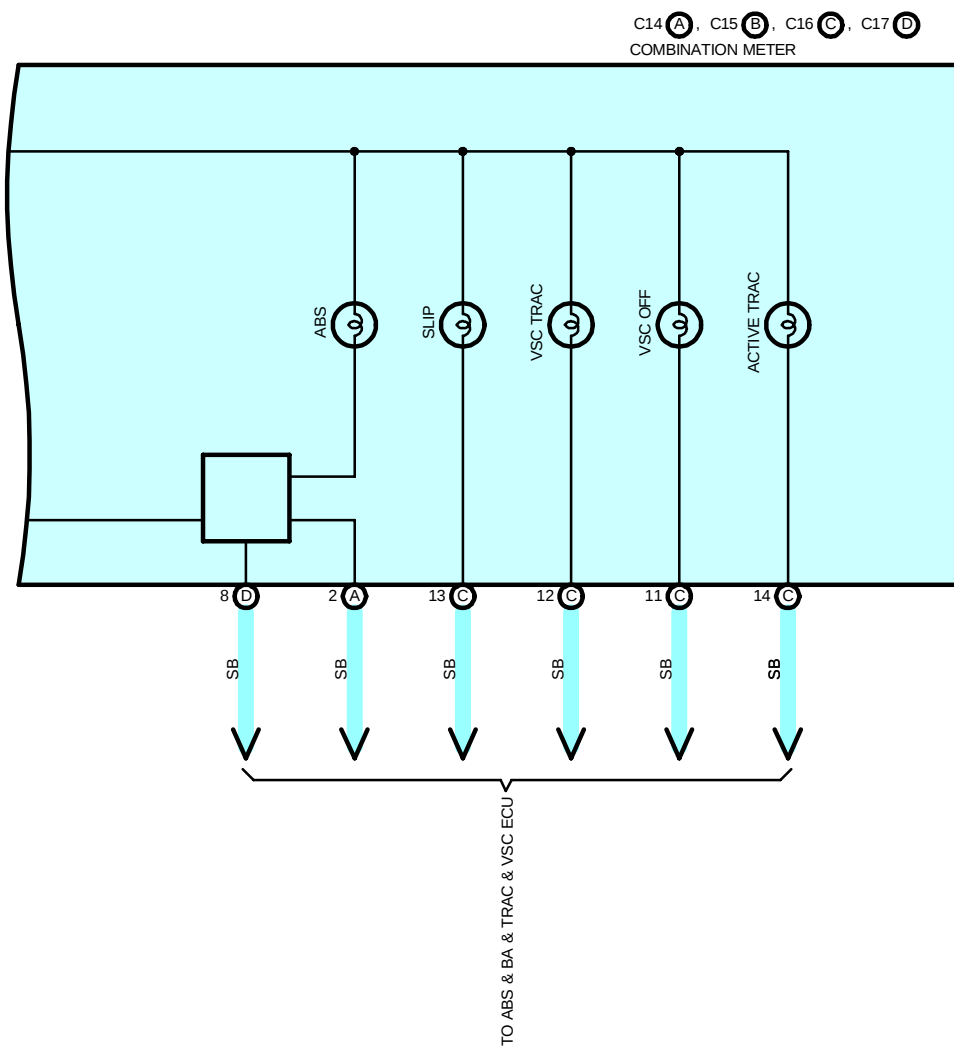

COMBINATION METER

SERVICE HINTS

A46 BRAKE FLUID LEVEL WARNING SW [ABS & BA & TRAC & VSC ACTUATOR]

1-2 : Closed with float down

P8 PARKING BRAKE SW

1-GROUND : Closed with parking brake lever pulled up

C14 (A), C15 (B), C16 (C), C17 (D) COMBINATION METER

(A) 14, (C) 8-GROUND : Always approx. **12** volts

(A) 15, (B) 4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

(B) 6, (D) 2-GROUND : Always continuity

W2 WATER TEMP. SENDER

1-GROUND : Approx. **160–240 Ω (50°C, 122°F)**

: Approx. **17.1–21.2 Ω (120°C, 248°F)**

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A46	38	J6	41	J27	41
C14	40	J14	41	J45	41
C15	40	J17	41	O2	39
C16	40	J18	41	P8	43
C17	40	J20	41	V2	39
F13	42	J23	41	W1	39
J3	41	J26	41	W2	39

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1D		
1E		
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2J		
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3C	32	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	46	Engine Wire and Transmission Wire (On the Transmission)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG2		
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU3		
IU4		
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BC1	56	Floor Wire and Fuel Tank Wire (Near the Fuel Tank)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		
EC	46	Rear Bank of Right Cylinder Head
IF	48	Set Bolt of Cowl Side J/B LH
IG		

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I11	50	Dash Wire	B6	58	Floor No.2 Wire