




REAR AIR CONDITIONING

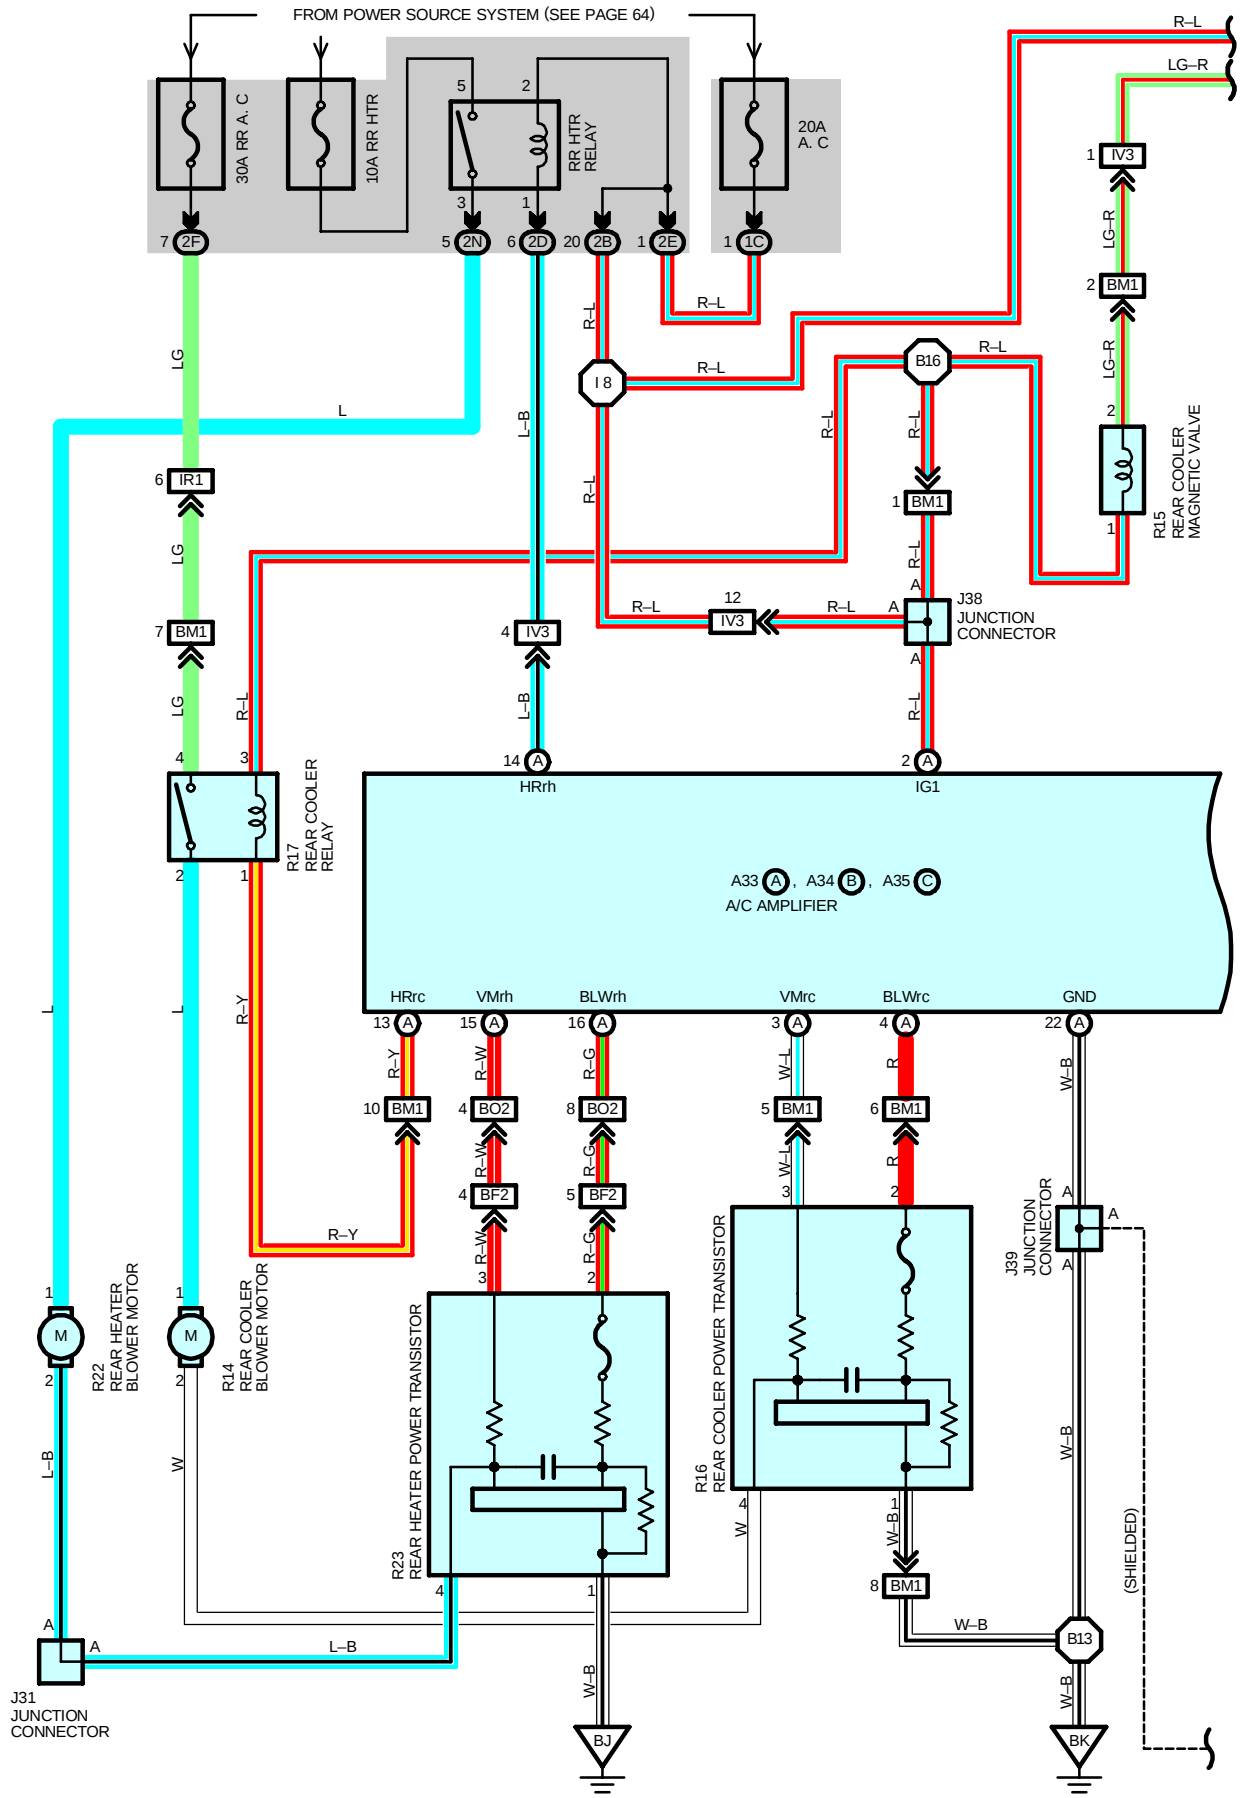

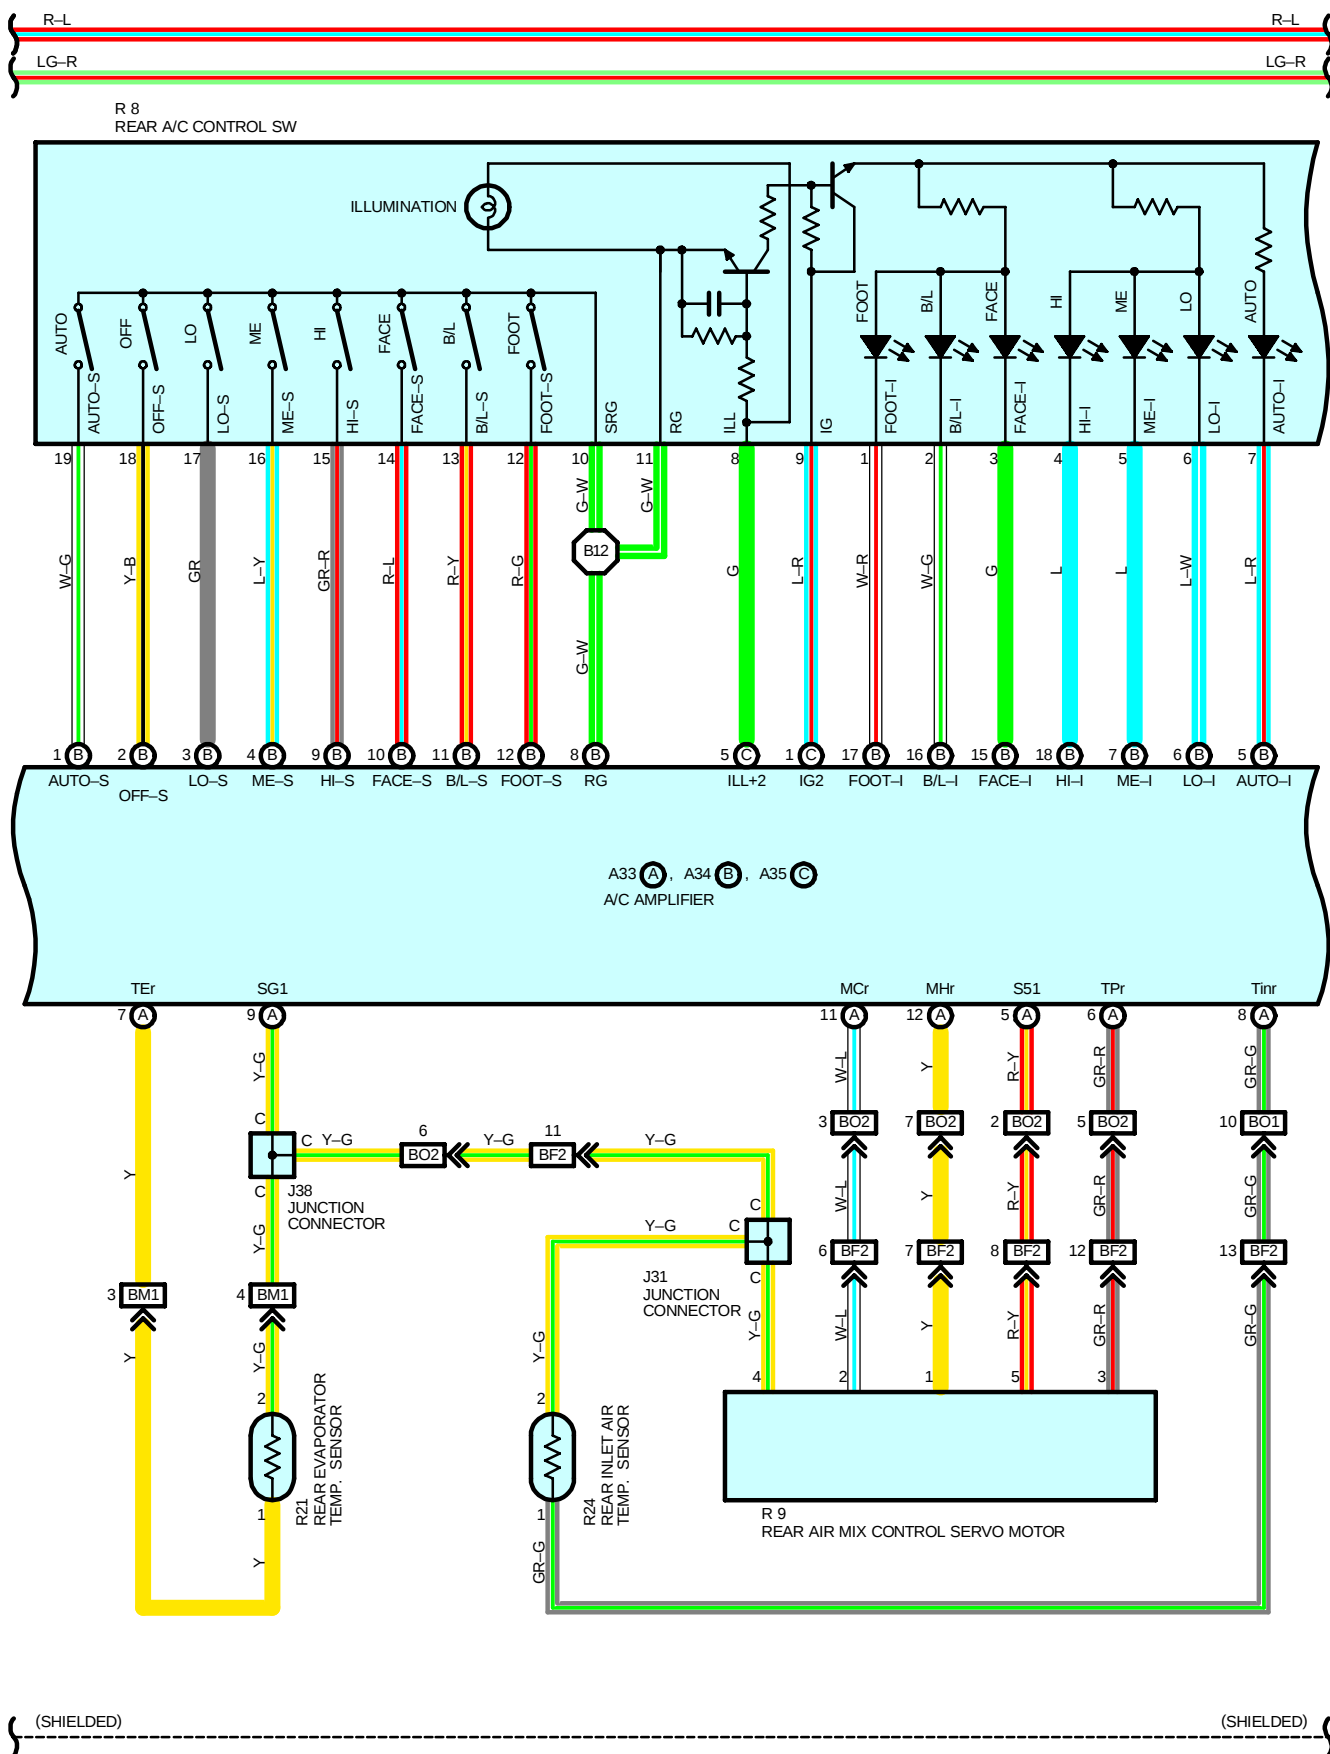

REAR AIR CONDITIONING

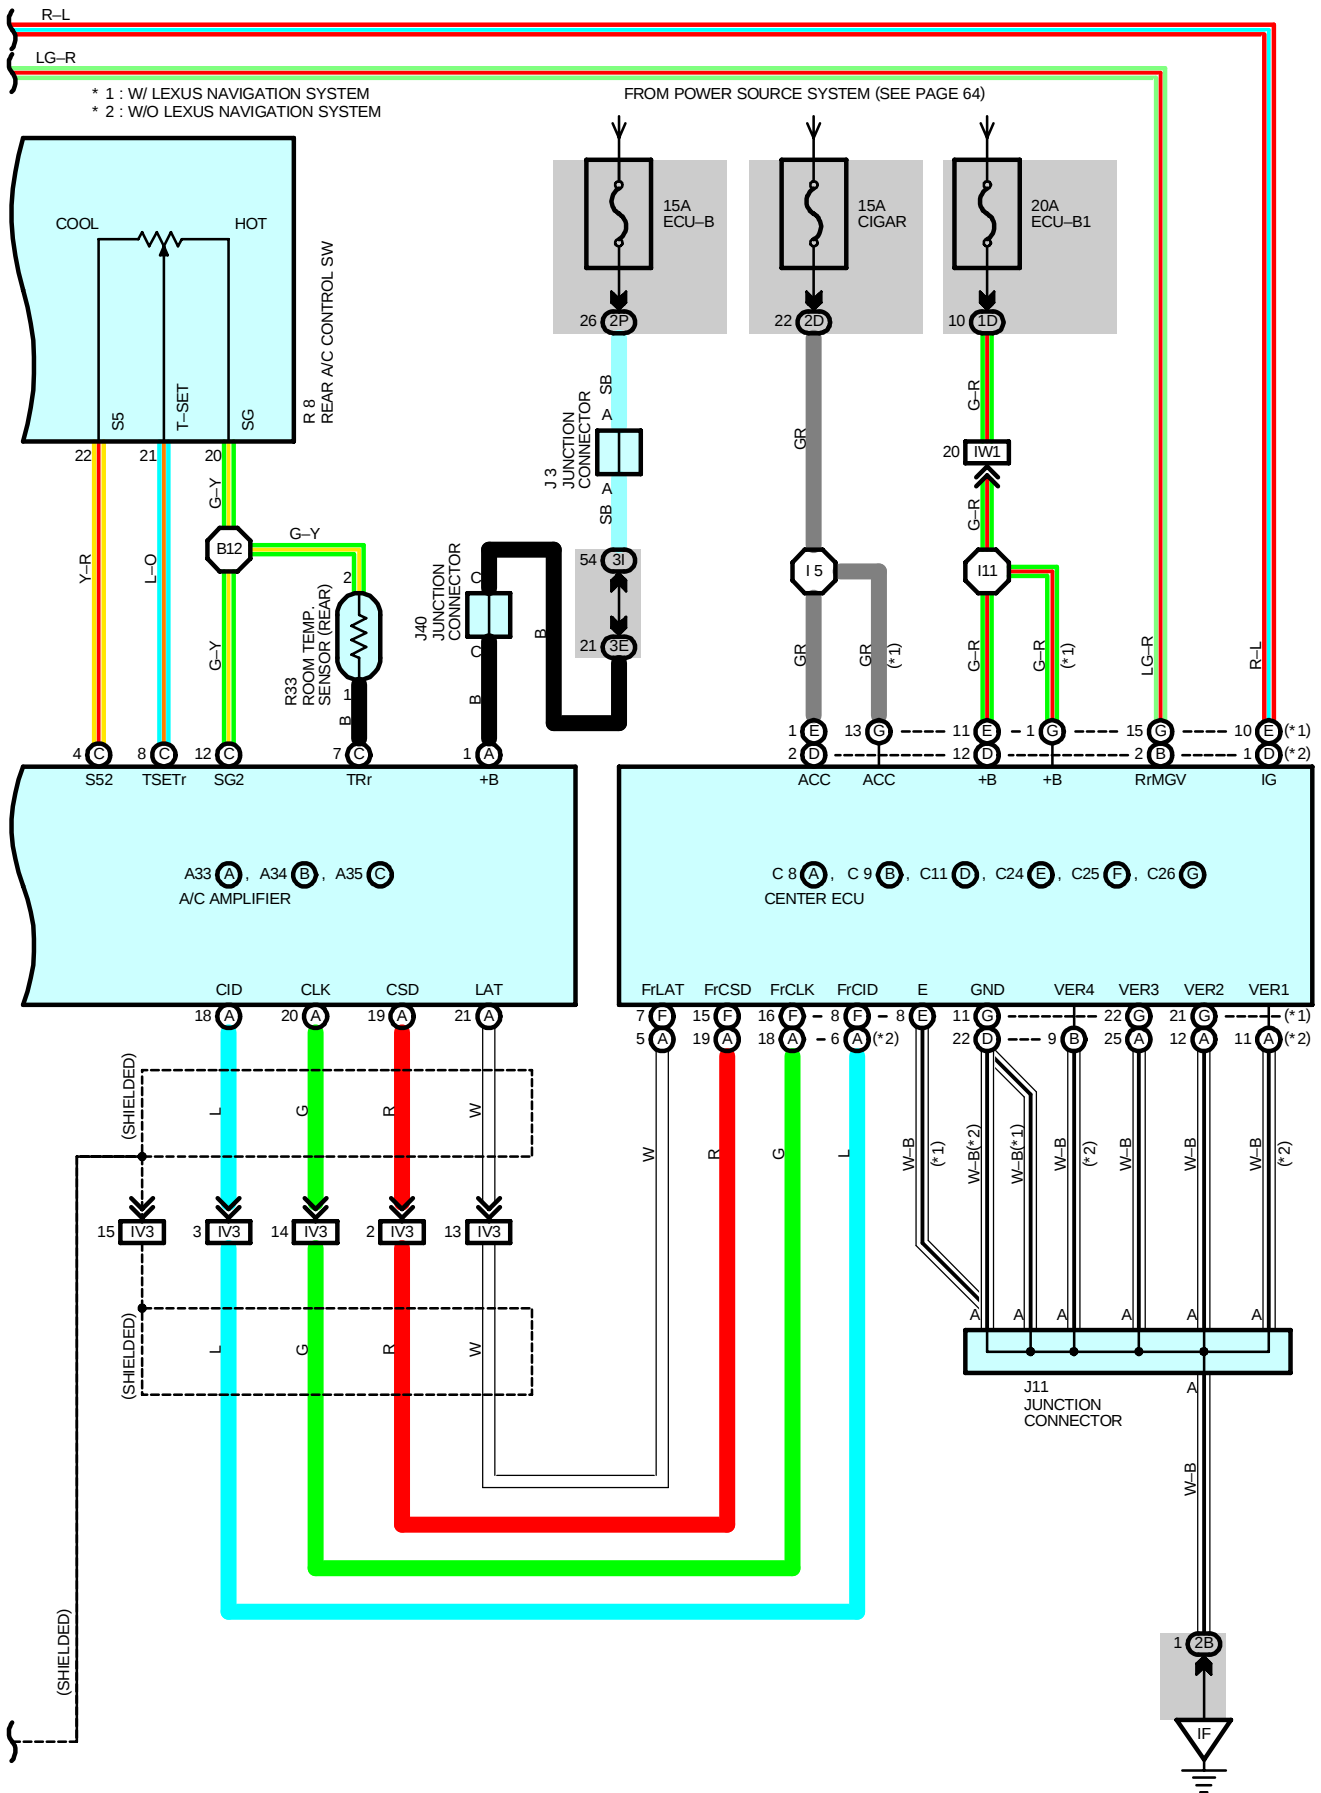

SYSTEM OUTLINE

1. COOLER AND HEATER BLOWER OPERATION

* Manual operation

When the blower control SW in the rear A/C control SW is set to any blower speed, a signal is sent to the A/C amplifier. The A/C amplifier controls the power transistor and operates the rear cooler blower motor and rear heater blower motor at the set speed.

* Auto operation

When the auto SW in the rear A/C control SW is operated, a signal is sent to the A/C amplifier. The A/C amplifier controls the power transistor according to the signals from respective sensors, and operates the rear cooler blower motor and rear heater blower motor.

2. AIR MIX CONTROL SERVO MOTOR CONTROL

When the temperature control lever in the rear A/C control SW is operated, a signal is sent to the A/C amplifier. The A/C amplifier controls the rear air mix control servo motor to operate the damper until it reaches the temperature set by the temperature control lever.

3. AIR CONDITIONING OPERATION

The cooler and heater operation can be switched by the mode select SW in the rear A/C control SW.

SERVICE HINTS

A33 A/C AMPLIFIER

1-GROUND : Always approx. **12** volts

2-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

22-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A33	A	42	J3	41		R15	43	
A34	B	42	J11	41		R16	43	
A35	C	42	J31	42		R17	43	
C8	A	40	J38	42		R21	43	
C9	B	40	J39	42		R22	43	
C11	D	40	J40	42		R23	43	
C24	B	40	R8	43		R24	43	
C25	F	40	R9	43		R33	43	
C26	G	40	R14	43				

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1D		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2E	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2F		
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

REAR AIR CONDITIONING



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IR1	52	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IV3	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
BF2	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BM1	58	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BO1	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO2		



: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
BJ	56	Under the Driver's Seat
BK	56	Front Side Under the Front Passenger's Seat



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	50	Dash Wire	B12	58	Roof Wire
I8			B13	58	Floor No.2 Wire
I11			B16	58	A/C Sub Wire