


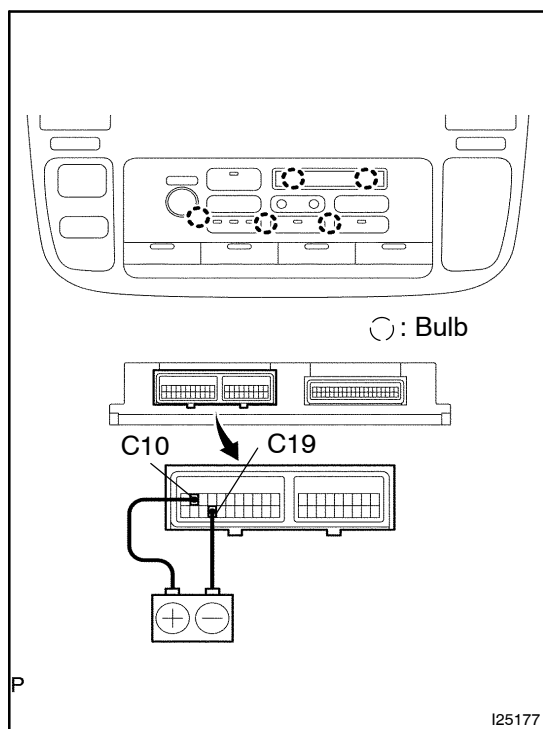

INSPECTION


1. w/o LEXUS navigation system:

INSPECT ILLUMINATION OPERATION

- (a) Connect the positive (+) lead from the battery to terminal C10 and negative (-) lead to terminal C19 then check that the indicators' illuminate.

If operation is not as specified, check the faulty bulb.


- (b) Remove the bulb (See page [AC-103](#)).

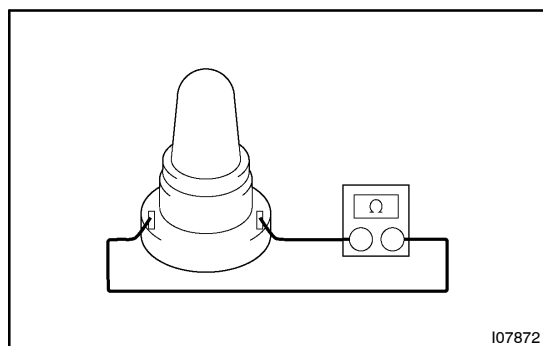

- (c) Using the tester as shown in the illustration, test the continuity.

If continuity exists, replace the heater control.

If no continuity exists, replace the bulb.

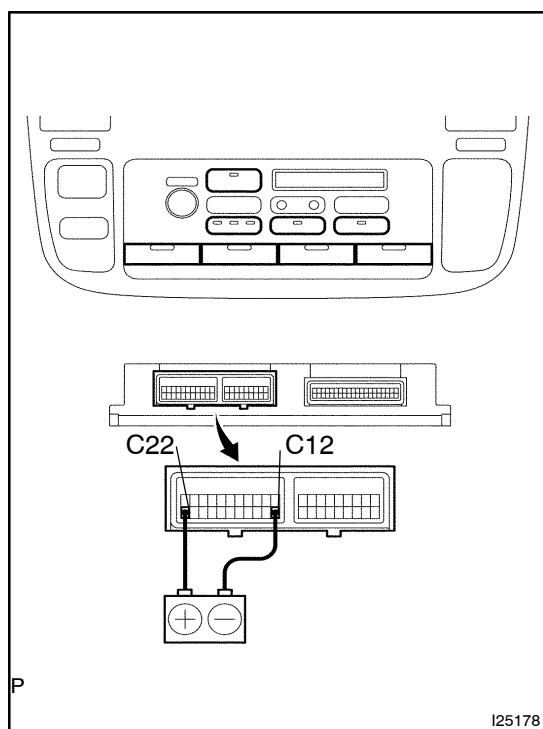


2. w/o LEXUS navigation system:

INSPECT INDICATORS OPERATION

- (a) Connect the positive (+) lead from the battery to terminal C22 and negative (-) lead to terminal C12.
- (b) Check that the indicators come on while operate the switches.

If operation is not as specified, replace the heater control.

3. INSPECT A/C CONTROL ASSEMBLY CIRCUIT (See page [DI-1525](#))

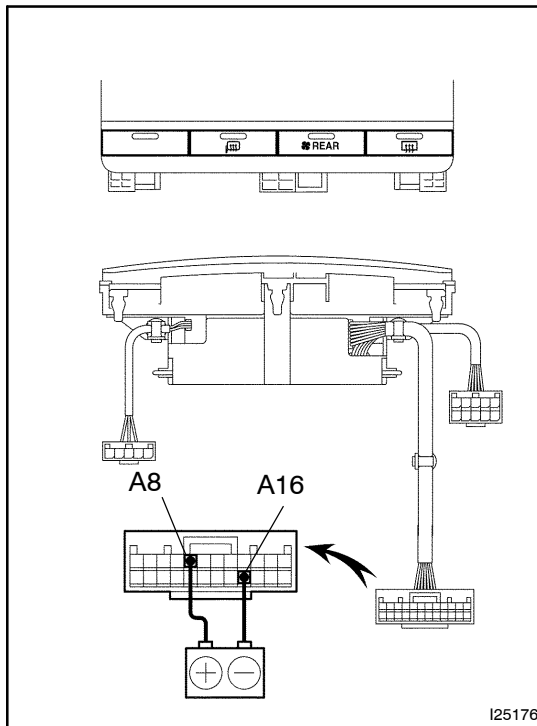**4. w/ LEXUS navigation system:****INSPECT INDICATORS OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal A8 and negative (-) lead to terminal A16.
- (b) Check that the indicators come on while operating the switches.

If operation is not as specified, replace the heater control.

5. INSPECT A/C CONTROL ASSEMBLY CIRCUIT
(See page [DI-1525](#))