


AIR CONDITIONING AMPLIFIER (for Rear A/C) INSPECTION

AC22D-04

1. REMOVE REAR DOOR SCUFF PLATE RH
2. REMOVE REAR FLOOR MAT SUPPORT PLATE
3. REMOVE QUARTER TRIM PANEL RH

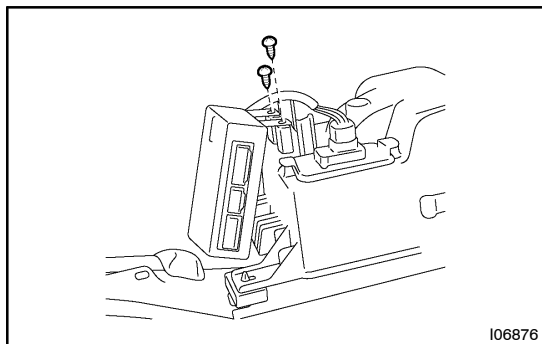

4. REMOVE A/C AMPLIFIER
 - (a) Disconnect the connectors.
 - (b) Remove the 2 screws and the A/C amplifier.
5. INSPECT REAR A/C AMPLIFIER CIRCUIT
(See page [DI-1525](#))