



AIR REFINER FILTER REPLACEMENT

1. REMOVE GLOVE COMPARTMENT DOOR
2. REMOVE LOWER NO. 2 FINISH PANEL

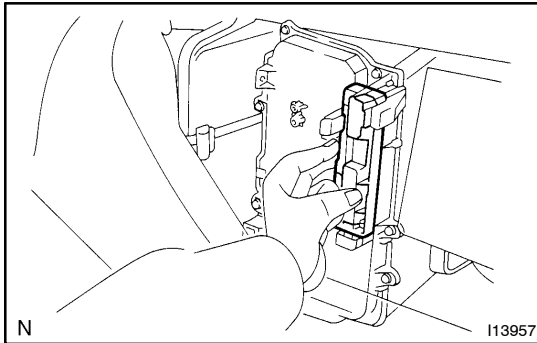


3. REMOVE AIR REFINER FILTER

- (a) Release the 2 claws and remove the filter cover.

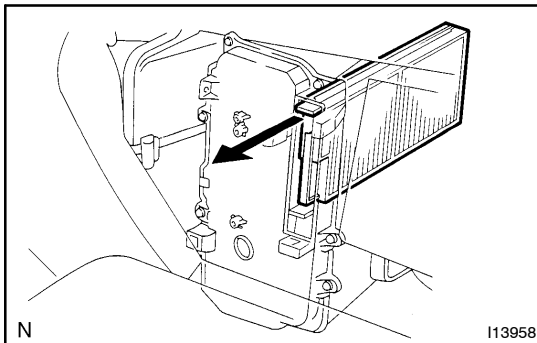

- (b) Pull out the air refiner filter (Upper side).

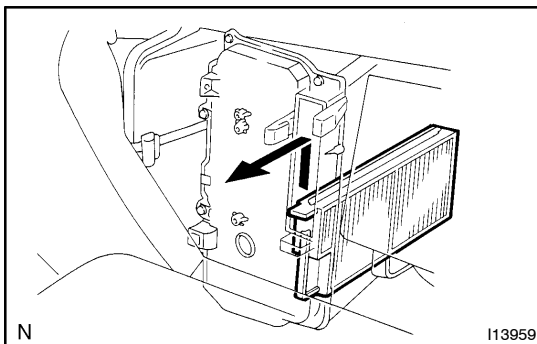

- (c) Pull out the filter upward, pull out the air refiner filter (Lower side).

4. INSTALL AIR REFINER FILTER

- (a) Install the air refiner filter (Lower side).
- (b) Install the air refiner filter (Upper side).
- (c) Install the filter cover.

5. INSTALL LOWER NO. 2 FINISH PANEL

6. INSTALL GLOVE COMPARTMENT DOOR