


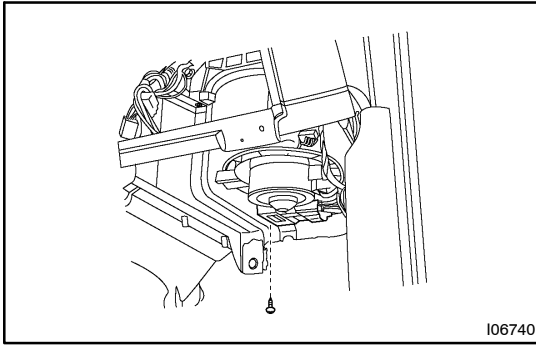


BLOWER MOTOR CONTROL RELAY INSPECTION

AC1LH-04

1. REMOVE BLOWER MOTOR CONTROL RELAY

- (a) Disconnect the connectors.
- (b) Remove the screw and the blower motor control relay.

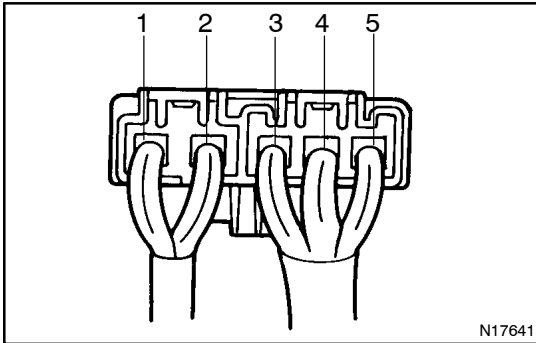

2. INSPECT BLOWER MOTOR CONTROL RELAY

Connect the connector to the blower motor control relay and inspect the wire harness side connector from the back side as shown in the illustration.

Test condition:

- Turn ignition switch to ON

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
2 – Ground	Blower speed control switch at "LO" position	Approx. 3.5 V
	Blower speed control switch at "M1" position	Approx. 2.2 V
3 – Ground	Operate blower motor	Battery positive voltage
	Blower speed control switch at "OFF" position	No voltage
4 – 5	Blower speed control switch at "LO" position	Approx. 3.6 V
	Blower speed control switch at "M2" position	Approx. 8.3 V
	Blower speed control switch at "HI" position	Approx. 13.0 V

If circuit is not as specified, replace the relay.