


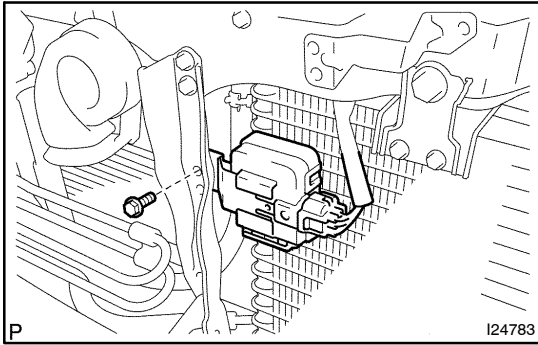

SMOG VENTILATION SENSOR INSPECTION

AC1LR-03

1. REMOVE SMOG VENTILATION SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and the smog ventilation sensor.

2. INSPECT SMOG VENTILATION SENSOR

(See page [DI-1546](#))

3. INSTALL SMOG VENTILATION SENSOR

- (a) Install the smog ventilation sensor with the bolt.
- (b) Connect the connector.