


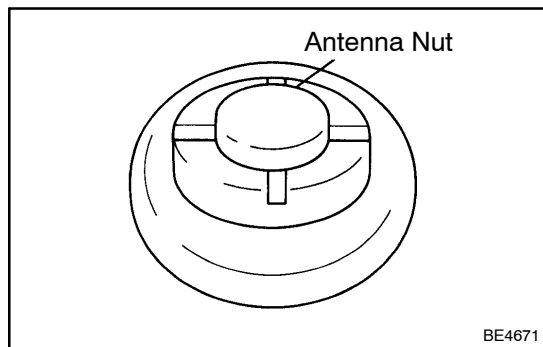


REPLACEMENT

1. Auto Antenna Models: REMOVE ANTENNA ROD

HINT:

Perform this operation with the battery negative (-) cable connected to the battery terminal.

- (a) Remove the antenna nut.
- (b) Press the radio switch "ON" position.
- (c) Press the antenna switch "UP". (1/2 or more for antenna rod)

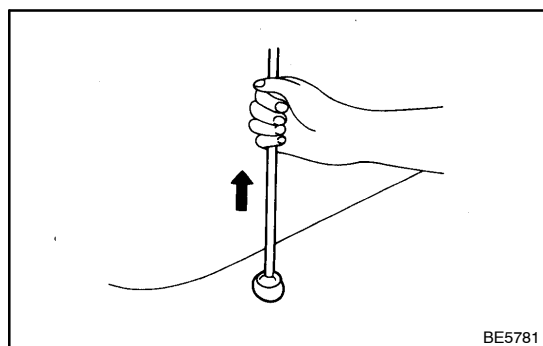


- (d) Hold the rod by hand and press the radio switch "OFF".
- (e) Press the radio switch "ON" and the antenna switch "UP" again.
- (f) Remove antenna rod.

HINT:

The rod can be removed from the motor antenna by fully extending it.

NOTICE:

To prevent the body damage, hold the rod when removing it from the motor antenna.

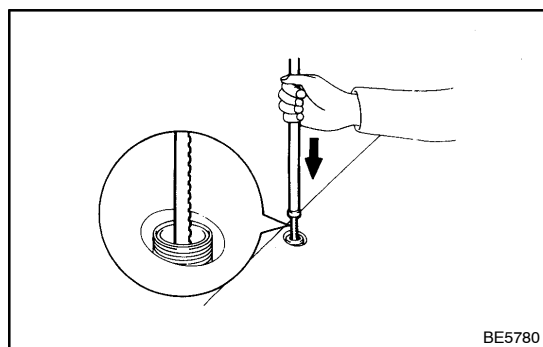

2. Auto Antenna Models: INSTALL ANTENNA ROD

- (a) Insert the cable of the rod until it reaches the bottom.

HINT:

- When inserting the cable, the teeth on the cable must face toward the rear of the vehicle.
- Insert the antenna approx. 350 mm.

- (b) Radio switch to "OFF".

HINT:

- If the cable cannot be wound, twist it as shown in the illustration.
 - Even if the rod does not retract fully, install the antenna nut and inspect the antenna rod operation. It will finally retract fully.
- (c) Inspect the antenna rod operation by pushing the radio wave band select buttons.

