



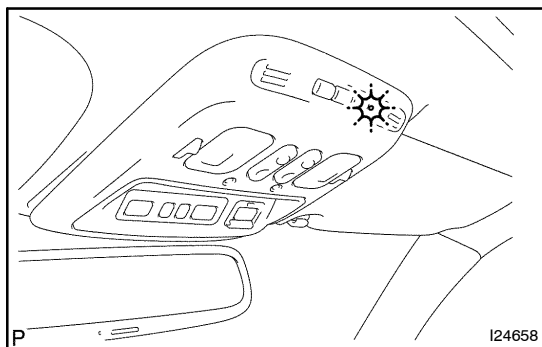

INSPECTION

1. INSPECT GARAGE DOOR OPENER SWITCH

Press the switch and check that each LED (red) comes on. Even if only one switch does not come on, replace it.

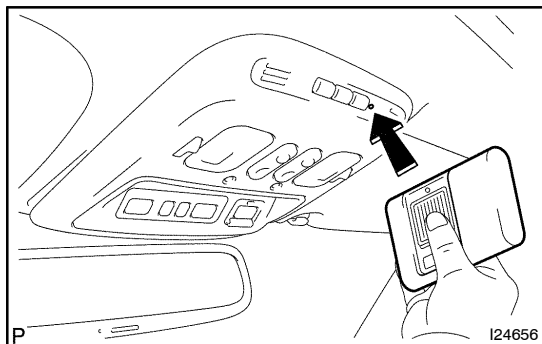


2. INSPECT GARAGE DOOR OPENER REGISTRATION AND TRANSMITTING

HINT:

Use the home link tester made by KENT MORE for this test. As it is necessary to record the code for the hand held transmitter for registration, customer's code will be erased. When the inspection completes, please register the customer's code again.

- (a) Check that the code of hand held transmitter for inspection can be recorded (See page [BE-217](#)).

If the code cannot be registered, replace the garage door opener.

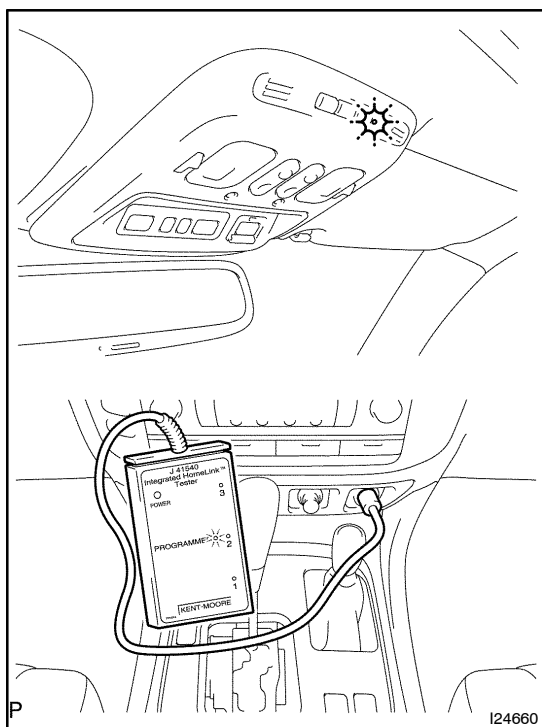

- (b) Press the switch which an inspection code has been registered for, and check that LED (green) of the home link tester comes on.

If the LED (green) does not come on, replace the garage door opener.