


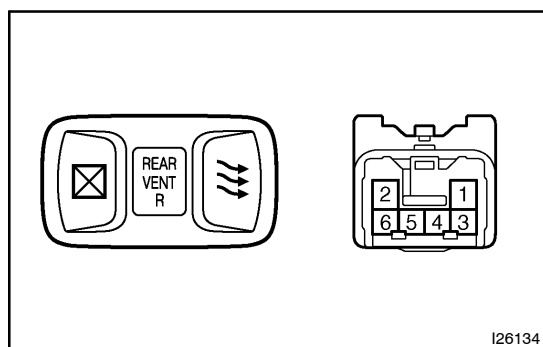


I26134

INSPECTION

1. INSPECT POWER QUARTER WINDOW SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
CLOSE	3 - 4 5 - 6	Continuity
OFF	-	Continuity
OPEN	3 - 6 4 - 5	Continuity
Illumination Circuit	1 - 2	Continuity

If continuity is not as specified, replace the switch.

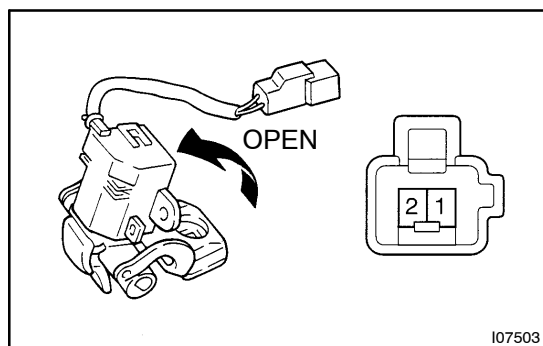

I07503


2. Left side:

INSPECT POWER VENT WINDOW MOTOR OPERATION

- (a) Connect the battery positive (+) lead to terminal 1 and the battery negative (-) lead to terminal 2, and check that the window link moves to OPEN position.

- (b) Remove the polarity and check that the window link moves to CLOSE position.

If operation is not as specified, replace the window motor.

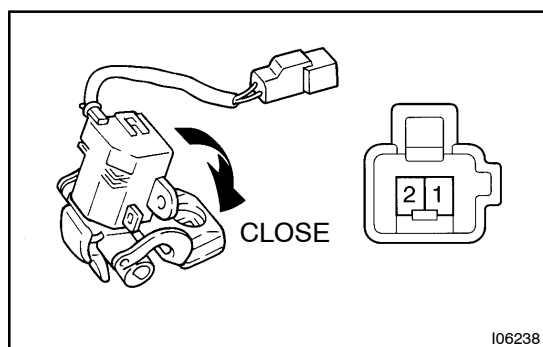


I06238


3. Right side:

INSPECT POWER VENT WINDOW MOTOR OPERATION

- (a) Connect the battery positive (+) lead to terminal 2 and the battery negative (-) lead to terminal 1, and check that the window link moves to OPEN position.

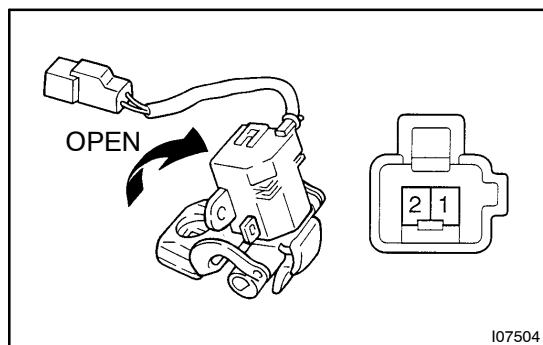

I07504

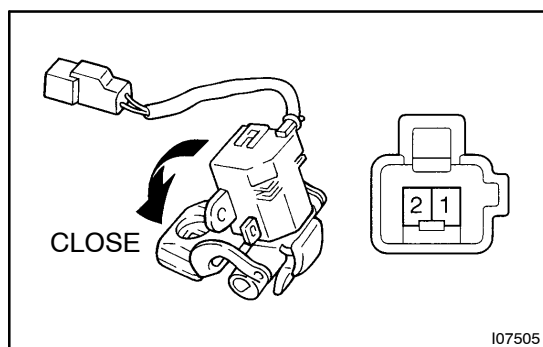

- (b) Remove the polarity and check that the window link moves to CLOSE position.