


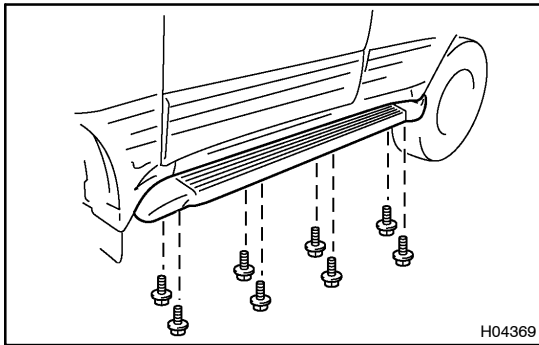


REMOVAL

1. w/ Except Full Cover Type:

REMOVE SIDE STEP ASSEMBLY


- Remove the 8 bolts and the side step assembly.
- Use the same manner described above to the other side.

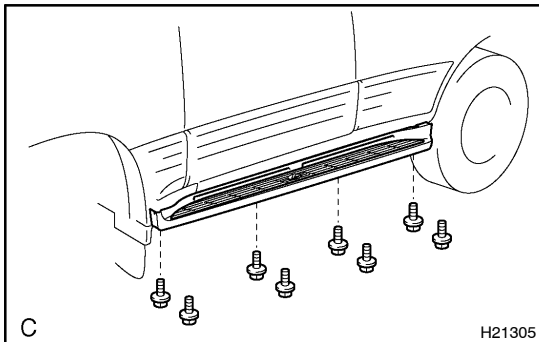

2. w/ Running Board Lights:

REMOVE RUNNING BOARD LIGHTS ASSEMBLY

- Remove the 8 bolts, disconnect the connector and the running board lights assembly.
- Use the same manner described above to the other side.

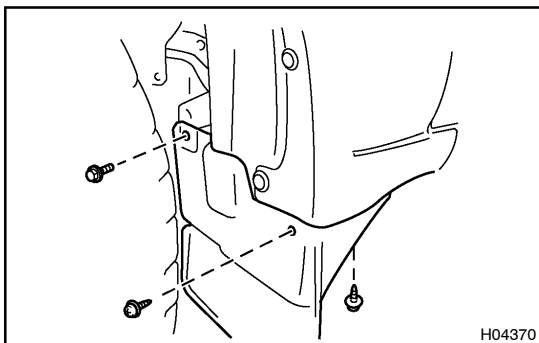


3. REMOVE FRONT MUDGUARD

- Remove the 2 screws and the bolt.
- Remove the front mudguard.
- Use the same manner described above to the other side.

4. REMOVE ROCKER PANEL MOULDING

- Remove the 10 screws.
- Remove the rocker panel moulding.
- Use the same manner described above to the other side.

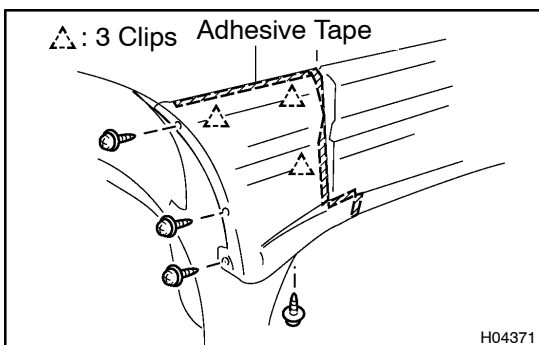

5. REMOVE FRONT FENDER WHEEL OPENING MOULDING

- Remove the 4 screws.
- Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).


NOTICE:

Do not heat the moulding excessively.

- Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
 - Be careful not to damage the body.
- Remove the moulding.

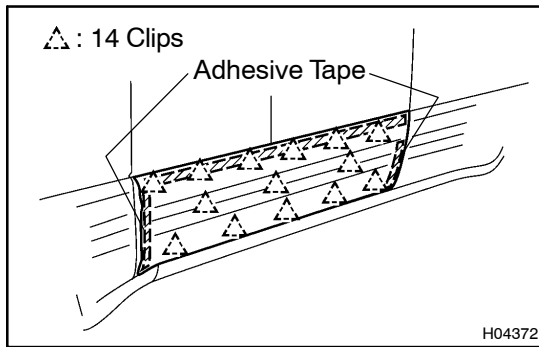

6. REMOVE OUTSIDE FRONT DOOR MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:


Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:


- If reusing the moulding, take care not to damage the moulding.
- Be careful not to damage the body.

- (c) Remove the moulding.

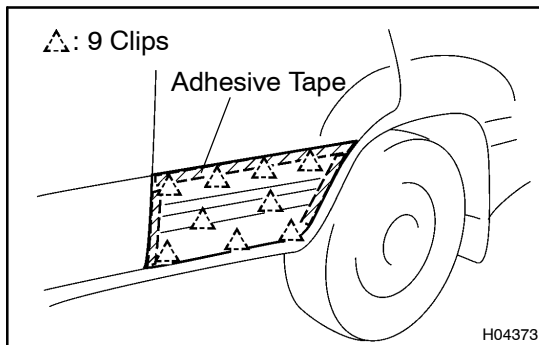


7. REMOVE OUTSIDE REAR DOOR MOULDING

Remove the outside rear door moulding in the same way as the outside front door moulding.

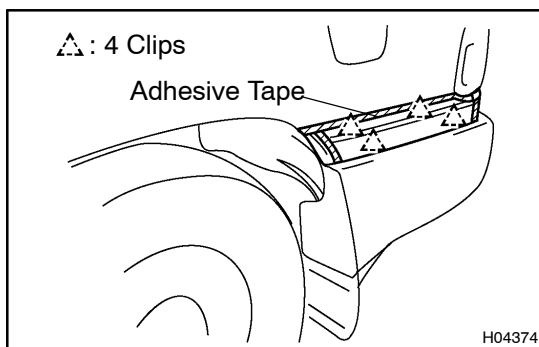

8. REMOVE OUTSIDE QUARTER MOULDING

Remove the outside quarter moulding in the same way as the outside front door moulding.

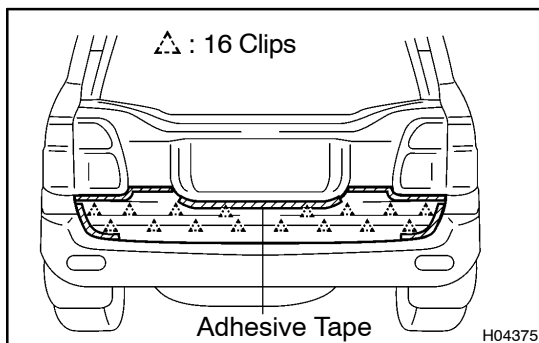

9. REMOVE OUTSIDE BACK DOOR MOULDING

Remove the outside back door moulding in the same way as the outside front door moulding.