


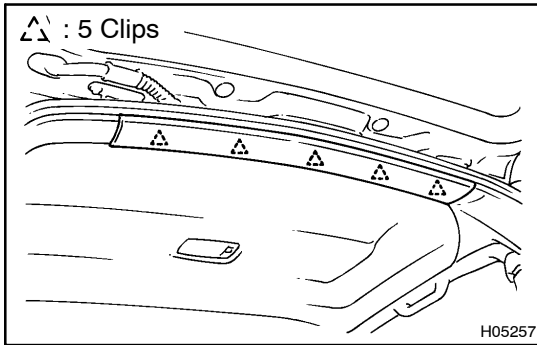

REMOVAL


1. REMOVE ROOF HEADLINING REAR TRIM

Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape up the screwdriver tip before use.

2. REMOVE REAR NO. 2 SEATS (See page [BO-164](#))

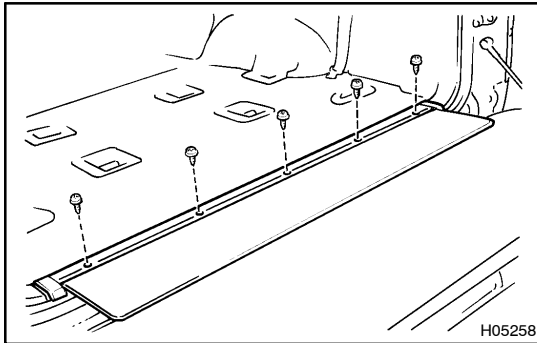


3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.

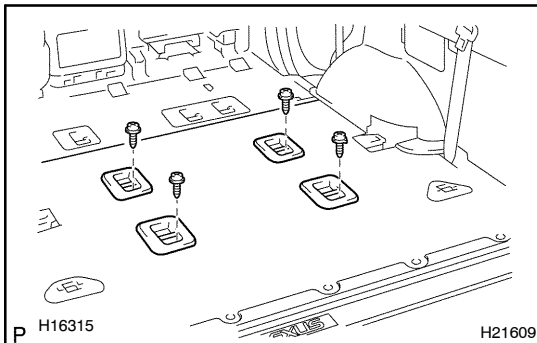

4. REMOVE NO. 3 REAR SEAT PROTECTOR

Remove the 4 screws and the No. 3 rear seat protectors.

5. REMOVE NO. 3 SEAT FRONT BRACKET COVER

Remove the 2 screws and the No. 3 seat front bracket covers.

6. REMOVE NO. 3 SEAT BRACKET SUPPORT COVERS

7. REMOVE REAR FLOOR CARPET

8. REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHOR


Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

9. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHOR

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

10. REMOVE REAR DOOR SCUFF PLATES

11. REMOVE REAR DOOR OPENING TRIMS

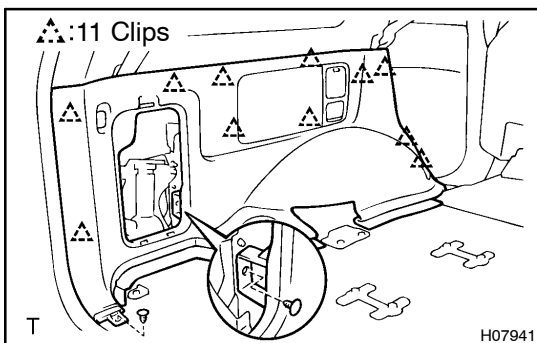

12. REMOVE QUARTER TRIM PANEL


(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.

(c) Remove the quarter trim panel, then disconnect the connector.

13. REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHOR

14. REMOVE REAR NO. 1 SEAT OUTER BELT SHOULDER ANCHOR

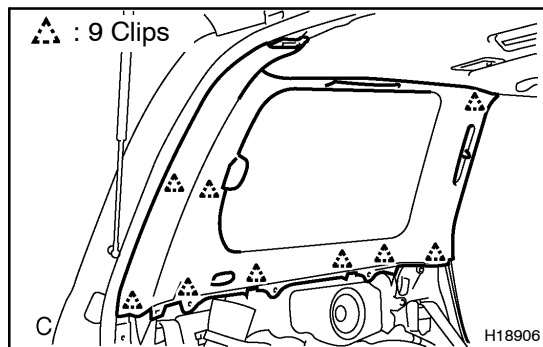**15. REMOVE UPPER ROOF SIDE INNER GARNISH**

- (a) Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and the assist grip.


HINT:

Tape up the screwdriver tip before use.


- (b) Using a clip remover, remove the clip.
 (c) Using a screwdriver, remove the upper roof side inner garnish.

HINT:

Tape up the screwdriver tip before use.

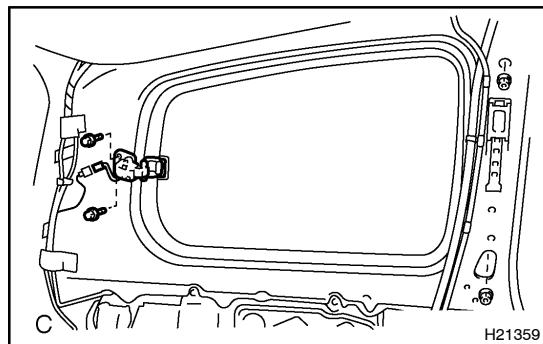**16. REMOVE QUARTER WINDOW GLASS**


- (a) Disconnect the connector.
 (b) Remove the 2 bolts, the 2 nuts and the quarter window glass.

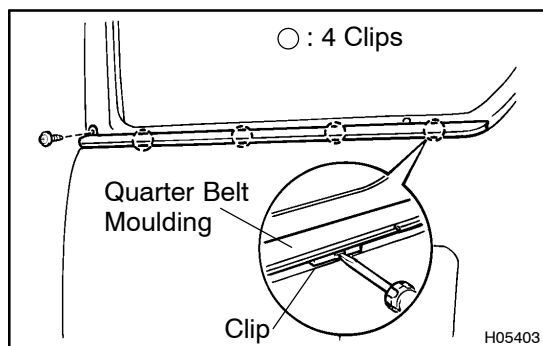17. REMOVE QUARTER WINDOW GLASS WEATHERSTRIP**18. REMOVE QUARTER BELT MOULDING**

- (a) Remove the screw.
 (b) Using a screwdriver, remove the quarter belt moulding.

HINT:

Tape up the screwdriver tip before use.

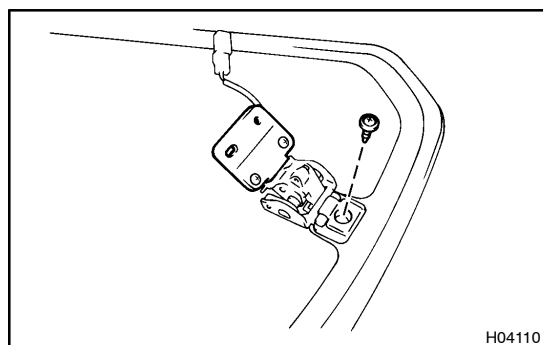**19. REMOVE REAR VENT WINDOW MOTOR**

Remove the screw and the rear vent window motor.

20. REMOVE QUARTER WINDOW LOCK

Remove the screw and the quarter window lock.