


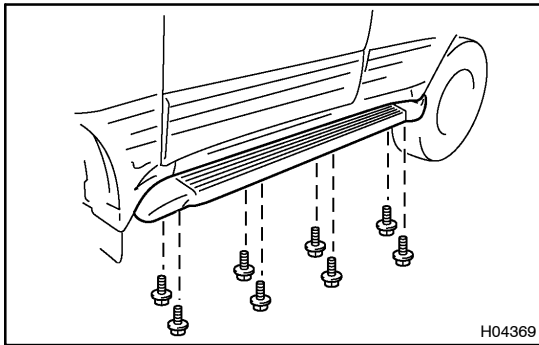


REMOVAL

1. w/ Except Full Cover Type:

REMOVE SIDE STEP ASSEMBLY


- (a) Remove the 8 bolts and the side step assembly.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- (b) Use the same manner described above to the other side.

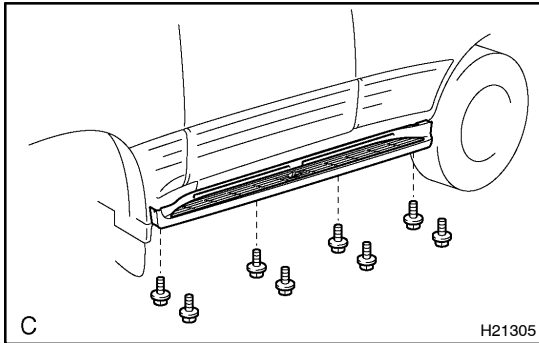

2. w/ Running Board Lights Type:

REMOVE RUNNING BOARD LIGHTS ASSEMBLY

- (a) Remove the 8 bolts, and disconnect the connector and the running board lights assembly.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- (b) Use the same manner described above to the other side.

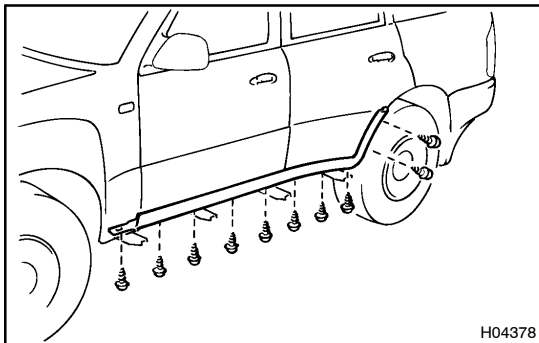

3. REMOVE ROCKER PANEL MOULDING

- (a) Remove the 10 screws.
- (b) Using a screwdriver, remove the rocker panel moulding.

HINT:

Tape up the screwdriver tip before use.

- (c) Use the same manner described above to the other side.