


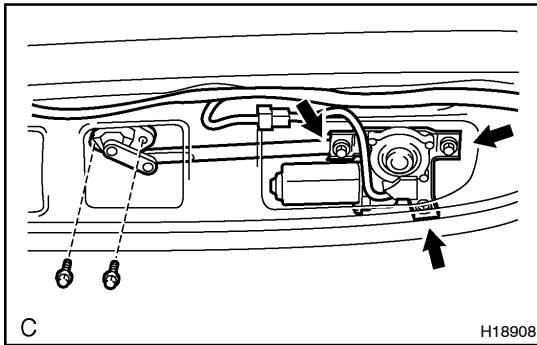

INSTALLATION

1. INSTALL REAR WIPER MOTOR AND LINK ASSEMBLY

- (a) Install the wiper motor and the link assembly with the 5 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (b) Connect the connector.

2. INSTALL BACK DOOR GARNISH

3. INSTALL CENTER BACK DOOR GARNISH


4. INSTALL INSIDE HANDLE BEZEL

5. INSTALL ASSIST GRIP

Install the assist grip with the 2 screws, then install the 2 assist grip plugs.

6. INSTALL REAR WIPER ARM

- (a) Install the grommet.
 (b) Operate the wiper once, and turn the wiper switch OFF.
 (c) Install the wiper arm, and tighten the nut by hand.

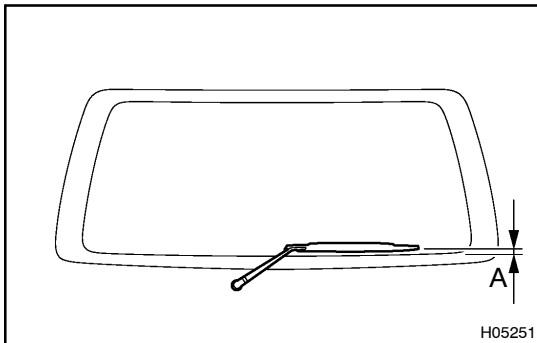

- (d) Adjust the installation position of the wiper arm to the position as shown in the illustration.

A: Approx. 38 ± 10 mm (1.50 ± 0.39 in.)

- (e) Torque the nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (f) Close the cover.