


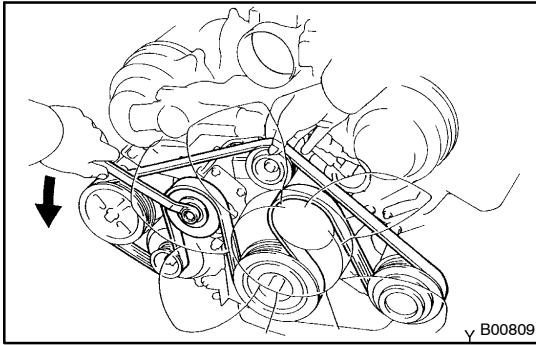

REMOVAL

1. DRAIN ENGINE COOLANT

(See page [CO-2](#))

2. REMOVE GENERATOR DRIVE BELT

Loosen the belt tension by turning the belt tensioner counter-clockwise, and remove the drive belt.

HINT:

The pulley bolt for the belt tensioner has a left – hand thread.


3. REMOVE ENGINE UNDER COVER NO.1

4. REMOVE RADIATOR ASSEMBLY

(See page [CO-17](#))

5. REMOVE PS VANE PUMP PULLEY

(See page [SR-28](#))

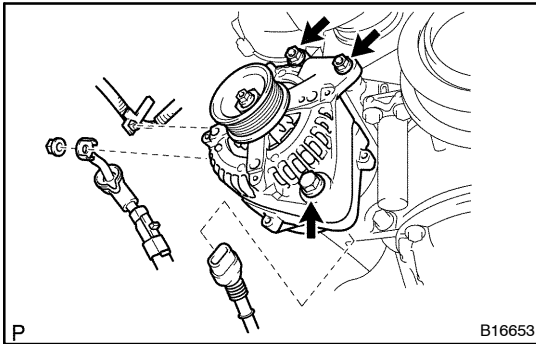

6. REMOVE GENERATOR

- (a) Disconnect the generator connector.
- (b) Remove the rubber cap and nut, and disconnect the generator wire.
- (c) Disconnect the generator wire clamp from the cord clip on the generator.
- (d) Remove the bolt, 2 nuts and generator.