


DTC	C1268 / 68	Transfer L4 Position Switch Circuit
------------	-------------------	--

CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
C1268 / 68	Open or short circuit in transfer L4 position switch.	- Transfer L4 position switch - Transfer L4 position switch circuit

WIRING DIAGRAM

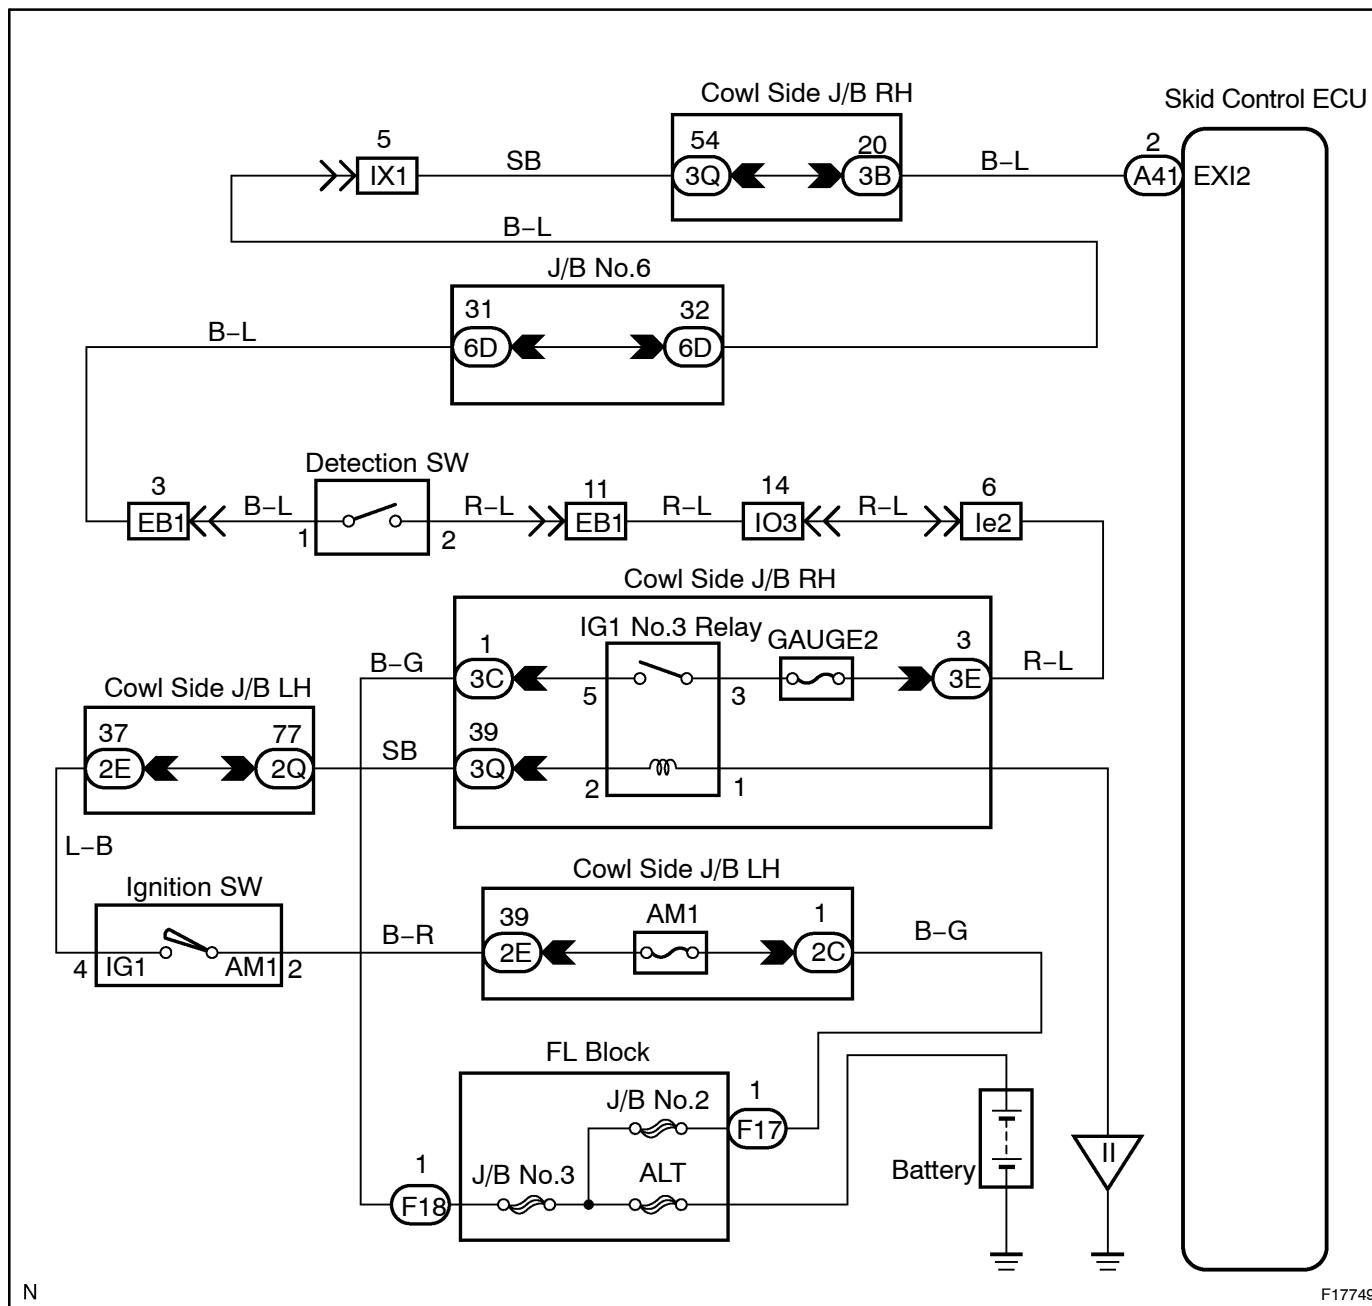

INSPECTION PROCEDURE

1 Check voltage between terminal EXI2 of skid control ECU and body ground.

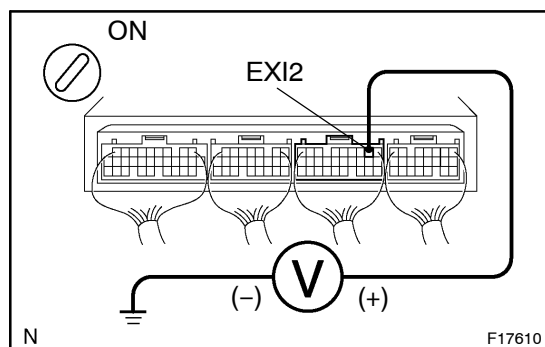

PREPARATION:

Remove the skid control ECU with connectors still connected.

CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminal EXI2 of skid control ECU and body ground when transfer in L4 position.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptoms chart (See page [DI-452](#)).

NG

2 Check transfer L4 position switch (See page [TR-49](#)).

NG

Replace transfer L4 position switch.

OK

3 Check for open or short circuit in harness and connector between transfer L4 position switch and skid control ECU (See page [IN-36](#)).

NG

 
Repair or replace harness or connector.

OK

4	Check for open or short circuit in harness and connector between skid control ECU and ECM (See page IN-36).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.