


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected by the DTC check.


Connecting terminals Ts and E₁ of the DLC1 starts the check.

WIRING DIAGRAM

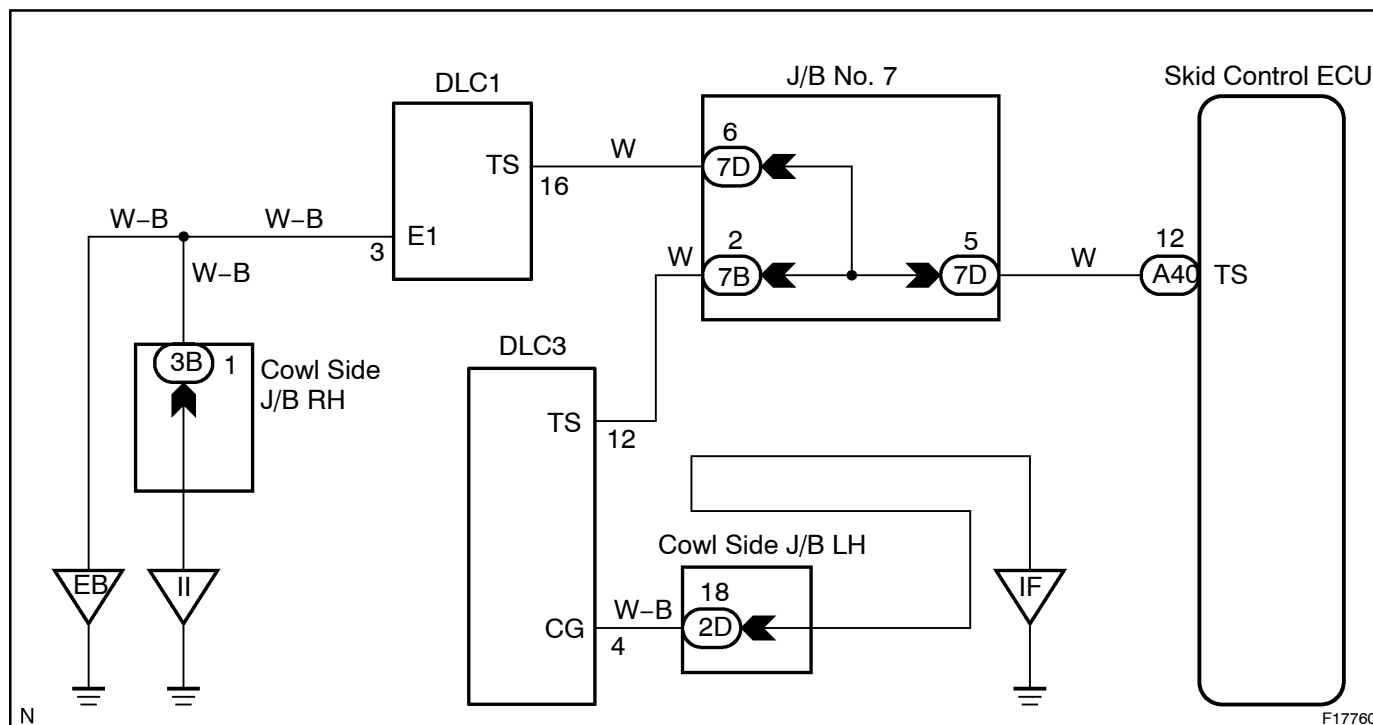

INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and E₁ of DLC1.

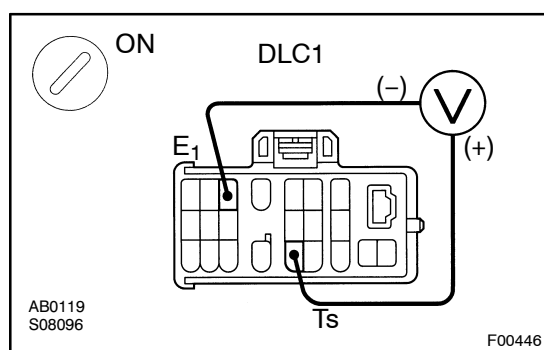

CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminals Ts and E₁ of DLC1.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Ts and E₁ have been connected, the ECU may be defective.

NG

2	IG switch OFF, and check for open and short circuit in harness and connector between skid control ECU and DLC1, DLC1 and body ground (See page IN-36).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.