


Driver seat buckle switch circuit

WIRING DIAGRAM

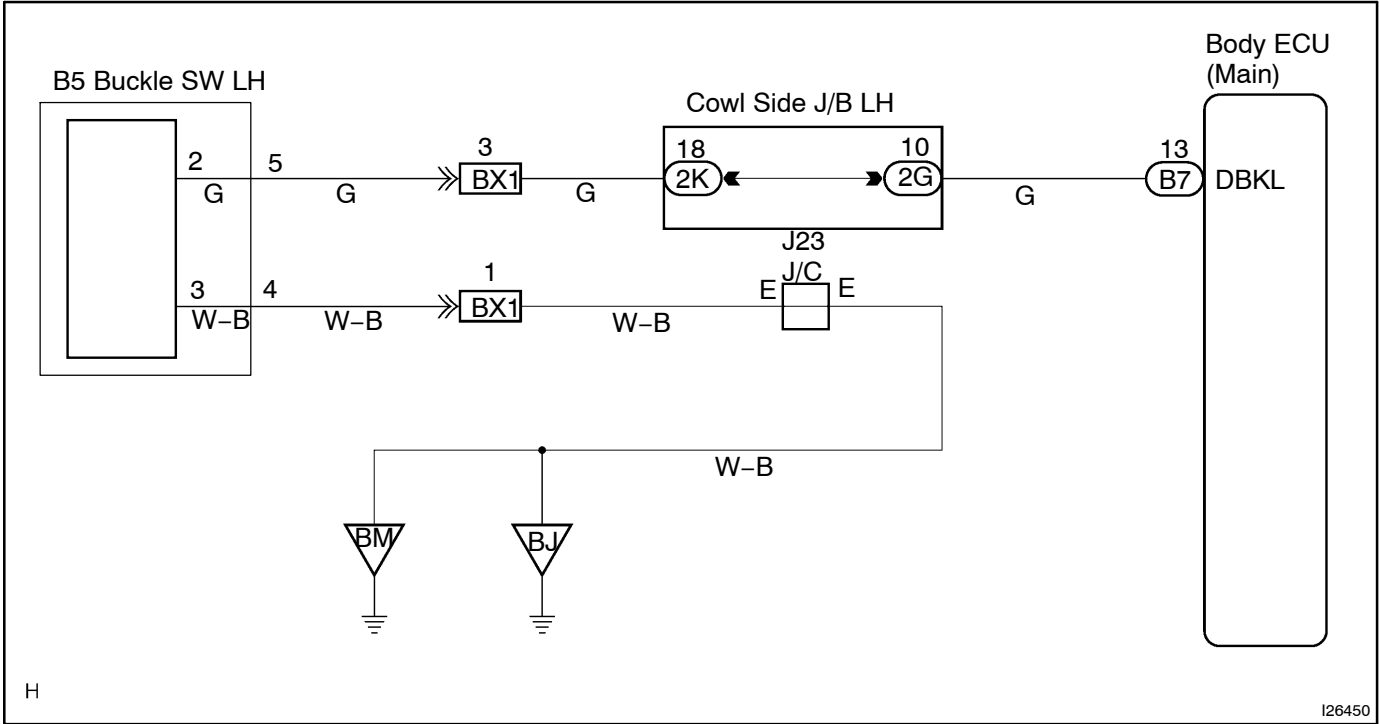

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check driver seat buckle switch using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the driver seat buckle switch operate in DATA LIST (See page [DI-1226](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1242](#)).

NG

2	Check driver seat buckle switch (See page BE-82).
---	--

NG

Replace the driver seat buckle switch.

OK

3	Check wire harness and connector between driver seat buckle switch and Body ECU (Main) (See page IN-36).
---	---

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-1242](#)).