


Park / Neutral position switch circuit

CIRCUIT DESCRIPTION

This circuit sends a signal of the Park/Neutral Position switch (Park or other) to the Body ECU (Main).
HINT:
Refer to the Automatic Transmission section for the PNP switch check (See page [DI-268](#)).

WIRING DIAGRAM

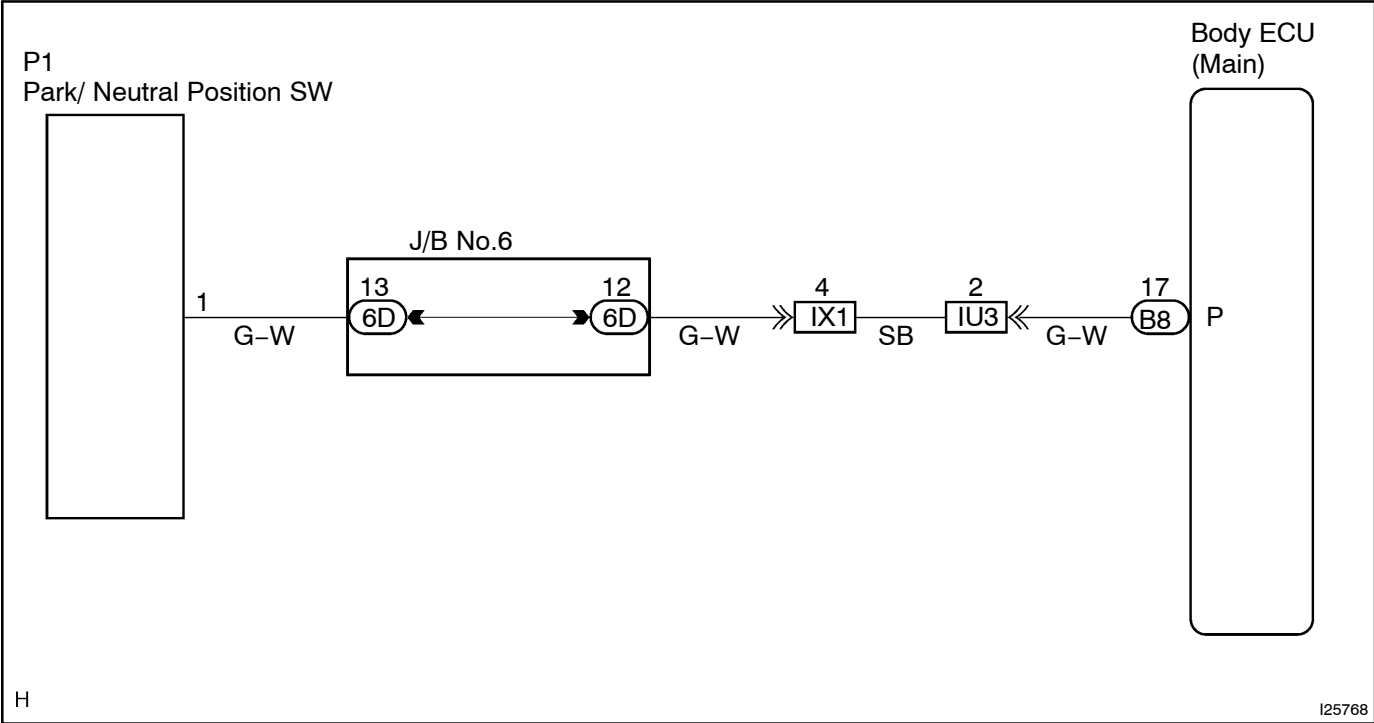

INSPECTION PROCEDURE

1	Check park / Neutral position switch using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the Park / Neutral position switch operate in DATA LIST (See page [DI-1226](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1242](#)).

NG

Repair or replace harness and connector between park/neutral position switch and Body ECU (Main) (See page [IN-36](#)).